



GENUINE PARTS



INSTALLATION INSTRUCTIONS


1. **DESCRIPTION:** Cargo Organizer

2. **APPLICATION:** Armada, QX56


3. **PART NUMBER:** 999C2 2S000

4. **KIT CONTENTS:**

Item	Qty	Description	Part Number
A	1	Pop-up Organizer	999C2 2S000
B	9	Pushpin	
C	1	Installation Instructions Replacement Template	999V2 AW000

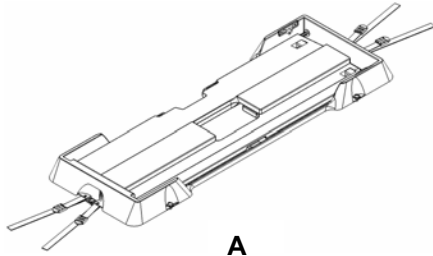

A

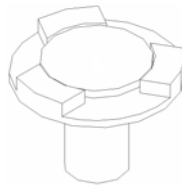

B



C

5. **TOOLS REQUIRED:**

Power Drill, 1/8" Drill Bit, 5/16" Drill Bit, Center Punch, Scissors, Tape

6. **INSTALLATION PRECAUTIONS / NOTES:**

To maintain the luster of your organizer, clean with a cloth as required using standard automotive vinyl, leather and upholstery cleaners or soap and water.

WARNING

- Your cargo organizer is designed to transport normal cargo contents. Flammable or dangerous materials should not be transported in your vehicle at any time. If any corrosive chemicals are spilled in your organizer it should be cleaned as described above.
- When using this organizer avoid sudden starts stops or sharp turns as this may cause contents to come out of the organizer.

CAUTION

- Ensure restraint straps are installed properly and attached through the vehicle tether hooks.
- Do not exceed the recommended load of 20 lb in the organizer
- If not being used the dividers should be in the closed position or the unit should be flipped over to normal vehicle position.
- DEALER- Provide these installation instructions to the customer as reference for proper operation and care of this unit

INSTALLATION INSTRUCTIONS – Pop-up Organizer

7. INSTALLATION OVERVIEW:

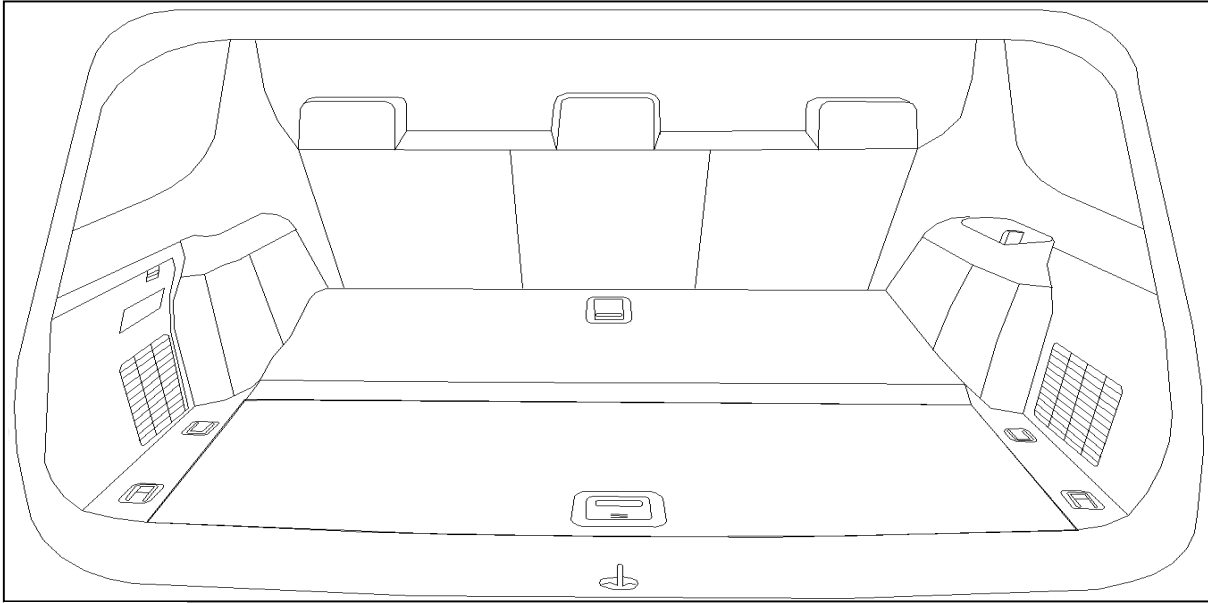


Figure 1

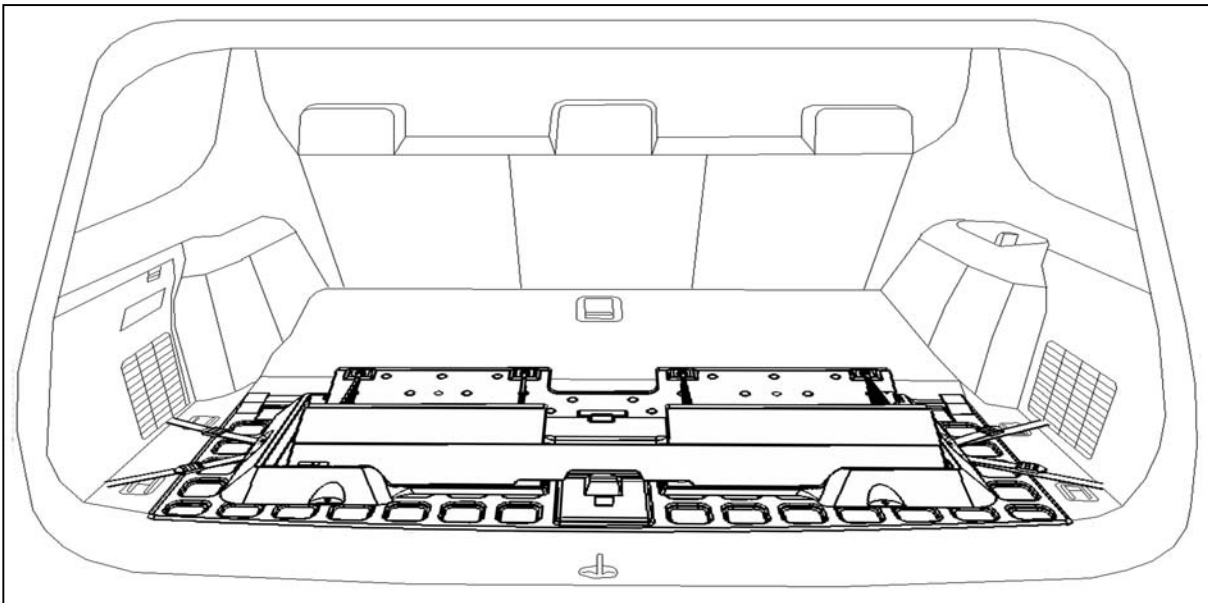


Figure 2

8. CRITICAL STEPS:

The following steps are critical and must be performed EXACTLY as specified

- Installing Cargo Organizer to Bottom Floor
- Ensure that the 3rd row of seats is in the folded position when installing and removing organizer. The 3rd row of seats should be in the upright position while driving.
- To avoid damage to the organizer do not force panels into place. See “Operation” description for correct panel deployment.

9. INSTALLATION PROCEDURE

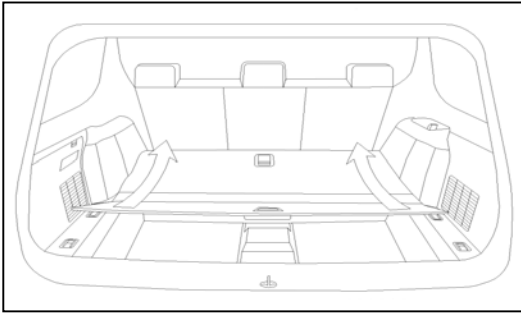


Figure 3

- 1) Remove Load Floor From Vehicle
 - a) Lift load floor handle and remove from vehicle see figure 3
 - b) Turn upside down on a stable flat surface.

Cut-out and tape the Placement Templates on the Load Floor

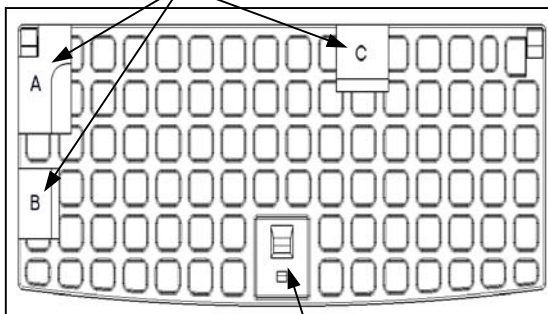


Figure 4

Load Floor Latch

- 2) Installing Cargo Organizer to Load Floor
 - a) Cut out Placement Template (figure 11) from sheet.
 - b) Locate templates A, B and C on load floor and tape in place (see figure 4).
 - c) Locate organizer on load floor aligned with the applied templates and centered over the latch. Make sure all the attaching holes in the organizer are aligned over ribs on the load floor (see figures 5 & Detail A).


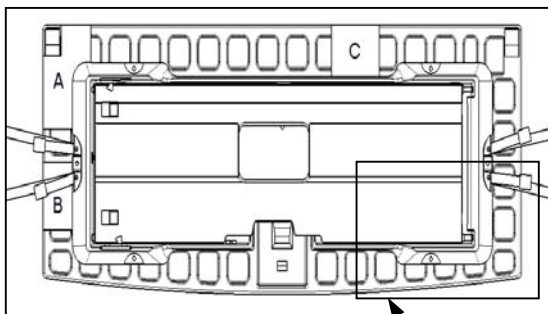


Figure 5

Detail A

- 3) Punching & Drilling
 - a) Using center punch, mark center of 9 holes onto load floor. Remove Organizer.
 - b) Using 1/8" drill bit, drill pilot holes where marked (9 places) using caution not to drill through the carpeted top surface.
 - c) Using 5/16" drill bit, re-drill holes (9 places), again using caution not to drill through carpeted top surface.
 - d) Remove templates.

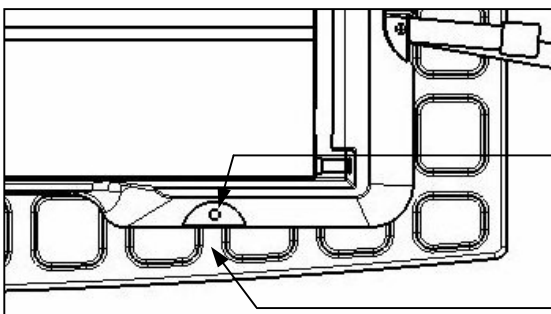

Detail A

Align anchor holes
over-top of Load
Floor ribs

Load Floor Ribs

INSTALLATION INSTRUCTIONS – Pop-up Organizer

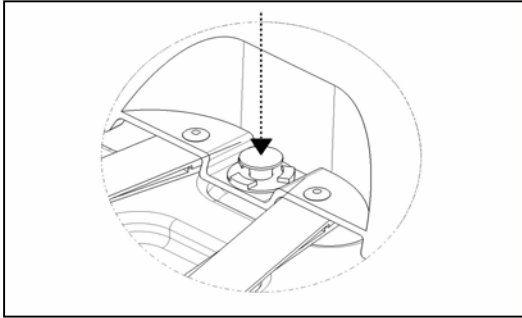


Figure 6

- 4) Return Organizer to Load Floor
 - a) Return organizer to load floor, lining up holes on base to the holes drilled in the load floor.
 - b) Secure organizer to load floor with 9 pushpins (see figure 6).
 1. Make sure pushpin assembly is in open position. (center of pin is not pushed into pin base)
 2. Insert pushpins through organizer base and into load floor.
 3. Once pushpin is seated properly depress center of pin into pin base.
 4. If necessary to remove organizer from base use a flat blade screwdriver to lift pin center out of pin body, then pull pin assembly out of organizer.
 - c) Verify organizer is firmly attached to load floor at all pin locations.

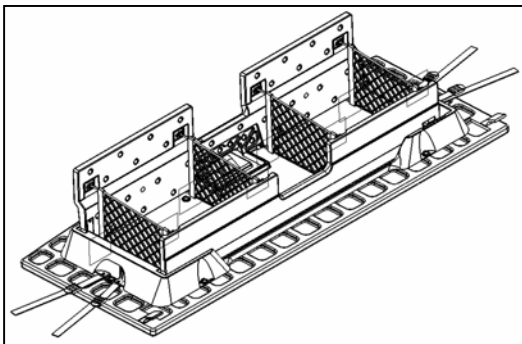


Figure 7

- 5) Return Load Floor / Organizer to Vehicle
 - a) If load floor / organizer is to be returned to normal vehicle position and there is contact between the organizer and the tool kit. The tool kit will need to be removed and relocated at the owner's convenience.

INSTALLATION INSTRUCTIONS – Pop-up Organizer

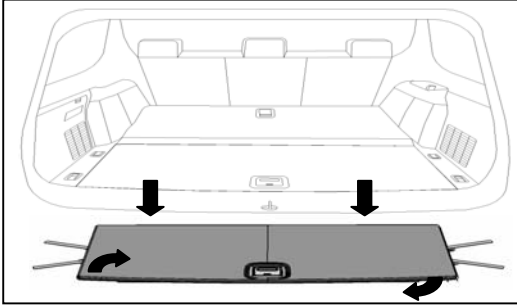


Figure 8

6) Vehicle Attachment

- a) Remove load floor / organizer from vehicle and flip it over side-to-side so that the organizer is up and the load floor latch is still closest to the rear of the vehicle. Place it back in the vehicle (see figure 8).
- b) Secure (4) straps to vehicle hooks as shown in figure 9


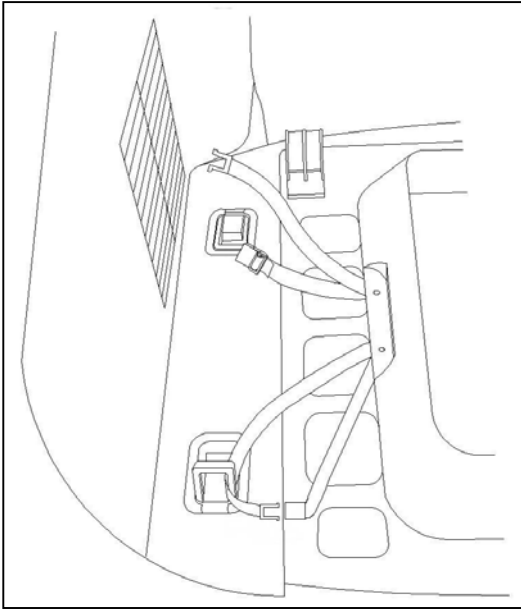


Figure 9

INSTALLATION INSTRUCTIONS – Pop-up Organizer

7) Operation

- a) To open divider panels, slide the rear (large) panel to the left, then lift up. Slide the panel to the right to lock into position (see figure 10).
- b) Repeat procedure with front panel.
- c) To collapse panels, reverse above procedure.
- d) Keep these installation instructions as reference on proper care and use of organizer.

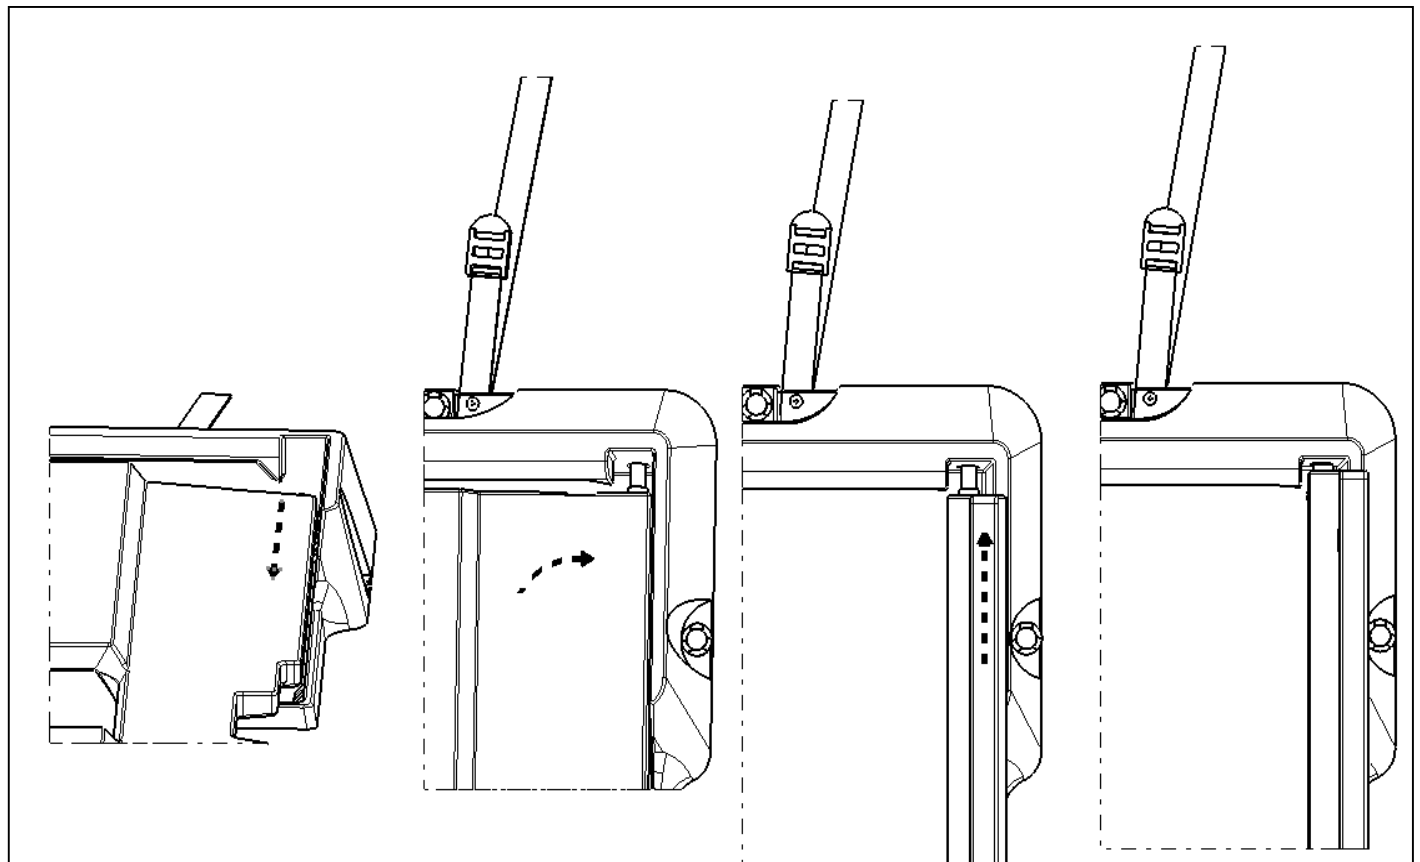

Slide panel to the left

Flip panel up

Slide panel to the right

Top view of panel in up right position

Figure 10