



GENUINE PARTS


INSTALLATION INSTRUCTIONS

Part Description Splash Guard - Rear Right Splash Guard - Rear Left Spring Clip Push Pin Philips Head Screw - 20mm	Service Part Number 3N3J2-5RB0D 3N3J2-5RB0C 12-41 0015U
Splash Guard - Rear Right Splash Guard - Rear Left Spring Clip Push Pin Philips Head Screw - 20mm	3N3J2-5RB0D 3N3J2-5RB0C
Splash Guard - Rear Left Spring Clip Push Pin Philips Head Screw - 20mm	3N3J2-5RB0C
Spring Clip Push Pin Philips Head Screw - 20mm	
Push Pin Philips Head Screw - 20mm	12-41 0015U
Philips Head Screw - 20mm	
	11296-AG000
	14-51 00891
Installation Instruction Replacement Template	N/A
B C D	
	• 6mm (1/4") Drill Bit
	• Awl
	ED: • #2 phillips screw driver

INSTALLATION PROCEDURE:

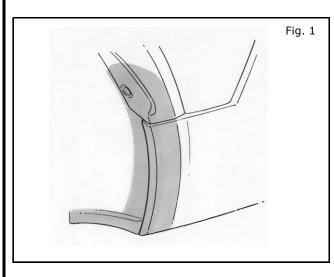

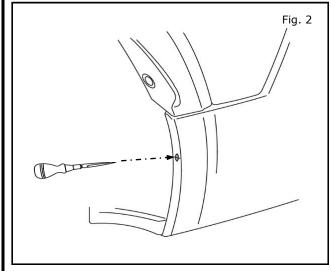

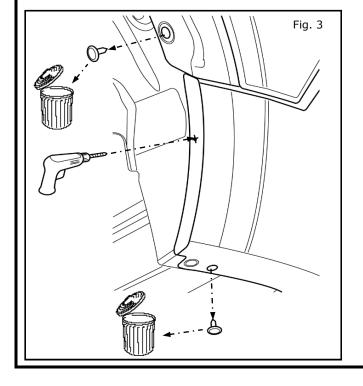


1) Clean shaded area with soap and water mixture and dry.


2) Mark center of scribe mark with awl.


- 3) Drill 6mm (1/4") hole in panel and liner at center of scribed mark location.
- 4) Remove existing push pins and discard.

INSTALLATION PROCEDURE: (con



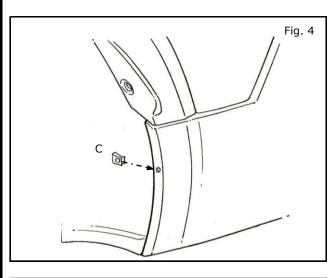

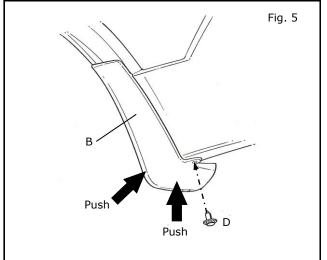

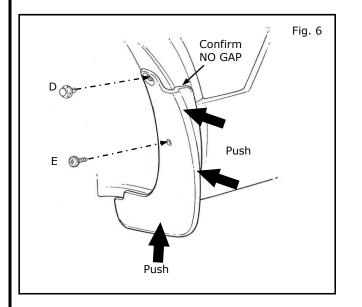

5) Install supplied spring clip (C) with turned up edge on inside of panel edge.

- 6) Align rear splash guard to vehicle.
- 7) While holding splash guard up and into vehicle and install supplied push pin (D).

- Hold splash guard up and into vehicle and install supplied screw - 20 mm (E)
- Confirm no gap to vehicle. If gap exists, loosen screw, push part up and into vehicle and retighten screw to remove or reduce gap.

NOTE:

Do not over tighten screw. Reference Tighten Torque: 3.8~4.4N-m {34~39 in-lb}

- 10) Hold splash guard tight to vehicle and install supplied push pin (D)
- 11) Repeat procedure for right side.