

## **GENUINE PARTS**

# **MAINTENANCE INSTRUCTIONS**

| DESCRIPTION:   | Accessory Alloy Wheel - 15 x 5.5J (40) |
|----------------|--|
| APPLICATION:   | Versa                                  |
| PART NUMBER(S) | 999W1 42000, T98W1 9MD0A/B/C/D/E       |

### PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

## **▲** WARNING

- To assure proper sealing of air valve to the wheel, always replace each TPMS air valve grommet with a new part. Use one of the following P/Ns available from your Nissan dealer: 40702 3VU0A for standard (Schrader) TPMS unit or 40702 3VU0A for vehicles equipped with I-Key (Continental) TPMS unit. A total of four (4) grommets will need to be obtained for a full vehicle set.
- After installation, check for tire clearance and interference between the body and/or suspension parts. Do not drive the vehicle if interference is found. Tire interference could cause tire failure and lead to an accident and serious injury.
- Failure to apply the proper torque to the lug nuts could cause wheel separation and lead to an accident and serious injury. Re-torque lug nuts to the specified value after 25 miles of driving.
- Use only the recommended tire size, P185/65R15 for this alloy wheel.
- See the tire and loading information label (tire placard) for the recommended COLD tire air pressure.
- The Original Equipment wheel nuts and TPMS air valves should be used on the new accessory wheels.
- If replacement parts are needed, please obtain the following part numbers:
  Wheel nut P/N 40224 ZN50A; TPMS air valve P/N 40705 3AN0A with air valve nut P/N 40780 JA01B.
  Center cap P/N 40342 BR01A, 40343 2DR0A, 40342 4RB4B, KE409 00RED, KE409 BPURP, KE409 ORANG, or 40342 BA61D.
- For additional tire information, see owner's manual.
- Balance the alloy wheel and tire assembly.
- Place the maintenance instructions (P/N 999W1 42000USMI) in the glove compartment.

#### REGULAR CLEANING:

- To maintain the original appearance, always wash the wheels when washing the vehicle. Typical road deposits can be corrosive and can harm the finish over time. Road film, brake dust and other surface contaminants should be removed on a regular basis.
- Do not clean hot wheels.

#### **USE OF PROPER CLEANING AGENTS AND TOOLS:**

- Use a mild soap and water to clean wheels. Do not use abrasive cleaners.
- Do not use cleaning agents that contain acids that will permanently stain wheels.
- A mild degreaser may be used for stubborn stains, but should be removed with water immediately following cleaning process.
- Do not use scouring pads, steel wool, or metal brushes that can scratch or damage your wheel's finish. Use a damp soft cloth, sponge, soft brush, or spoke brush.
- For additional protection, apply a coat of non-abrasive cream wax on wheels, once your wheels are clean. The wax is not only to enhance the reflectivity, but also to add a protective film to the wheel to reduce future cleaning effort.