



## GENUINE PARTS

### INSTALLATION INSTRUCTIONS


**DESCRIPTION:** Sport Pedal Pads

**APPLICATION:** Nissan Maxima, Murano

**PART NUMBER:** T99E5 4RA0A

**KIT CONTENTS:**


Item	Qty.	Description
A	1	Accelerator Sport Pedal Pad
B	1	Brake Sport Pedal Pad
C	1	Footrest Sport Pad
D	1	Footrest Backing Plate
E	4	Footrest Fasteners
F	1	String
G	1	Instruction Replacement Template

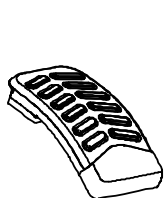


A



B

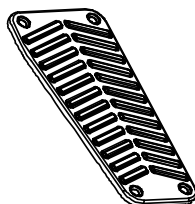

C

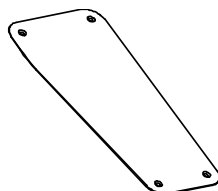

D



E



F



G

**TOOLS REQUIRED:**

- Mirror
- String (included)
- Tape
- Philips screwdriver
- t20 Torx Socket Wrench
- Window cleaner or soap solution in spray bottle
- Torque wrench






**PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:**

- Make sure vehicle is in park and engine is turned off.
- Read the installation sheet and check the entire kit for possible damage or defects before performing any work.

### WARNING

- Installation by dealer is highly recommended. Improper installation could result in pad detachment, possibly resulting in a crash.
- After installation, use a mirror to check the back side of the pedals to ensure pedal pads are fully installed correctly. Feel all surfaces are properly attached and grab firmly by hand to ensure pads are seated correctly. If not fully seated, part must be removed and re-installed correctly.
- These parts are to be installed when the ambient temperature is 68°F (20°C) and above.


## ACCESSORY INSTALLATION PROCEDURE:

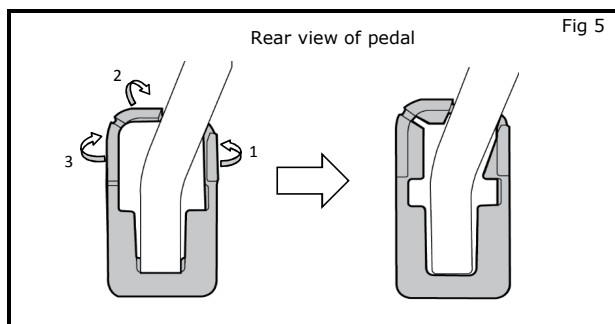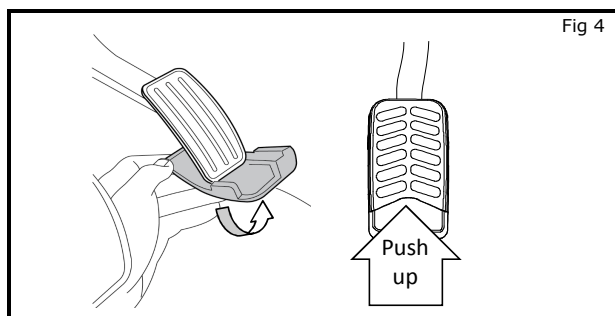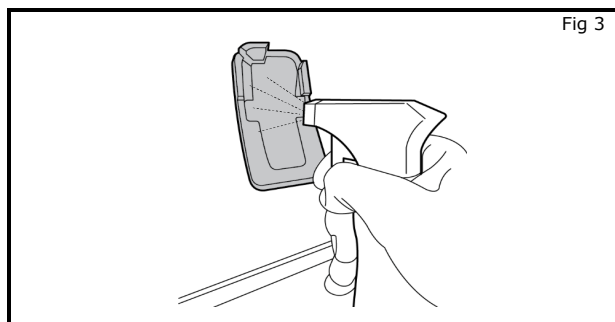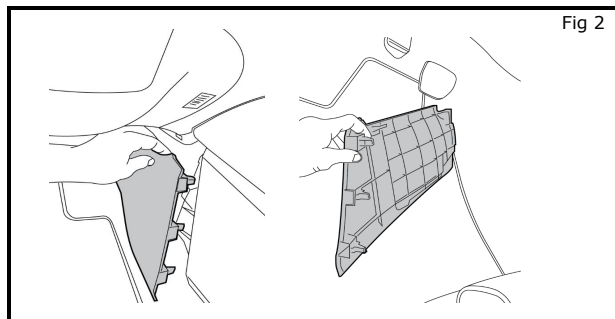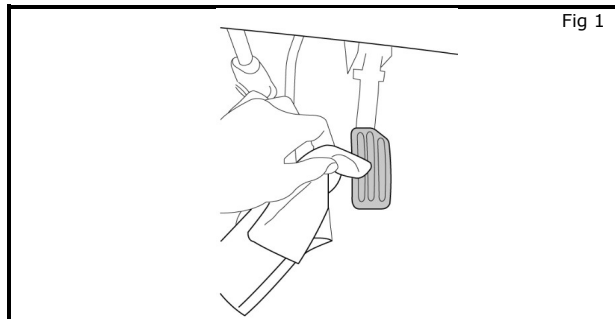

### Accelerator Pedal Pad Installation:


- 1) Clean vehicle accelerator pedal pad using clean wash cloth before installing sport pad.
- 2) Gently remove side trim panel to allow space to install accelerator sport pad.
- 3) Spray the back side of the accelerator pad with soap solution or window cleaner to ease installation.
- 4) Slide bottom of pedal through the openings on sport pedal pad and slide pad up until it cannot be slid up any further.
- 5) Ensure protrusions on upper outer lip are seated around pedal.
  - a) Use your fingers to pull protrusions (3) and seat accelerator pedal fully inside the inner lip of the pedal pad.
  - b) Using mirror, look at the back side of pedal to ensure pad is fully seated in position. If not fully seated, part must be removed and re-installed correctly.
  - c) Reinstall side trim panel. Reverse of step 2, Fig. 2.

## ACCESSORY INSTALLATION PROCEDURE:

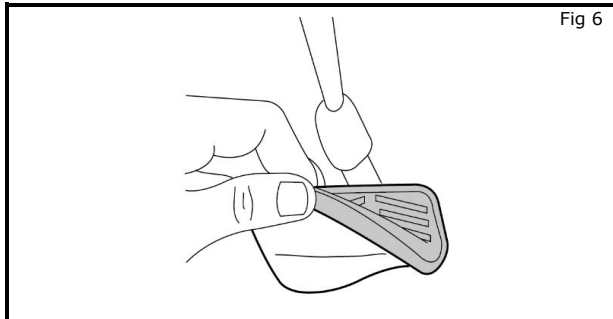


### Brake Pedal Pad Installation:


- 6) Locate brake pedal and remove original brake pedal pad by pulling outer lip.

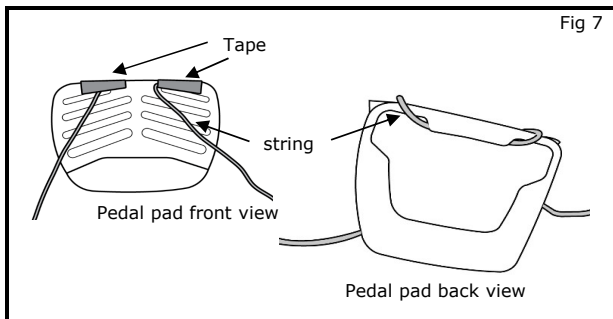


- 7) Install string under upper lip of sport brake pad and use tape to hold ends as shown.

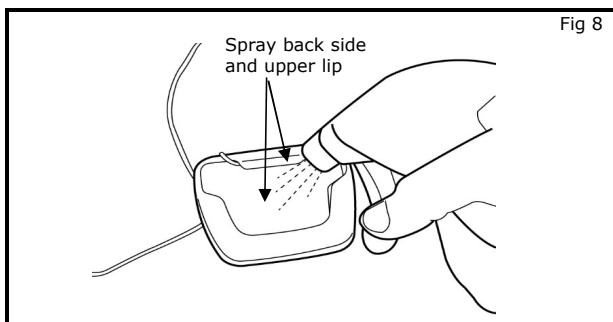

- 8) Use soap solution or window cleaner and spray lightly back side surface of sport pedal pad, and upper lip.

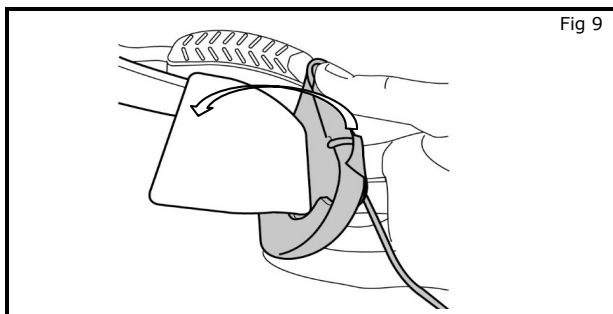

- 9) Slide bottom of pedal through opening on sport pad and slide pad up until pad cannot be slid up any further.

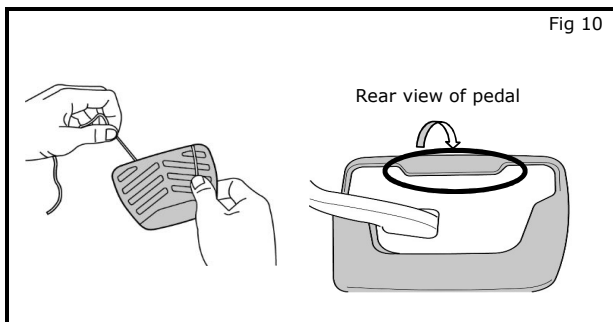

- 10) Hold one end of rope, and pull other end up to allow upper lip to roll over top side of brake pedal metal plate.

Use mirror to look at the back side of pedal to ensure pad is fully seated in position.


## ACCESSORY INSTALLATION PROCEDURE:

### Accelerator Pedal Pad Check:


#### WARNING

- Improper installation could result in pad detachment, possibly resulting in a crash.
- Use mirror to check the back side of the pedals to ensure pedal pads are fully installed correctly.
- Feel all surfaces are properly attached and grab firmly by hand to ensure pads are seated correctly.
- If not fully seated, part must be removed and re-installed correctly.
- These parts are to be installed when the ambient temperature is 68°F (20°C) and above.

Mirror Check

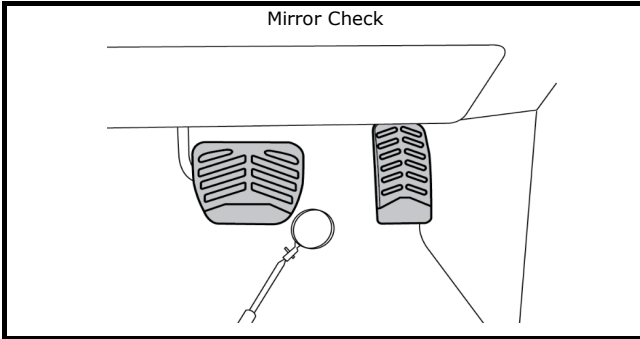

Check By Hand

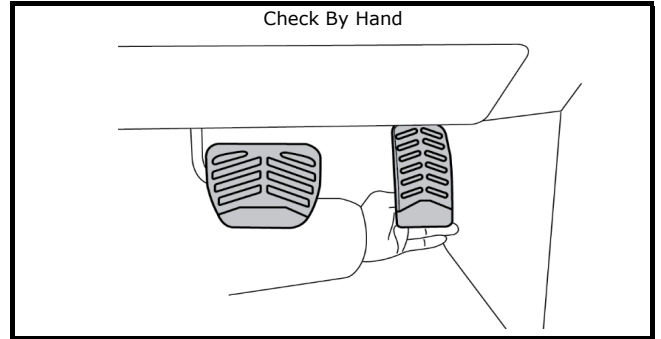


### Brake Pedal Pad Check:


#### WARNING

- Improper installation could result in pad detachment, possibly resulting in a crash.
- Use mirror to check the back side of the pedals to ensure pedal pads are fully installed correctly.
- Feel all surfaces are properly attached and grab firmly by hand to ensure pads are seated correctly.
- If not fully seated, part must be removed and re-installed correctly.
- These parts are to be installed when the ambient temperature is 68°F (20°C) and above.


Mirror Check

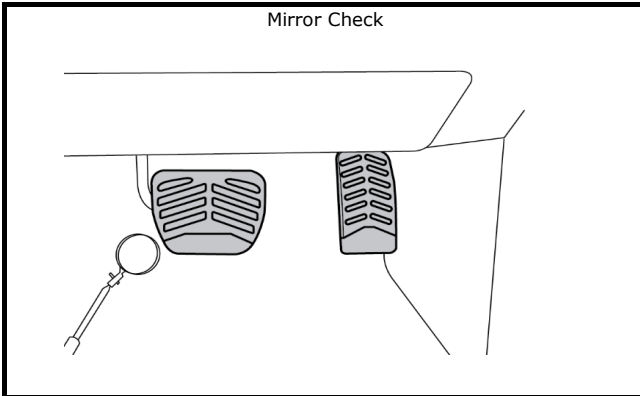

Check By Hand



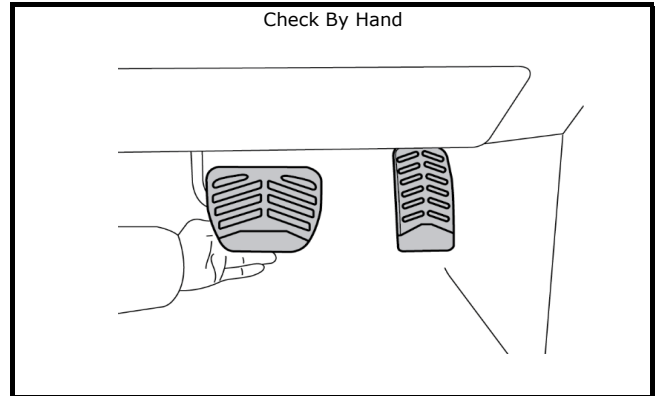


## ACCESSORY INSTALLATION PROCEDURE:

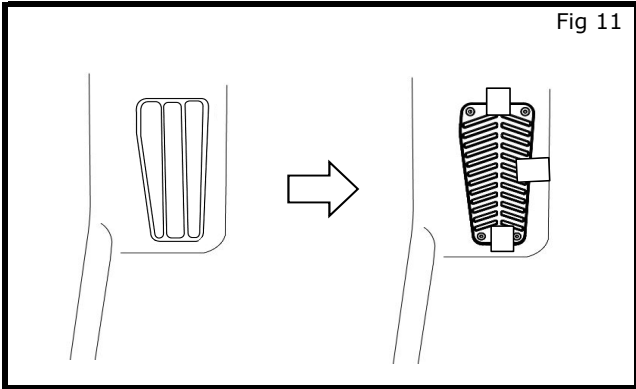


### Foot Rest Pad Installation:

- 11) Position foot rest.
  - a) Directly on top of the vinyl pad in the vehicle.
  - b) Make sure pad is level and use tape to hold in position.
- 12) Using a Philips screwdriver, punch out 4 holes in the carpet and vinyl pad using the sport pad as a template locator.
- 13) Push the fasteners (4) into the holes and screw into the carpet until the fastener head is flush with the foot rest sport pad.

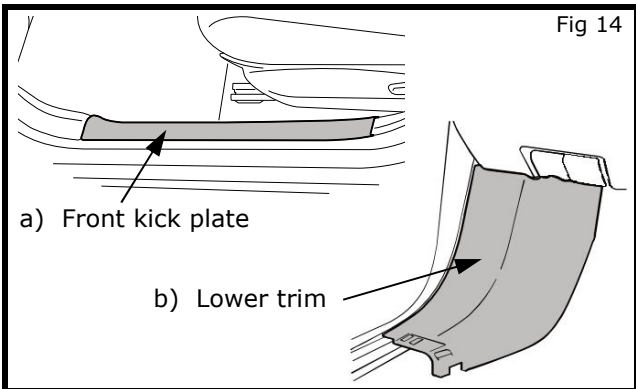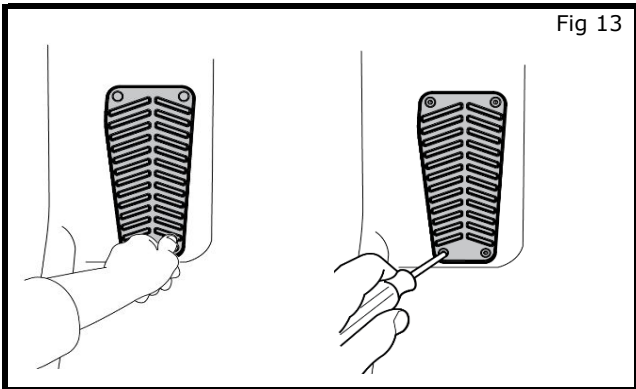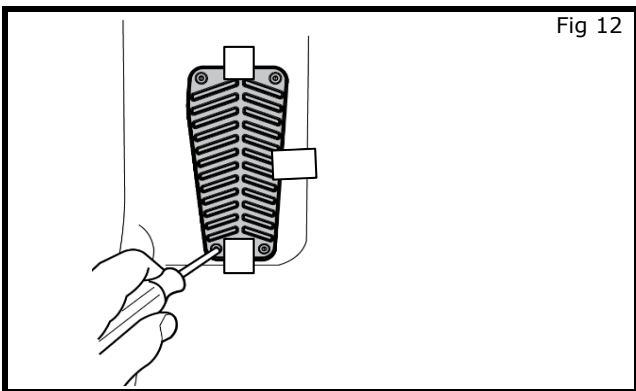


- 14) Trim removal.
  - a) Remove driver front kick plate.
  - b) Remove lower trim.


## ACCESSORY INSTALLATION PROCEDURE:

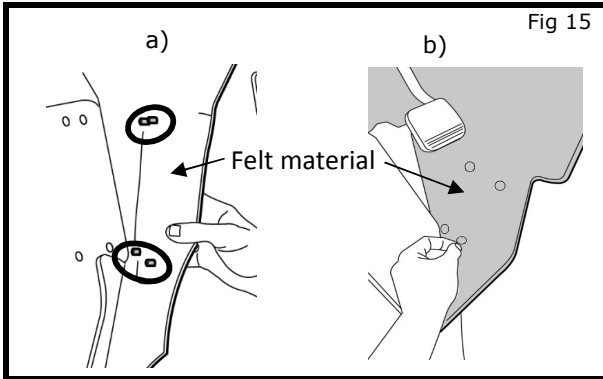


- 15) Peel back carpet for foot rest pad installation.
  - a) Carefully peel back the carpet and locate the 4 fasteners.  
Note: Hold the sport pad in place so not to loosen the fasteners.
  - b) Brush back the felt material to ensure at least 3 threads of the fastener are exposed.

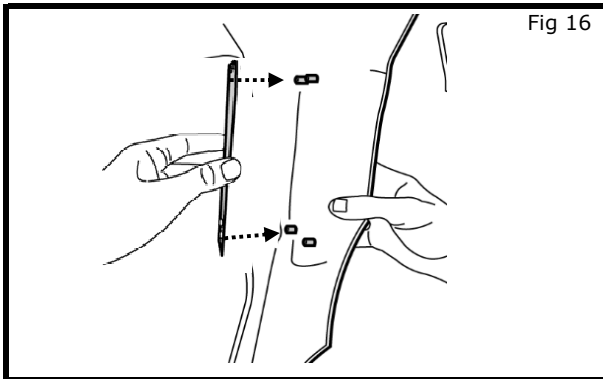

- 16) Install backing plate to foot rest fasteners.

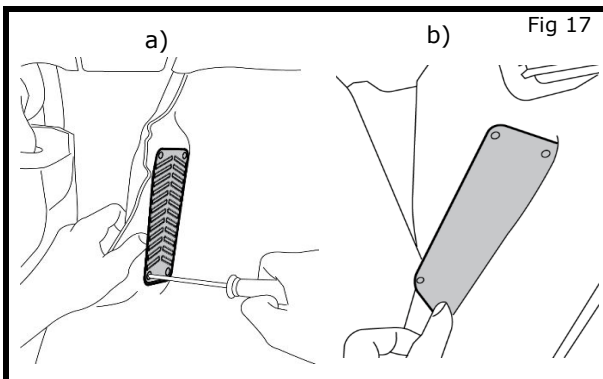

- 17) Tighten foot rest in position.
  - a) Use Torx wrench to get the threads started.
  - b) Use finger to feel that the threads have started into the backing plate.

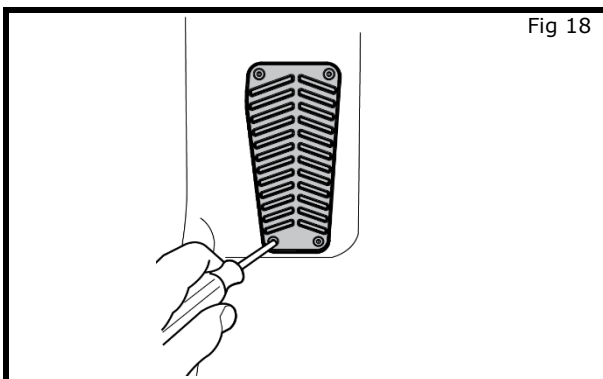

- 18) Final install:
  - a) Torque the 4 fasteners to 2.0 - 2.5 Nm.  
(1.5 - 1.8 ft-lb)
  - b) Install lower trim back in place.  
Reference Fig. 14 (b)
  - c) Install kick plate back in place.  
Reference Fig. 14 (a)

Check:

- Vehicle parts are installed correctly and there are no loose or damaged parts.
- Verify torque on the foot rest.