



GENUINE PARTS



## INSTALLATION INSTRUCTIONS

1. DESCRIPTION: Cargo Net

2. APPLICATION: Armada / QX56

3. PART NUMBER: 999C1 3Q001

4. KIT CONTENTS:


<u>Item No.</u>	<u>Qty</u>	<u>Description</u>
1)	1	Cargo Area Net
2)	1	Installation Instruction <a href="#">Replacement Template</a>

5. TOOLS REQUIRED:

- None

6. INSTALLATION PRECAUTIONS / NOTES:

- Keep this installation instruction sheet with Vehicle Owner's Manual for future reference.

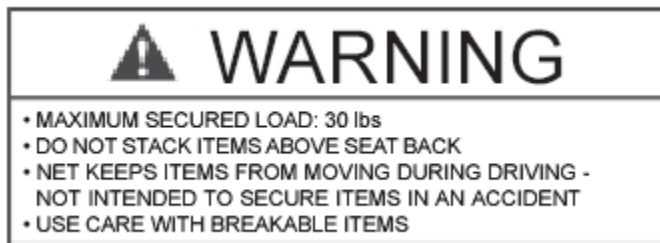

## INSTALLATION INSTRUCTIONS – Cargo Area Net

### 7. INSTALLATION PROCEDURE

- 1) Locate the floor anchors as shown in Figure 1.
- 2) Using clip shown in Figure 2, attach the net to the floor anchors to obtain the floor net position as shown in Figure 3.

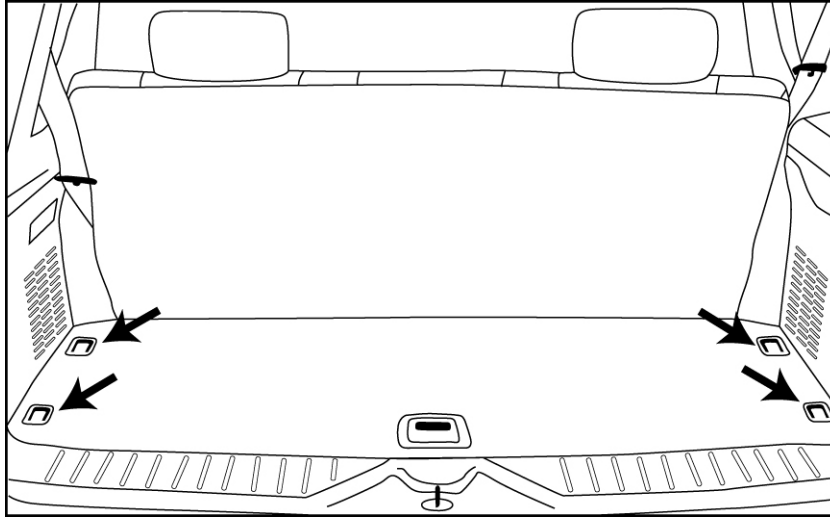


Figure 1

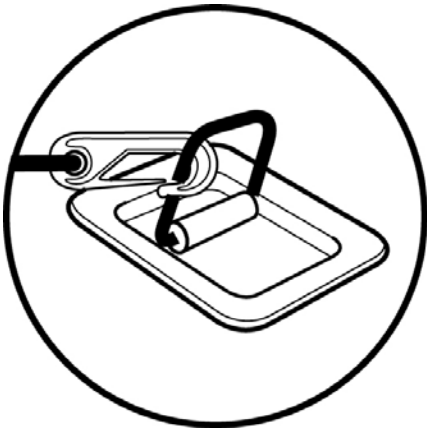


Figure 2

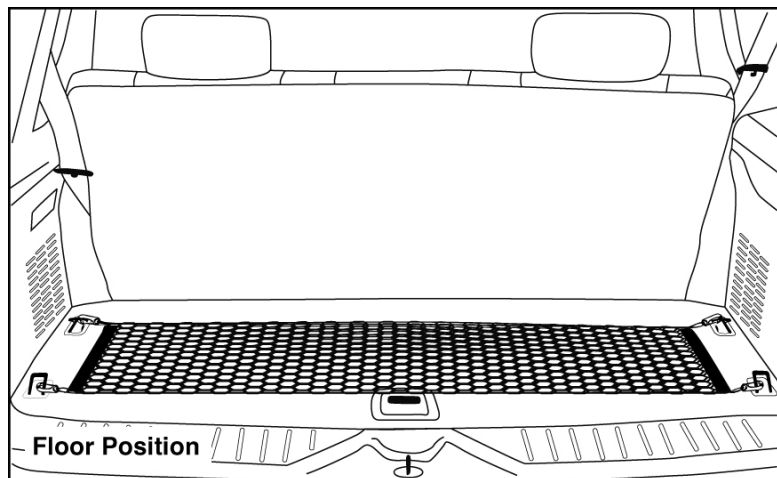


Figure 3