



GENUINE PARTS

INSTALLATION INSTRUCTIONS


1. **DESCRIPTION:** Rear Splash Guard Kit

2. **APPLICATION:** Altima Coupe

3. **PART NUMBER:** 999J2 UUxxxC4

4. **KIT CONTENTS:**

Item	QTY	Description	Service Part Number
A	1	Splash Guard - Rear RH	93820 JBxxx
B	1	Splash Guard - Rear LH	93821 JBxxx
C	4	Philips Head Screw M5 x 20mm	14-51 00891
D	4	Spring Clip	12-41 0019U
E	2	Push Pin	15-53 09241
F	1	Installation Instructions Replacement Template	999V2 AW000

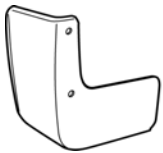

A



B



C



D



E



F

5. **TOOLS REQUIRED:**


- Clean rag
- #2 philips screw driver
- mild soap/water mixture
- Drill
- Marking tool (awl)
- 6 mm (1/4") drill bit
- Flat head screw driver

6. **PRE-INSTALLATION NOTES:**


- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit


7. INSTALLATION PROCEDURE:

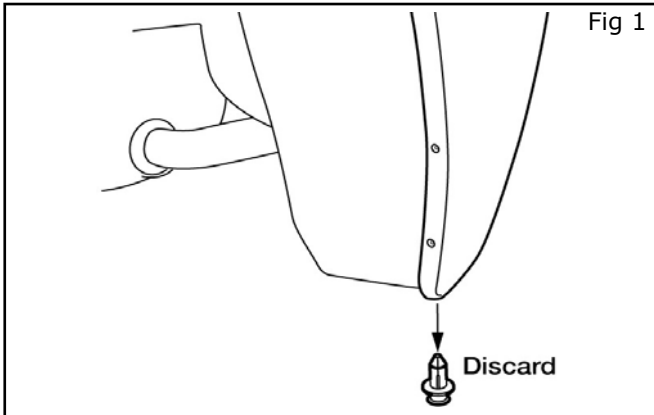

- 1) Remove existing hardware.
 - a) Remove and discard push pin.
 - b) Clean installation surface.

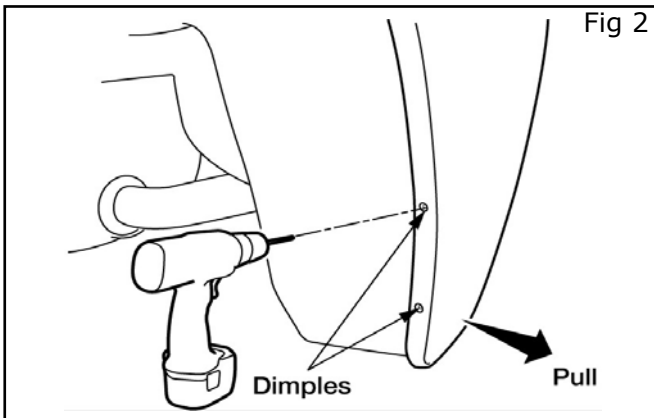


- 2) Drill holes.
 - a) Pull outward on bottom of fascia.
 - b) Drill 6mm (1/4") holes at (2) dimple locations.

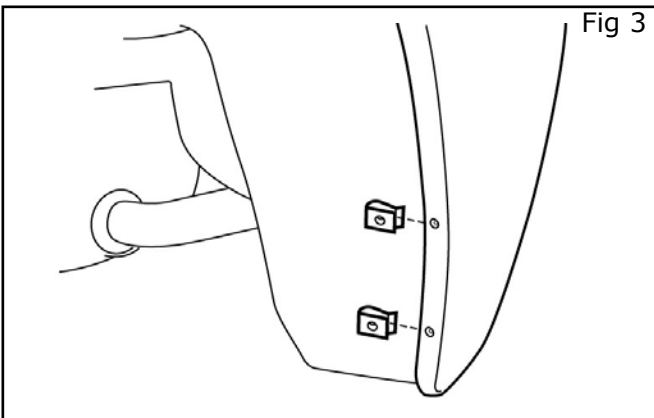

- 3) Install spring clips over the drilled holes (2 locations).

NOTE:
INSTALL SPRING CLIP WITH FLAT EDGE ON OUTSIDE OF FASCIA.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit

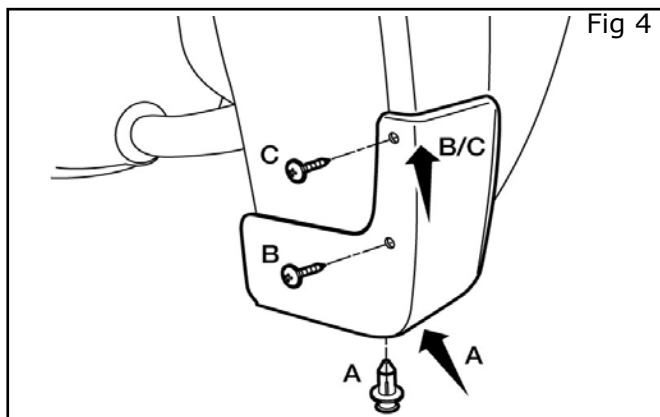

- 4) Install splash guard.
- Align splash guard to vehicle.
 - Install push pin A while applying pressure in direction A.
 - Install upper front face screw B while applying light pressure in direction B.
 - Install underside screw C while applying light pressure in direction C.

NOTE:

HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE TIGHTENING THE SCREWS TO ENSURE NO GAP OCCURS BETWEEN FENDER AND SPLASH GUARD.