



GENUINE PARTS

INSTALLATION INSTRUCTIONS

1. DESCRIPTION: SUNROOF WIND DEFLECTOR

2. APPLICATION: ALTIMA

3. PART NUMBER: 999D4-UT000

4. KIT CONTENTS:

<u>Item No.</u>	<u>Qty</u>	<u>Description</u>
1)	1	Sunroof deflector
2)	3	Philips head screws
3)	3	Nylon washers
4)	3	Nylon nuts
5)	2	Side Brackets
6)	1	Center Bracket
7)	5	Protective tape


5. TOOLS REQUIRED:



Car Wash
Supplies



Measuring
Tape




Felt-Tip
Pen



Rubbing
Alcohol



Shop
Towel

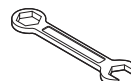

10 mm
Wrench



Philips Head
Driver







Masking
Tape

6. INSTALLATION PRECAUTIONS / NOTES:

- Read all instructions carefully before beginning the installation.
- To avoid damaging the surface, never use ammonia-based cleaners or solvents to clean your sunroof deflector.
- Clean with a solution of mild dishwashing soap and water using a soft cloth or chamois.
- To remove fine scratches and restore the original luster, use a high-quality plastic cleaner.

INSTALLATION INSTRUCTIONS - SUNROOF WIND DEFLECTOR

7. INSTALLATION PROCEDURE

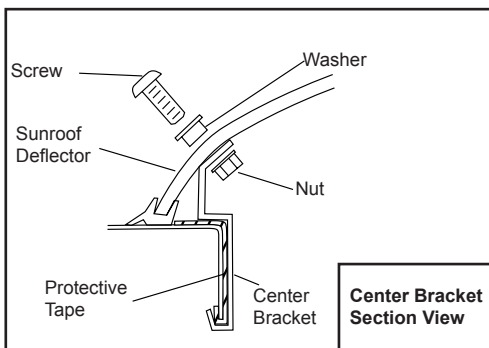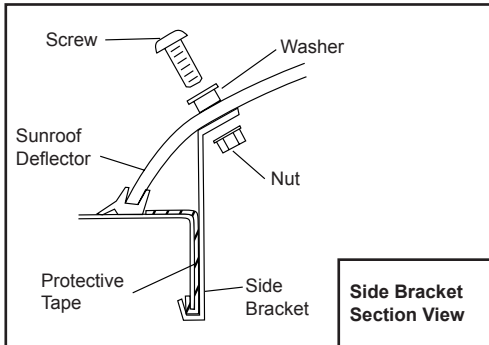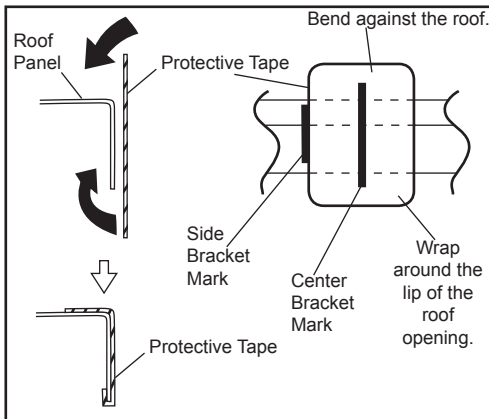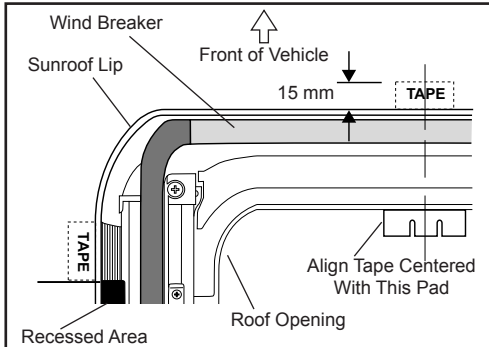

1) Preparation


- a) Clean the roof area to be covered.
- b) Open the sunroof.
- c) Push a shop towel or rag into the opening between the sheet metal flange and the factory wind breaker. Use the towel to hold down the factory windbreaker to make it easier to work on during the bracket installation.
- d) Locate black plastic pad and mark roof along centerline as shown.
- e) Locate black recessed area on either side of roof opening, and mark roof opening as shown.
- f) Using rubbing alcohol on a shop towel, clean the roof at each of the three marked locations. Be careful not to wipe off your marks.
- g) Remove the adhesive backings from the protective tapes, and attach one to the roof at each of the marked locations as shown.
- h) Tape each bracket in place using masking or Scotch tape, center over protective tape.

2) Installation

- i) Set the sunroof deflector on the vehicle's roof slightly forward of the sunroof opening. Adjust its position so the holes in the deflector are aligned with the bracket holes.
- j) While holding the deflector in place, install the washers, screws, and nuts with the end of each bracket. Ensure brackets remains hooked to the lip of the sunroof opening. Do not tighten the screws yet.
- k) Remove the tape used to hold brackets in place.


INSTALLATION INSTRUCTIONS - SUNROOF WIND DEFLECTOR

7. INSTALLATION PROCEDURE (CONTINUED)

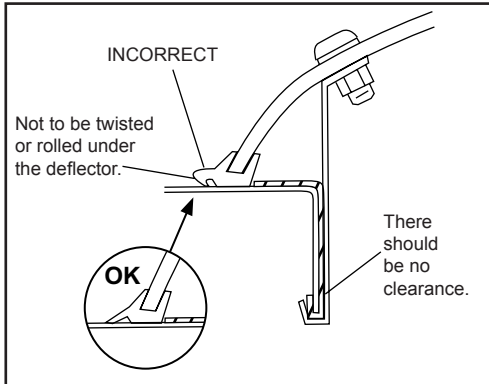


l) Position the sunroof deflector with equal spacing on all sides. Check that the rubber seal is not twisted or rolled under the deflector.

m) Slide a credit card under the deflector from the back side to straighten the gasket if needed.

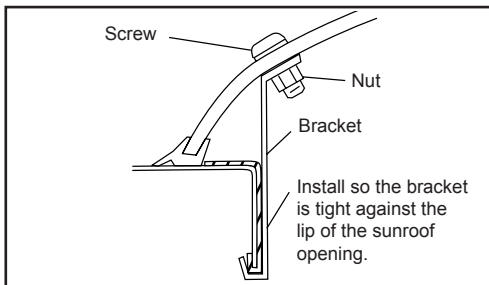

n) Tighten the nuts and screws, alternating between the sides and the center. Torque the screws to 10-12 in. lbs. To prevent damage to the nylon nuts, do not overtighten.

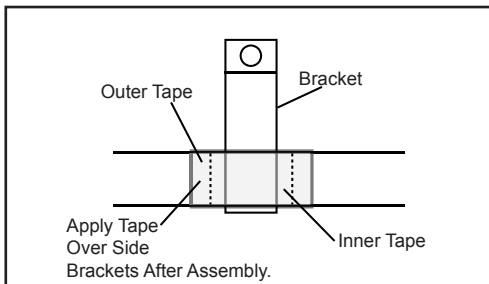

o) Install 2 remaining vinyl tape strips over side brackets.

p) Remove the shop towel used to hold down the factory wind breaker.