

GENUINE PARTS


INSTALLATION INSTRUCTIONS

2. APPLIC	CATION: Pa	thfinder / Fr	ontier / Xterra		
3. PART N	NUMBER: 99	9J2 XR0000	3 / 999J2 KR00003		
4. KIT CO	NTENTS:				
ltem	Qty.	Descri	ption		
А	1	Splashg	juard Front (Right)		
В	1	Splashguard Front (Left)			
С	8	M5 x 20mm Screws			
D	1	Installation Instructions Replacement Template			
					<text><text><text><text><text><text></text></text></text></text></text></text>
	REQUIRED: hillips 90°Sc	A	B	C	D
(A) (B)	Be careful no The splash gi	t to damage Jards are ma	/ SPECIAL NOTES: the vehicle and the s ade of plastic. Avoid mplete, make sure a	splash guards durir any heavy impact.	

INSTALLATION INSTRUCTIONS - Front Splash Guard

7. INSTALLATION PROCEDURE:

EXISTING SCREWS (Discard) EXISTING SCREW (Discard)

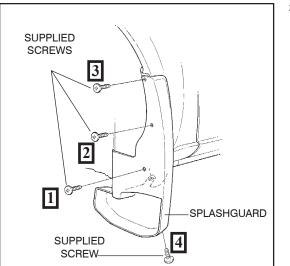

The procedure below shows the installation for the right side. Repeat the same procedure for the left side

1. Removal of the screws from the vehicle

- a) Wash any dirt and oil off of the installation surface with mild soap and water.
- b) Remove the tapping screws (4 locations) and discard.

_ Important _

Turn the tire to the right during the installation of the right side splash guard. (Turn the tire left during left side installation.)

2. Front splashguard installation

- a) Install the front splashguard with supplied tapping screws. Push upwards, rearward and inward while tightening screws.
- b) Tighten screws in sequence shown. Do not over tighten.

– Important –

Hold the splash guard tight to the vehicle while tightening the screws. Be sure no gap occurs between lower panel and splash guard.