



GENUINE PARTS

INSTALLATION INSTRUCTIONS


1. **DESCRIPTION:** Rear Splash Guard Kit

2. **APPLICATION:** Pathfinder


3. **PART NUMBER:** 999J2 XU00004

4. **KIT CONTENTS:**

Item	QTY	Description	Part Number
A	1	Splash Guard - Rear Right	78810 ZS00A
B	1	Splash Guard - Rear Left	78811 ZS00A
C	6	Screw	14-51 00841
D	6	Spring Clip	12-41 00771
E	2	Push Pin	15-53 09241
F	1	Installation Instructions Replacement Template	999V2 AW000

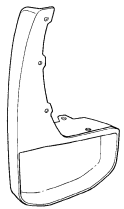

A

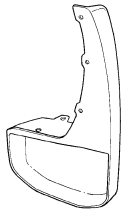

B



C



D



E



F

5. **TOOLS REQUIRED:**

- clean rag
- mild soap/water mixture
- 10mm socket/driver
- #2 phillips screwdriver
- drill
- 6mm (1/4") drill bit


6. **PRE-INSTALLATION NOTES:**

- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit


7. INSTALLATION PROCEDURE:

Fig 1

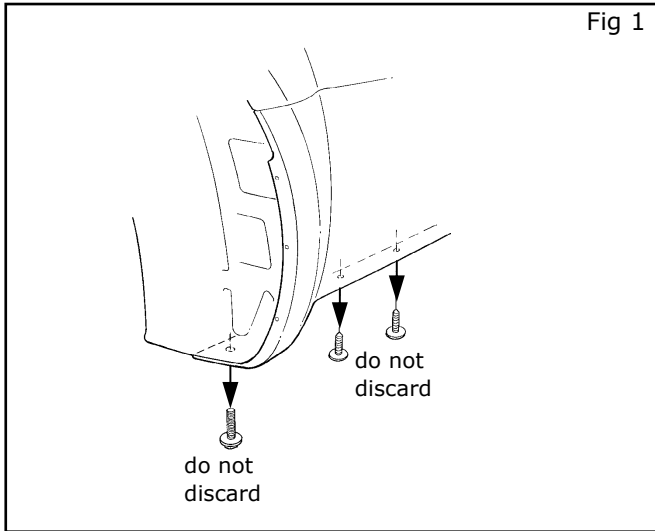


- 1) Remove existing hardware.
 - a) Remove bolt and screws. Do not discard.
 - b) Clean installation surface.

Fig 2

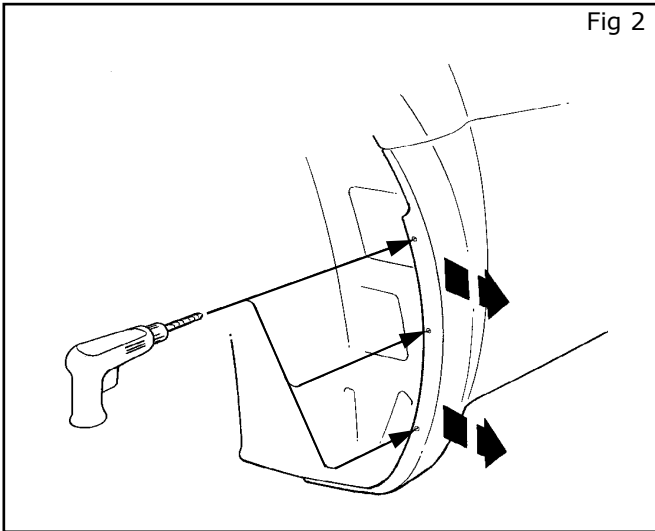

- 2) Drill holes.
 - a) Pull outward on bottom of fascia.
 - b) Drill 6mm (1/4") holes at (3) dimple locations.


Fig 3

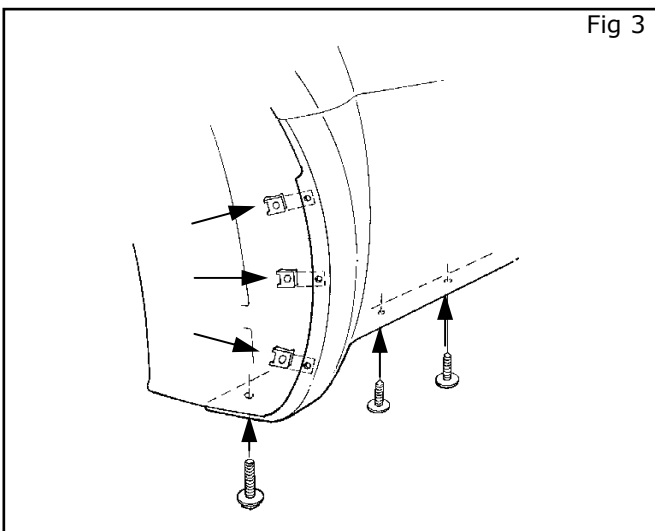


- 3) Install spring clips.
 - a) Install spring clips over the drilled holes (3 locations).
 - b) Install existing bolt and screws.

NOTE:
INSTALL SPRING CLIP WITH FLAT EDGE ON OUTSIDE OF FASCIA.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit

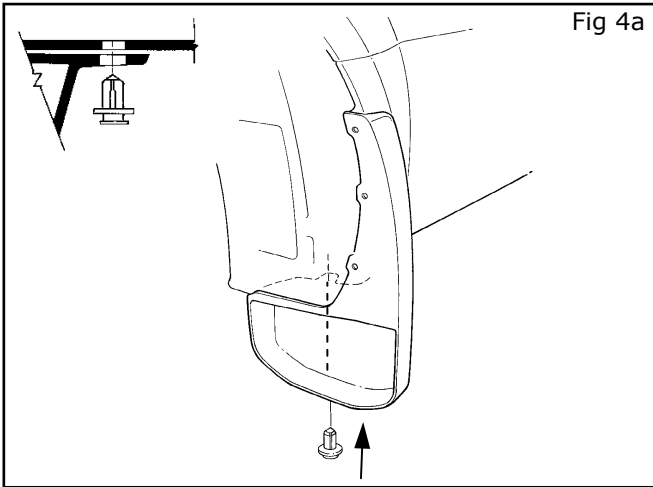

- 4) Install rear splash guard.
 - a) Align splash guard to vehicle.
 - b) Install supplied push pin through hole in tab.

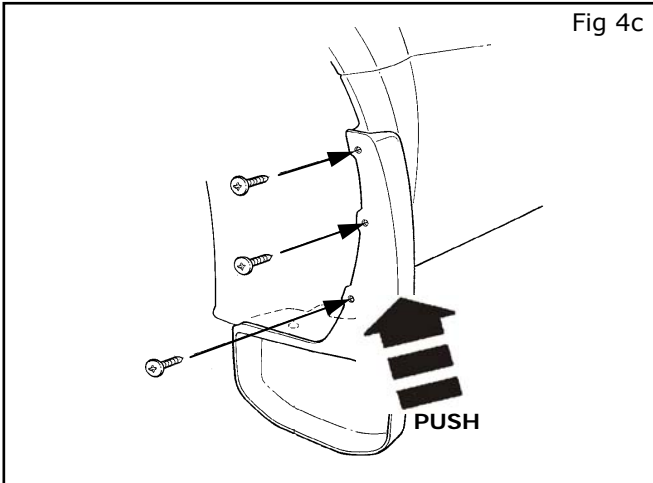

- c) Push inward and upward.
- d) Install lower screw.
- e) Install middle screw.
- f) Install upper screw.

NOTE:
HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE TIGHTENING THE SCREWS TO ENSURE NO GAP OCCURS BETWEEN FENDER AND SPLASH GUARD.