



INSTALLATION INSTRUCTIONS

GENUINE PARTS

1. DESCRIPTION: Indoor Vehicle Cover

2. APPLICATION: Nissan 370Z Convertible

3. PART NUMBER: 999N2 ZVR00- Satin Snug Fit (Black)
999N2 ZVR01- Satin Snug Fit (Silver)

4. KIT CONTENTS:

Item No.	Qty.	Part Number	Description
1.)	1	N/A	Vehicle Cover
2.)	1		Storage Bag
3.)	1		Instructions Replacement Template

5. TOOLS REQUIRED: No Tools Required

6. INSTALLATION NOTES / CARE & CLEANING:

- 1.) Vehicle cover must be installed properly and completely, do not use vehicle with cover installed.
- 2.) Wash cover on vehicle with mild soap. Allow sufficient time for cover to air dry completely before storing. **DO NOT use bleach!**

⚠ WARNING

- Do not place vehicle cover over hot exhaust pipes.
- Warning for use in high wind areas: In high wind areas (and for prolonged outdoor storage), the cover should be pulled tightly at the center of the vehicle using a length of rope routed through the tie-down grommets in the cover. This should be done even if the optional cable lock is used. The cover can work loose and come off the vehicle if a strong wind goes under the cover.
- Do not use this cover while towing a vehicle. The cover is not designed for use when towing, serious damage can occur to the cover and to the paint on the vehicle.

⚠ CAUTION

- If your vehicle is equipped with a cellular phone antenna, remove the mast before installing the cover.
- Some states require the license plate number of a covered vehicle to be clearly displayed; the only type of marking paint acceptable for use on this material is a permanent type fabric/t-shirt paint that is available at most fabric and supply stores. Do not use: regular paint, spray paint, laundry markers, permanent type Magic markers, or any type of felt-tip pen or marker.



INSTALLATION INSTRUCTIONS


7. INSTALLATION PROCEDURE

0 BEFORE INSTALLATION


1. Read entire installation instructions before proceeding
2. Be careful not to damage any antenna or mirror pocket area when installing cover.
3. Watch for any sharp objects on vehicle that may rip the cover.

1 LAY COVER OVER THE CENTER OF VEHICLE AND OPEN.

The 370Z logo will be visible on the front of the vehicle cover

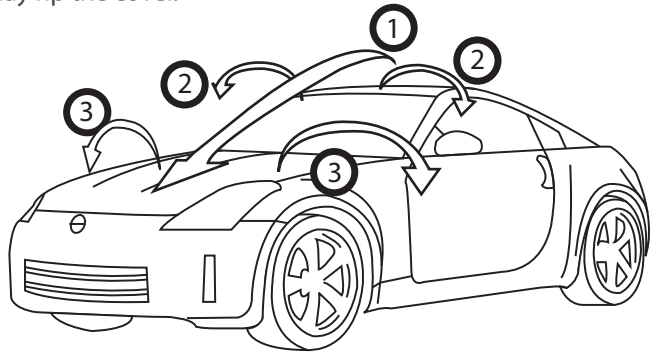


2 You must first install the cover over the mirror and antenna pockets. It is very important that this is done before the ends of the cover are stretched over the front and rear bumpers.

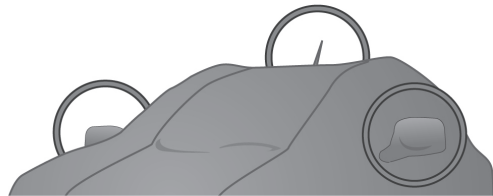

3 INSTALL COVER OVER FRONT AND REAR BUMPERS

The elastic at each end of the cover will keep the cover in place under all normal conditions.

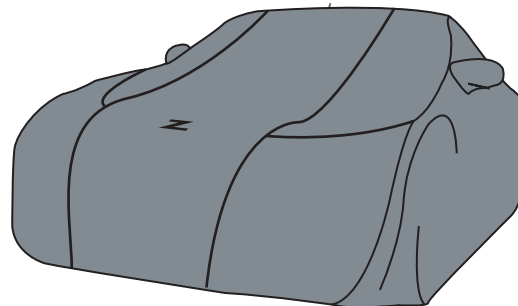

4 REMOVAL

- A. The following procedure makes it easier to remove and install the cover whenever it is used.
- A. Release both ends of the cover from under the bumpers.
- B. Fold up both sides of the cover towards the center of the vehicle, onto it's top, approximately 2 or 3 feet wide.
- C. Start at the front of the vehicle and roll or fold the cover from the front to the back.
- D. Store cover in storage bag.

CAUTION

- During Installation and Removal, user should be careful with antenna.



INSTALLATION INSTRUCTIONS

CAUTION

- Do not wash in hot water.
- Do not use fabric softener.

8. Care and Cleaning

Your vehicle cover is made of Satin Snug Fit material which is a knitted polyester fabric. This fabric is intended to cover your vehicle when stored in a garage only.

If an area becomes soiled, use an all-purpose cleaner to rub it out, and rinse the area with water.

CAUTION

- Do not machine wash.
- Do not machine dry.
- Air dry only.