



GENUINE PARTS

INSTALLATION INSTRUCTIONS





1. DESCRIPTION: INTERIOR APPLIQUÉ

2. APPLICATION: NISSAN CUBE

3. PART NUMBERS: 999G3 7W010, 999G3 7W011, 999G3 7W012, 999G3 7W013, 999G3 7W014, 999G3 7W015

4. KIT CONTENTS: SEE BELOW

ITEM	QTY	DESCRIPTION	ITEM	QTY	DESCRIPTION
A	1	HVAC Vent Cover (LH)	G	1	Passenger Front Window Switch Control Finisher
B	1	HVAC Vent Cover (Center-LH)	H	1	Passenger Rear Window Switch Control Finisher
C	1	HVAC Vent Cover (RH)	I	1	Installation Instructions Replacement Template
D	1	HVAC Vent Cover (Center-RH)	J	5	Alcohol Wipes
E	1	Driver Front Window Switch Control Finisher			
F	1	Driver Rear Window Switch Control Finisher			

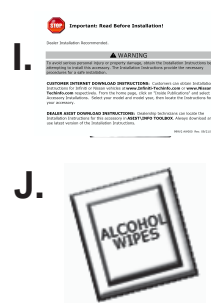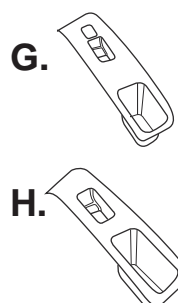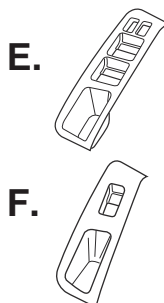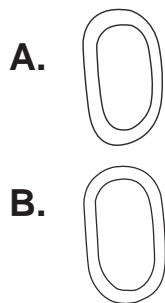

5. TOOLS REQUIRED:
None.

6. PRE-INSTALLATION CAUTIONS / NOTES:

Read the installation sheet and check the entire kit for possible damage or defects before performing any work.

Dry fit all parts to become familiar with proper placement.

One alcohol wipe is to be used when installing the four vent appliques, and one alcohol wipe is to be used to install each door applique.

Clean all areas to be covered with the applique by using the supplied alcohol wipes. When cleaning, constantly use a new section of towel as you move from area to area.



CAUTION

- Do not grab the tape side with your fingers to avoid contaminating the tape & reducing adherence strength.
- These parts are to be installed when the ambient temperature is between 60°F - 80°F (16°C - 26 °C).
- Do not wash or expose the appliques to a wet environment for 24 hours after installation.
- The tape will set in 15-20 seconds after the installation.
- Do not reposition part once the tape has started to set/adhere to vehicle.



INSTALLATION INSTRUCTIONS - INTERIOR APPLIQUÉ

7. INSTALLATION PROCEDURE:

Fig. 1

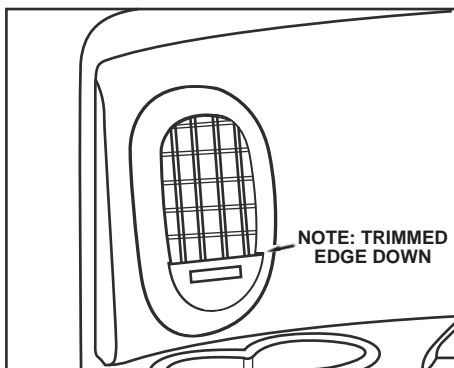


Fig. 2

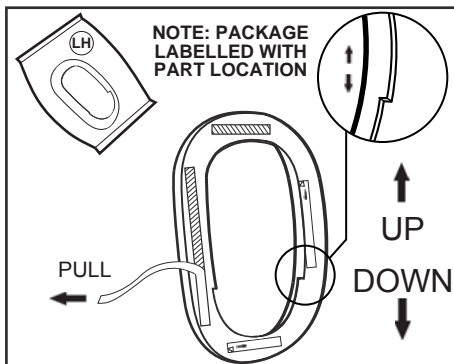


Fig. 3



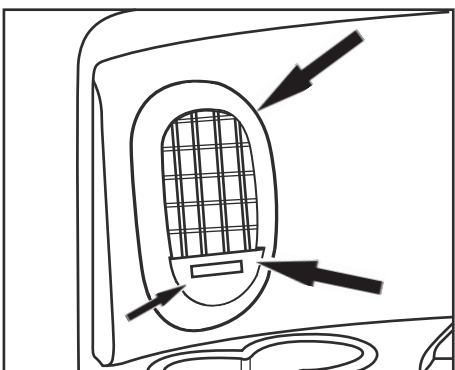


Fig. 4

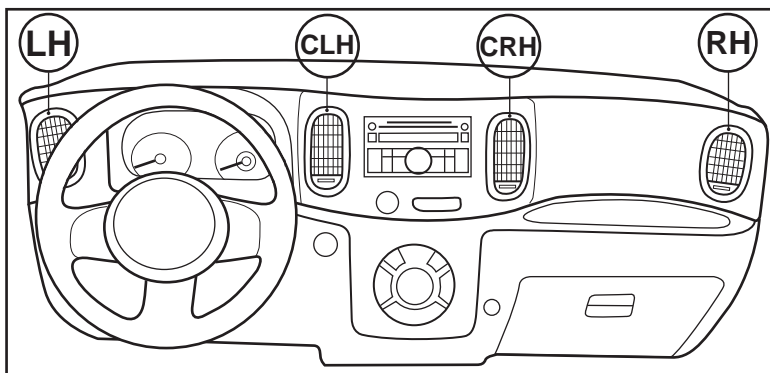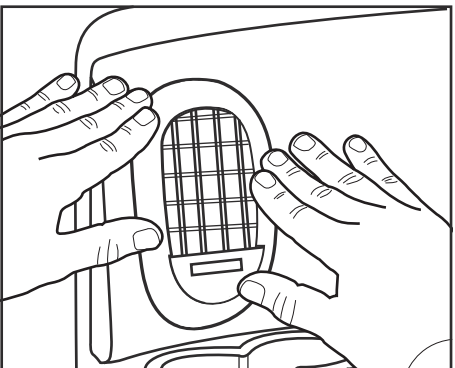

1. Installation of the HVAC Vent Covers

HVAC Vent Cover LH, Center LH, Center RH and RH (See Image Above)

****NOTE:** Always dry fit parts to ensure proper fit, alignment and component location. Components are labelled to indicate proper location.

- 1.1 Use an alcohol wipe to clean all four areas on the vehicle where the vent appliqué are to adhere.
- 1.2 Locate Left side HVAC Vent on vehicle and HVAC Vent Cover LH in kit (**Fig. 1-2**)
- 1.3 Establish top and bottom of HVAC Vent Cover LH during dry fit (**Fig. 2 - Trimmed edge down**)
- 1.4 Remove tape liner from back of HVAC Vent Cover LH (**Fig. 2**)
- 1.5 Carefully and lightly place part in position by aligning HVAC Vent Cover LH edge with dash edge surrounding HVAC Vent of the vehicle (**Fig. 3**)
- 1.6 Once HVAC Vent Cover LH is adjusted to the correct position, **press and hold firm pressure over entire surface for at least 30 seconds to ensure adhesion (Fig. 4)**
- 1.7 Repeat steps 1.2 to 1.6 for remaining HVAC Vent Covers



INSTALLATION INSTRUCTIONS - INTERIOR APPLIQUÉ

Fig. 5

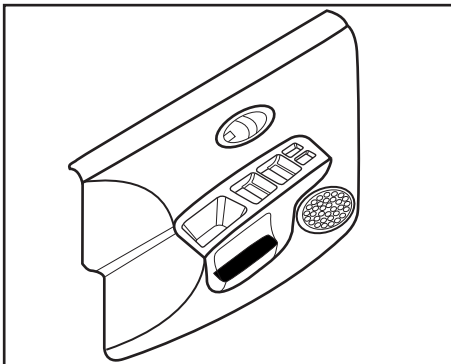


Fig. 6

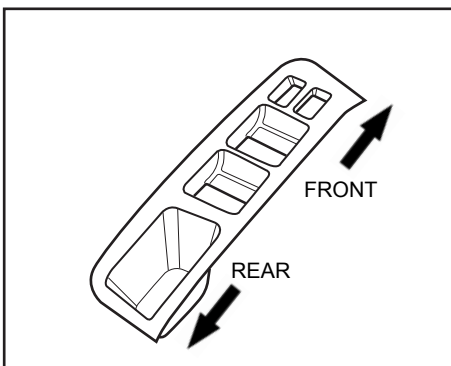


Fig. 7


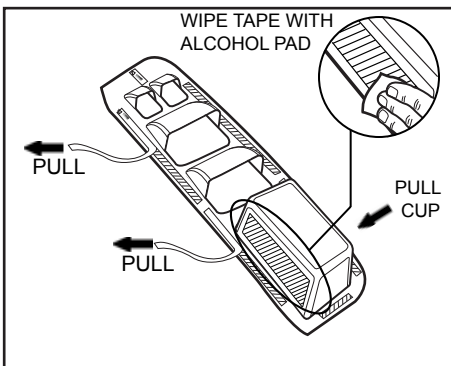


Fig. 8

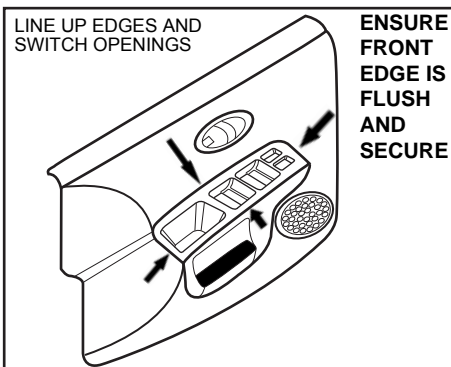

2. Installation of the Window Switch Control Finisher's

- Driver Front Window Switch Control Finisher
- Passenger Front Window Switch Control Finisher
- Driver Rear Window Switch Control Finisher
- Passenger Rear Window Switch Control Finisher

****NOTE:** Always dry fit parts to ensure proper fit, alignment and component location.

2.1 Locate Driver's side front window switch on vehicle and Driver Front Window Switch Control Finisher in kit (**Fig. 5**)

2.2 Establish front and rear of Driver Front Window Switch Control Finisher during dry fit (**Fig. 6**)
**** Ensure switches or other obstructions are clear and part fits tight to vehicle surface**

2.3 Remove all tape liner from back of Driver Front Window Control Finisher (**Fig. 7**)

2.4 Use an alcohol wipe to clean the area of the vehicle where this appliqué is to adhere. While using a new section of the alcohol wipe, wipe exposed tape on pull cup to assist ease of installation (**Fig. 7**)

2.5 Carefully and lightly place part in position by dropping it in straight down without bending the appliqué. Once in place, make sure all switches operate correctly with no obstructions (**Fig. 8**)

2.6 Once Driver Front Window Switch Control Finisher is adjusted to the correct position, **press and hold firm pressure over entire surface for at least 30 seconds to ensure adhesion** (**Fig. 9**)

2.7 Repeat steps 2.1 to 2.5 for remaining Window Switch Control Finisher's

Fig. 9

