



# GENUINE PARTS

## INSTALLATION INSTRUCTIONS


**DESCRIPTION:** Hide-away Trunk Net Kit

**APPLICATION:** Altima Sedan

**PART NUMBER:** 999C1 UX000

**KIT CONTENTS:**

Item	Qty.	Part Description	Service Part Number
A	1	Trunk Net	
B	2	Clips	84937 ZB000
C	1	Installation Instruction Replacement Template	

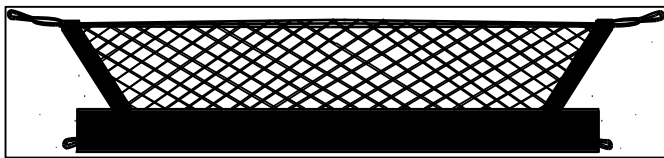

**A**



**B**



**C**

**TOOLS REQUIRED:**

- Flat Head Screw Driver

**PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:**

- Ensure that net is securely attached so cargo does not fall out during transit.
- Keep this installation instruction sheet with Vehicle Owner's Manual for future reference.
- Max load not to exceed 30 lbs.

**INSTALLATION PROCEDURE:**

NOTE: Passenger side shown. Repeat for driver side.

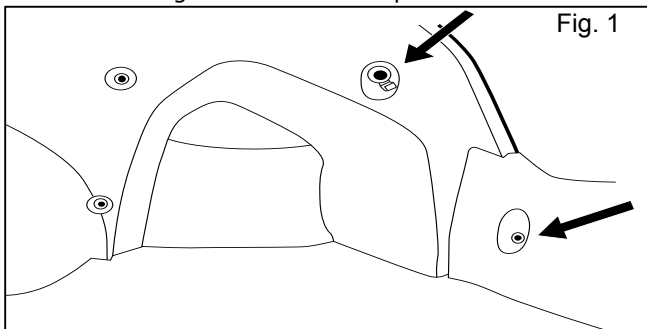


Fig. 1

1) Locate the attachment points in the trunk.

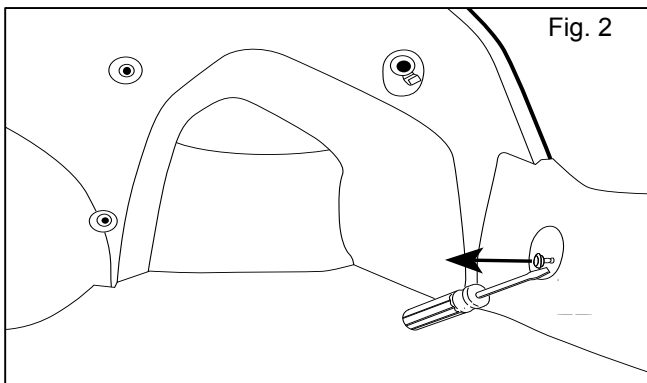



Fig. 2

2) Use a flat head screw driver to pry out the center portion of the trim clip. Once the center is partially out, the rest of the trim clip can be fully removed.




## GENUINE PARTS


### INSTALLATION INSTRUCTIONS

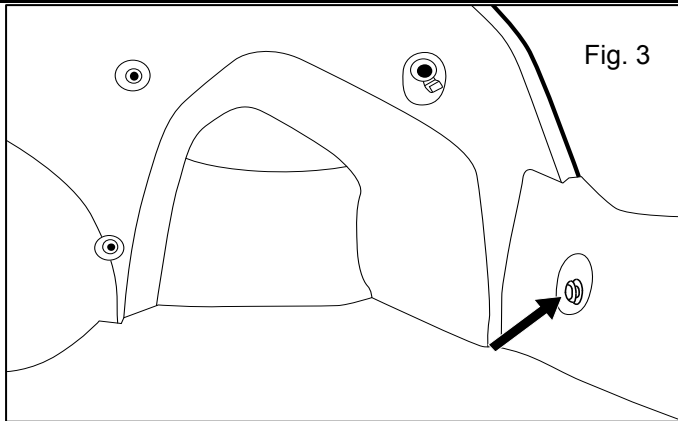

- 3) Install one (1) clip on each side of the vehicle. The center portion of the clip must be in the "popped out" position first. Push pointed end of clip into the hole until the clip base is flat against the trim panel. When fully seated in the hole, push in the center portion to secure the clip.

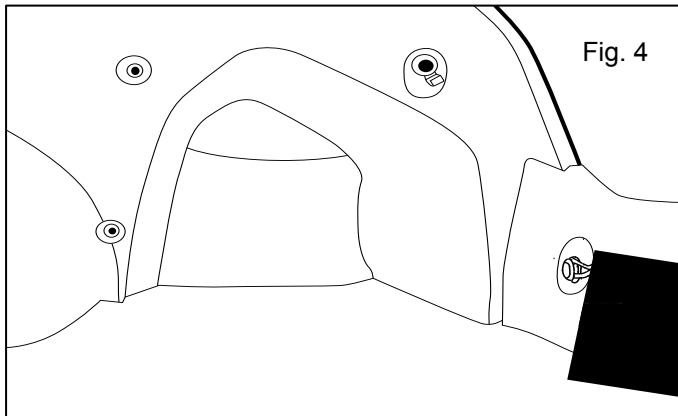

- 4) Position the pouch so the loops are toward the rear of the vehicle. Attach one loop to the lower clip on the passenger's side of the trunk. Repeat for the driver's side. The cargo net is stored in the hide-away pouch.

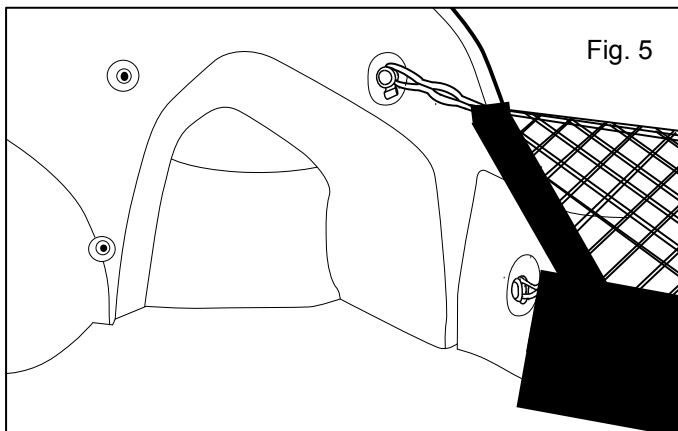

- 5) Unzip top of pouch and unfold the cargo net. Locate the net loop and attach to the upper clips on the passenger's side of the trunk. Repeat for driver's side.
- 6) To store cargo net in pouch, leave lower loops attached and simply detach the upper net loops. Fold cargo net into the hide-away pouch and zip closed.