





## GENUINE PARTS

### INSTALLATION INSTRUCTIONS

**DESCRIPTION:** Clear Rear Bumper Protector  
**APPLICATION:** Altima (2013)  
**PART NUMBER:** Clear Rear Bumper Protector (999T6 UZ000)

#### KIT CONTENTS:

Item	QTY	Part Description	Service Part Number
A	1	Clear Rear Bumper Film	N/A
B	1	Plastic Squeegee	N/A
C	1	Squeegee Sleeve	N/A
D	1	Installation Instructions Replacement Template	N/A




#### TOOLS REQUIRED:

- 90% Isopropyl Alcohol
- Joy Dish Soap
- 32 Ounce Spray Bottle
- Water
- Soft Lint Free Microfiber Cloth
- 3M Air Release Tool


#### PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer Installation Recommended.
- **Application Solution:** Fill a 32 spray bottle with 25% isopropyl alcohol, 75% water, and add 5-7 drops of dish soap.
- Install in a non-dusty environment.
- Thoroughly wash vehicle with soap and water.
- Use tabs when handling film so no finger prints are left on adhesive.


## INSTALLATION PROCEDURE:

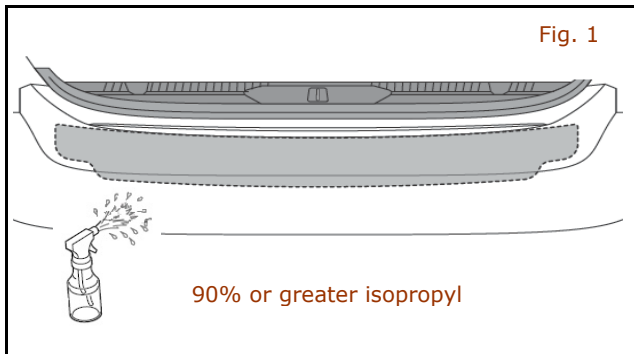

- 1) Using a clean lint free micro fiber cloth clean highlighted surface of rear bumper with 90% or greater isopropyl alcohol. Allow area to dry completely.

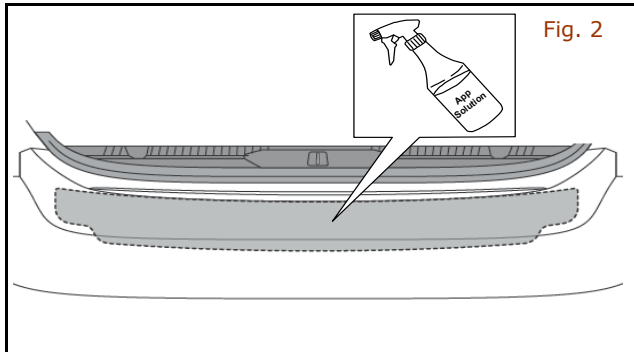


- 2) Spray highlighted bumper surface with application solution.

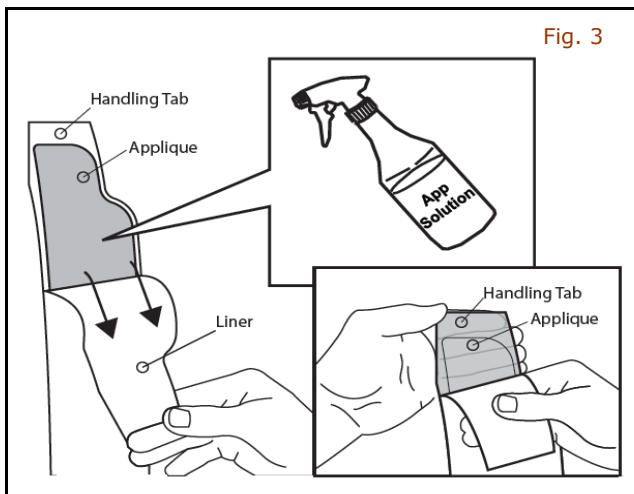


- 3) Hold part by handling tab and remove part liner.
- 4) Spray adhesive side with an even mist with application solution.

## INSTALLATION PROCEDURE: (continued)

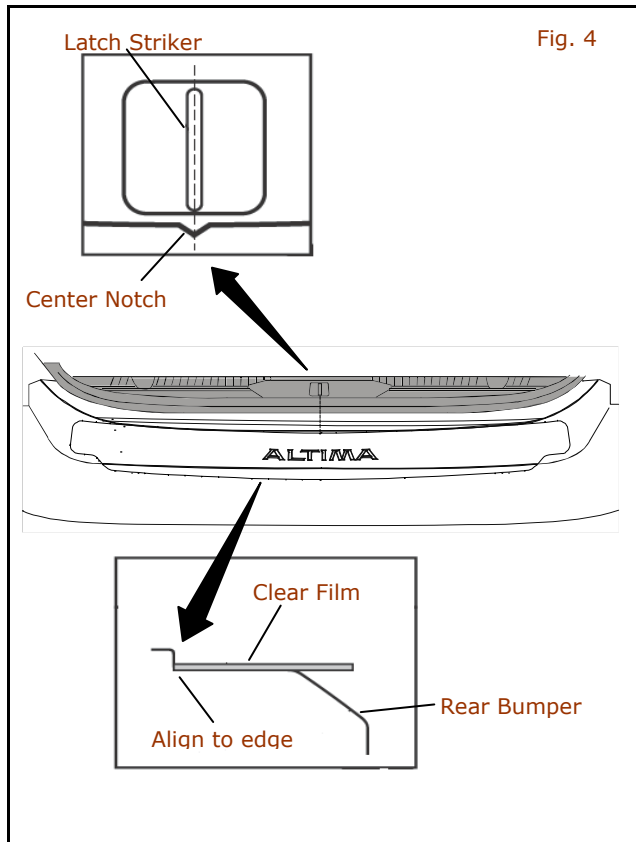


- 5) Align applique into position with notch to latch striker and film edge against bumper edge.

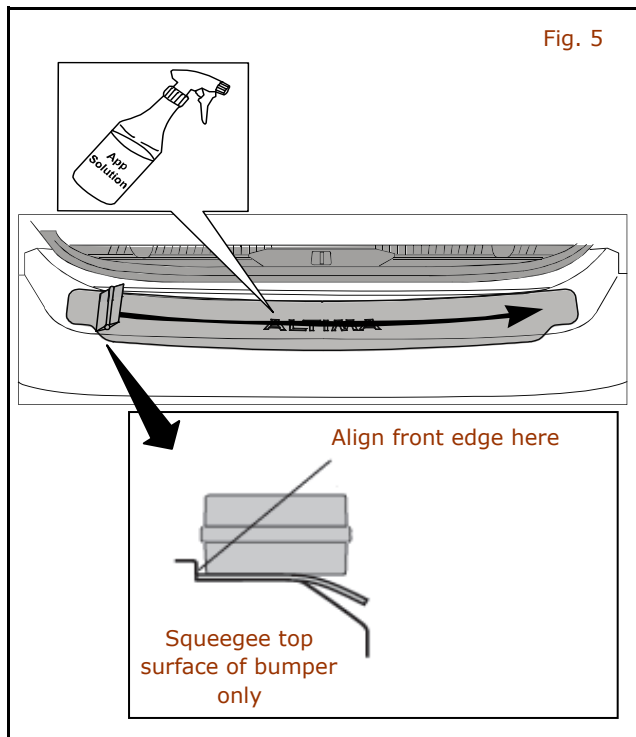

- 6) Spray top surface of premask with even mist of application solution.
- 7) Begin squeegee while lightly touching premask surface on top surface only.
- 8) As you drag squeegee apply firm pressure. This will aid in not leaving impression in part.
- 9) Firmly squeegee the applique down ONLY adhering on the top surface of the bumper.


## INSTALLATION PROCEDURE: (continued)

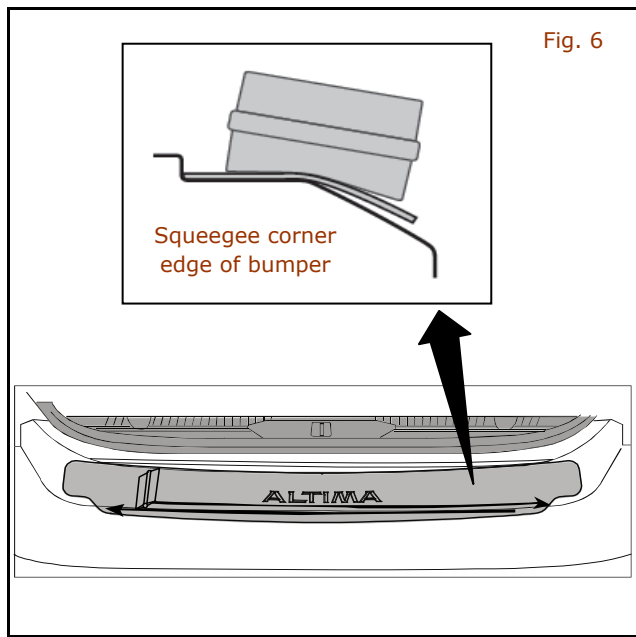


- 10) Firmly squeegee corner edge of bumper with three or four back and forth strokes in direction shown.

### NOTE:

**Make sure no bubbles are present before going to next step. Do not wrap edge at this time.**

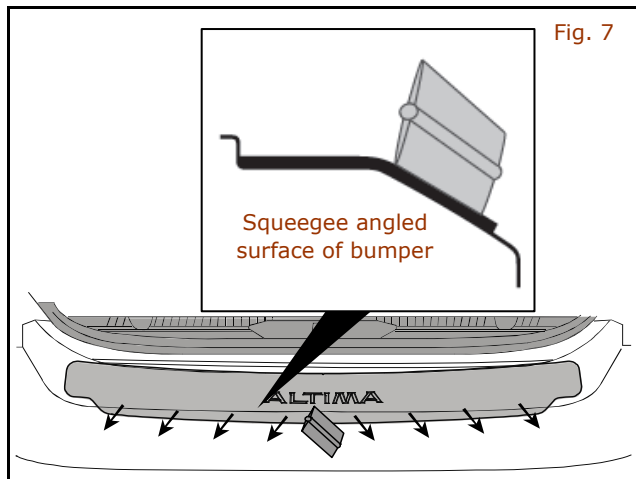

- 11) Adhere angled surface by holding squeegee at 45° angle and firmly squeegee from center to right with several strokes (repeat from center to left).
- 12) Make sure all air and water is removed from under applique. Re-squeegee any edges that may have lifted.

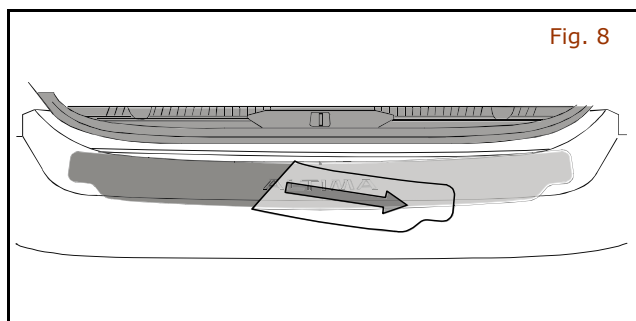

- 13) Remove premask top protective covering CAREFULLY 180° against itself.
- 14) Re-squeegee any edges that may have lifted.


### NOTE:

**An alcohol & water solution can be sprayed under edges if not adhering.**

### NOTE:

**Inspect for bubbles. If a bubble with application solution is located, re-squeegee using a firm, fast stroke. If the bubble persists, use a 3M air release tool to puncture the base of the bubble.**

**INSTALLATION PROCEDURE:** (continued)

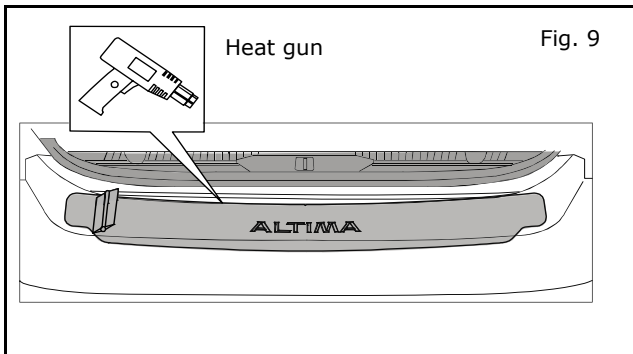

15) Use heat gun to secure edges.