



GENUINE PARTS


INSTALLATION INSTRUCTIONS


	ATION	Shift Knob Replacement Maxima	
ART N	UMBEF	R: T99N6 4RAxA (x - different colors)	
IT CO	NTENT	S:	
Item	Otv	Part Description	Service Part Number
A	Qty.	Shift Knob Replacement	T99N6 4RAxA
В	1	Installation Instruction Replacement Template	999V2 AW000
		A B	
	REQUI	RED: ose Pliers	
RE-IN	STALL/	ATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOT	TES:
		stallation Recommended. Instructions may refer to Service Mar	
· D.			luun
		A CAUTION	
		A CAUTION	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	
		aight. Never tap or apply any shock to install.	

INSTALLATION PROCEDURE:

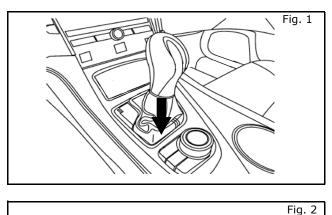

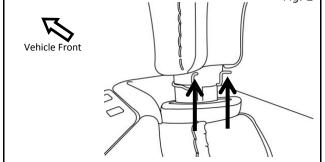

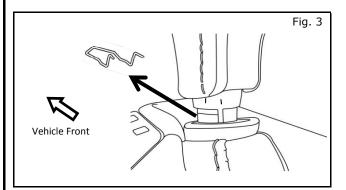

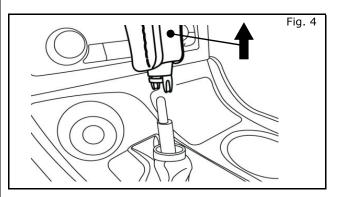


- 1) Apply the parking brake.
- 2) Make sure shifter is in "P" position.
- 3) Grip the top of shift boot at the selector lever knob and slide the shift boot down. (Fig. 1)
- 4) Locate the 2 ends of the spring clip. (Fig. 2)
- 5) Use needle nose pliers to grip one end of the spring clip and use your fingers to push out the other end of the spring clip.

6) Gently spread the spring clip open and slide forward to remove. **(Fig. 3)**

7) Pull up the shift knob from the selector lever and discard clip and knob. **(Fig. 4)**

INSTALLATION PROCEDURE:

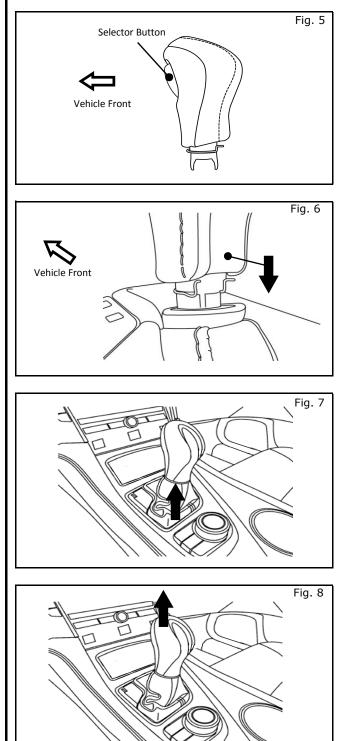

8) Orient the new knob so the selector button is facing forward. **(Fig. 5)**

9) Insert the new shift knob into the selector lever until it clicks. **(Fig. 6)**

Slide shift boot back up onto the shift knob.
(Fig. 7)

11) Pull the knob up by hand to confirm it is properly secured in position. **(Fig. 8)**