



GENUINE PARTS

INSTALLATION INSTRUCTIONS


DESCRIPTION: Splash Guard-Rear

APPLICATION: Titan, with over fender


PART NUMBER: 999J2 W4004

KIT CONTENTS:

| Item | Qty. | Part Description | Service Part Number |
|------|------|---|---------------------|
| A | 1 | Splash Guard - Rear Right | 999J2 W4008 |
| B | 1 | Splash Guard - Rear Left | 999J2 W4007 |
| C | 2 | Grommet | 12-81 00441 |
| D | 6 | Philips Head Screw - 20mm | 14-51 00891 |
| E | 1 | Installation Instruction Replacement Template | N/A |

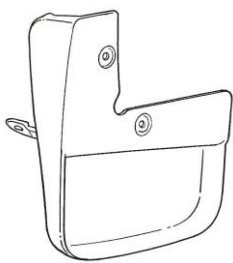

A

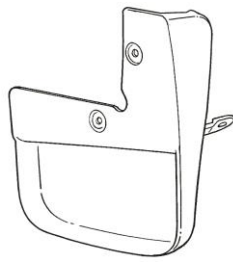

B



C



D



E

TOOLS REQUIRED:


- clean rag
- soap & water
- #2 phillips screw driver

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.
- Dealer Installation Recommended.
- Parts to be installed at room temperature.


INSTALLATION PROCEDURE:

Fig. 1

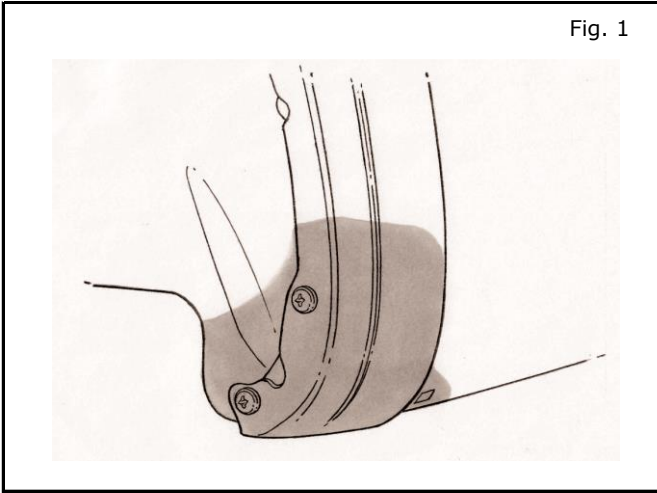


1) Clean shaded area with soap and water mixture and dry.

Fig. 2

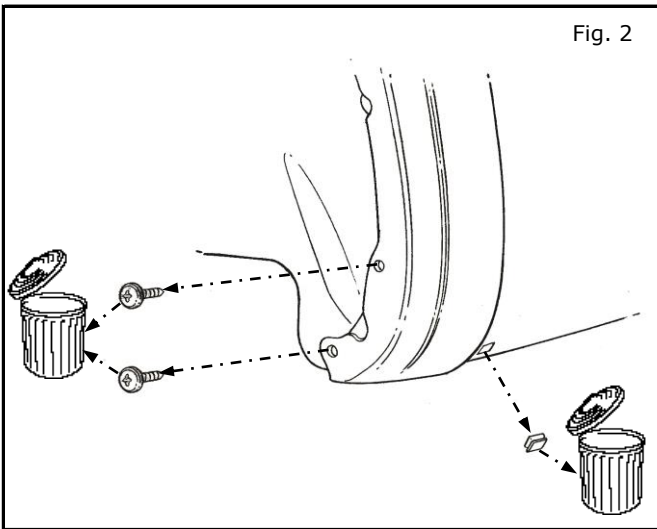


2) Remove existing screws -15mm and hole plug and discard.

Fig. 3

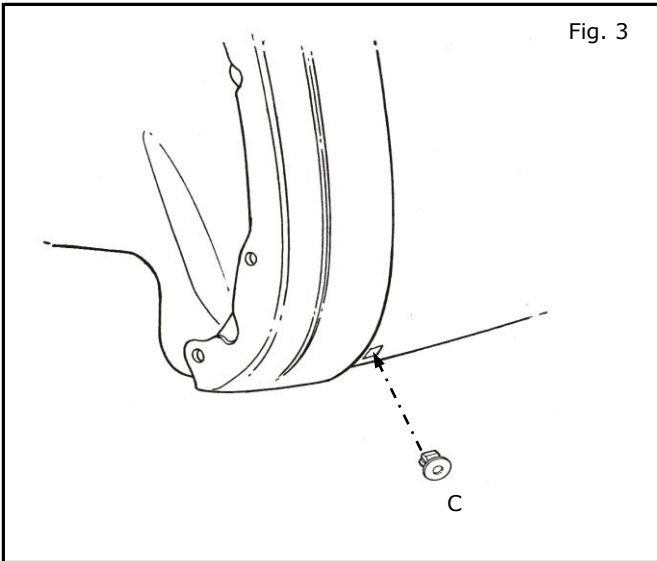


3) Install supplied grommet (C).

INSTALLATION PROCEDURE: (continue)

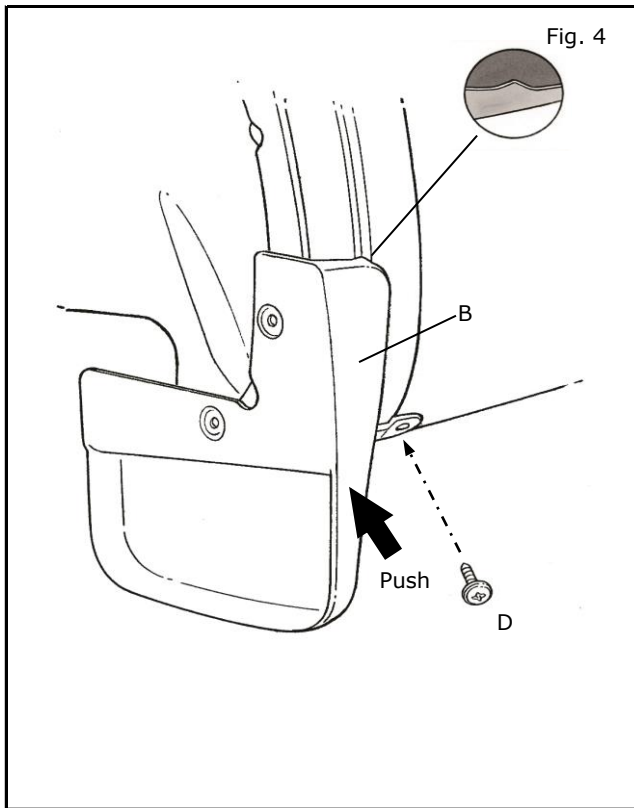

- 4) Align front splash guard to vehicle.
- 5) Hold splash guard up and into vehicle and install supplied screw - 20 mm (D) in lower mount tab hole and tighten.

NOTE:
Do not over tighten screw. Reference Tighten Torque: 3.8~4.4N-m {34~39 in-lb}

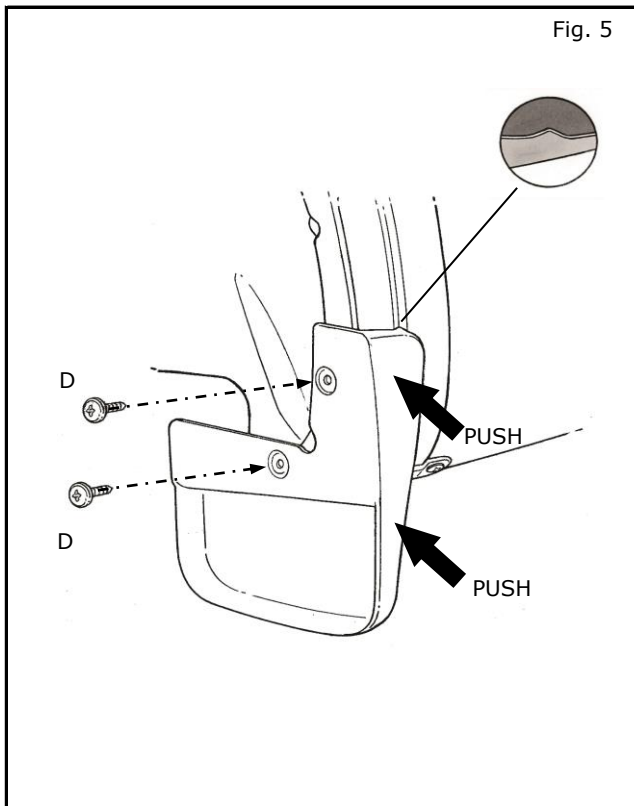

- 6) Install supplied screws - 20mm (D) in middle then top hole, push up and into vehicle while tightening.

NOTE:
Do not over tighten screw. Reference Tighten Torque: 3.8~4.4N-m {34~39 in-lb}