



GENUINE PARTS

INSTALLATION INSTRUCTIONS


1. DESCRIPTION: Rear Splash Guard Kit

2. APPLICATION: Sentra SER


3. PART NUMBER: 999J2 LTxxxS4

4. KIT CONTENTS:

Item	QTY	Description	Part Number
A	1	Splash Guard – Rear Right	93820 ET80A
B	1	Splash Guard – Rear Left	93821 ET80A
C	6	Screw	14-51 00891
D	6	Spring Clip	12-41 01011
E	2	Push Pin	15-53 09241
F	1	Installation Instructions Replacement Template	999V2 AW000

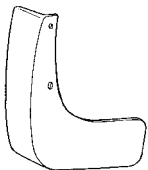

A

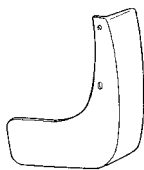

B



C



D



E



F

5. TOOLS REQUIRED:


- clean rag
- mild soap / water mixture
- marker / awl
- standard screwdriver
- #2 phillips screwdriver
- drill
- 6mm (1/4") drill bit

6. PRE-INSTALLATION NOTES:


- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit


7. INSTALLATION PROCEDURE:

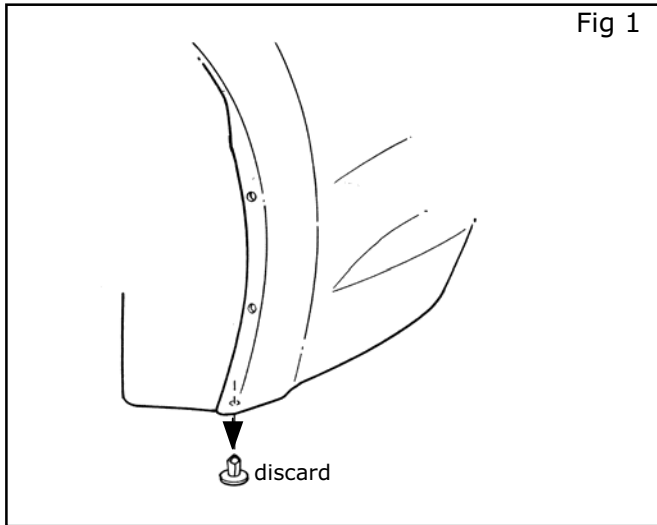

- 1) Remove existing hardware.
 - a) Remove and discard push pin.
 - b) Clean installation surface.

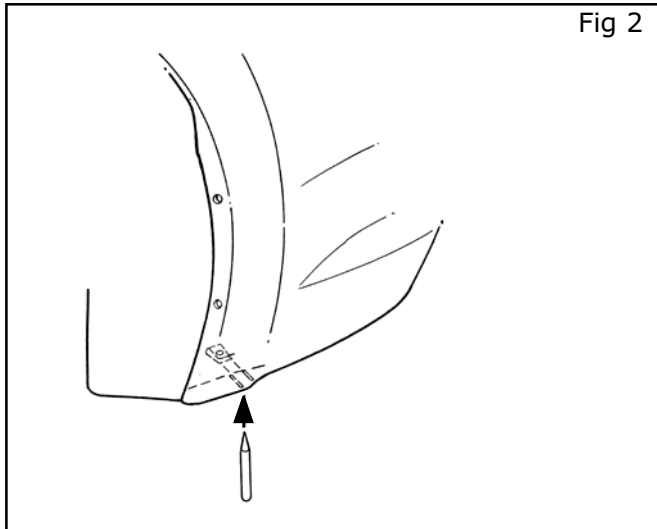

- 2) Mark hole location.
 - a) Slide a spring clip between two ribs on the top side of fascia (flat side down).
 - b) Mark location of hole center.
 - c) Remove spring clip.

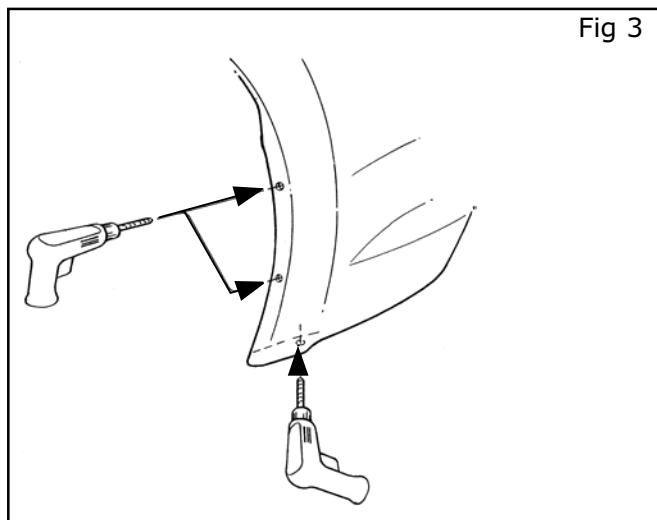

- 3) Drill hole.
 - a) Pull out bottom of fascia and drill 6mm (1/4") holes at (2) dimple locations and (1) marked location.
 - b) Remove debris and burrs from holes and fascia surface.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit

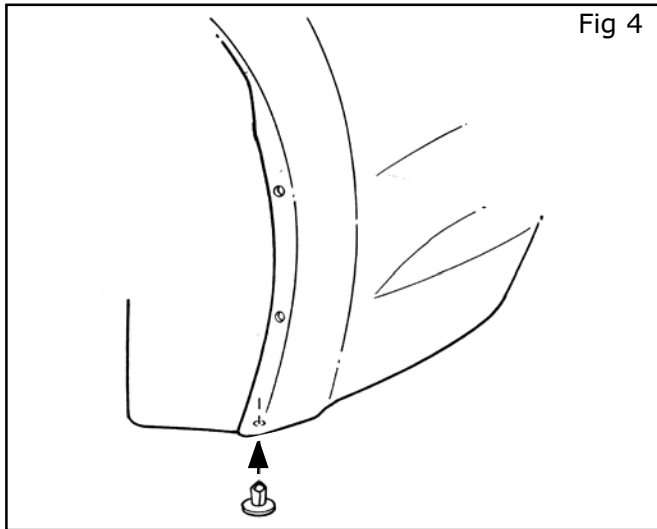


Fig 4

- 4) Install push pin.
 - a) Install supplied push pin into fascia and liner.

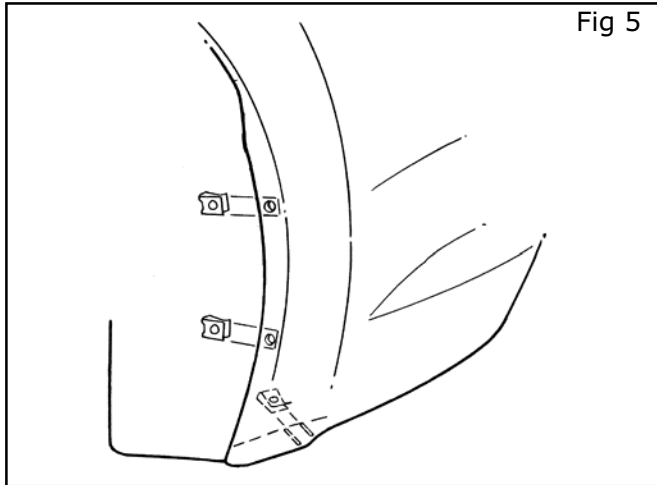


Fig 5

- 5) Install spring clips.
 - a) Install spring clips over the drilled holes (3 locations).

NOTE:
INSTALL SPRING CLIP WITH FLAT SIDE ON OUTSIDE OF FASCIA.

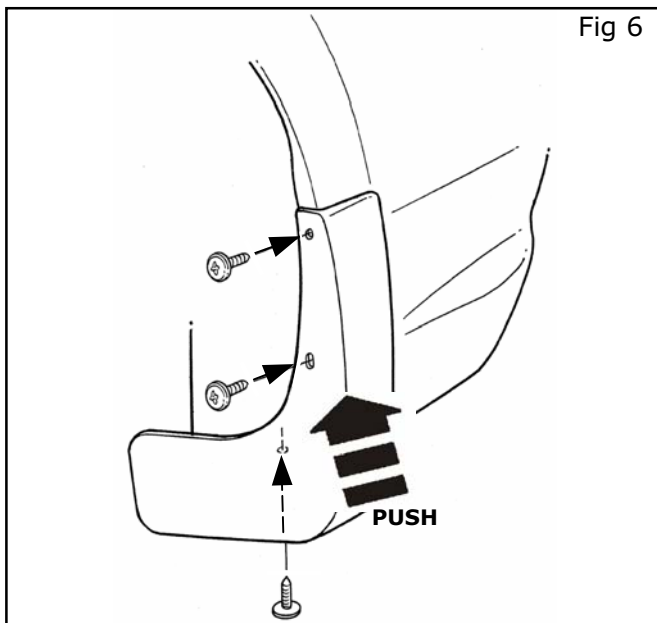


Fig 6

- 6) Install rear splash guard.
 - a) Align splash guard to vehicle.
 - b) Push inward, upward and rearward.
 - c) Install underside supplied screw.
 - d) Install upper supplied screw.
 - e) Install lower supplied screw.

NOTE:
HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE TIGHTENING THE SCREWS TO ENSURE NO GAP OCCURS BETWEEN FENDER AND SPLASH GUARD.