



## GENUINE PARTS

### INSTALLATION INSTRUCTIONS

1. **DESCRIPTION:** Accent Lighting Kit
2. **APPLICATION:** Versa (2007)
3. **PART NUMBER:** 999F3 4U000
  - Front Footwell and console cupholder Accent Lighting

#### 4. KIT CONTENTS:


| Item | QTY | Description                   | Service Part Number |
|------|-----|-------------------------------|---------------------|
| A    | 1   | Control Module                | 999F3 VU000S2       |
| B    | 1   | Encoder                       | 999F3 VU000S4       |
| C    | 1   | Front footwell light assembly | 999F3 4U000S1       |
| D    | 1   | Cupholder light assembly      | 999F3 VU000S1       |
| E    | 1   | Installation Kit              | 999F3 VU000S6       |
| F    | 1   | Power Cable (Not Shown)       |                     |
| G    | 1   | Knob (Not Shown)              | 999F3 VU000S3       |




A



B

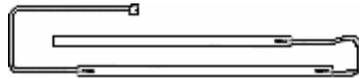

C

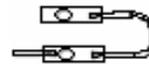

D



E

5. **TOOLS REQUIRED:**
  - Trim stick
  - 10, 11, 13 and 14 mm sockets
  - #2 Phillips screwdriver
  - Protective cloth
  - Ratchet and 6" extension
  - 5/16", 3/16" and 9/32" drill bits, drill
  - T-20 Torx bit
  - Scissors
  - Electrical Tape; Masking tape

#### 6. PRE-INSTALLATION CAUTIONS/NOTES:

- Dealer Installation Recommended. Instructions refer to Service Manual.
- Installation requires special tools.
- This part is to be installed at a surface temperature of 65-100°F.
- Remove and prepare templates from the end of Installation Instructions.



### CAUTION

- This accessory must only be installed as specified by these instructions.

# INSTALLATION INSTRUCTIONS - Accent Lighting Kit

## 7. INSTALLATION OVERVIEW:

Versa (2007~)

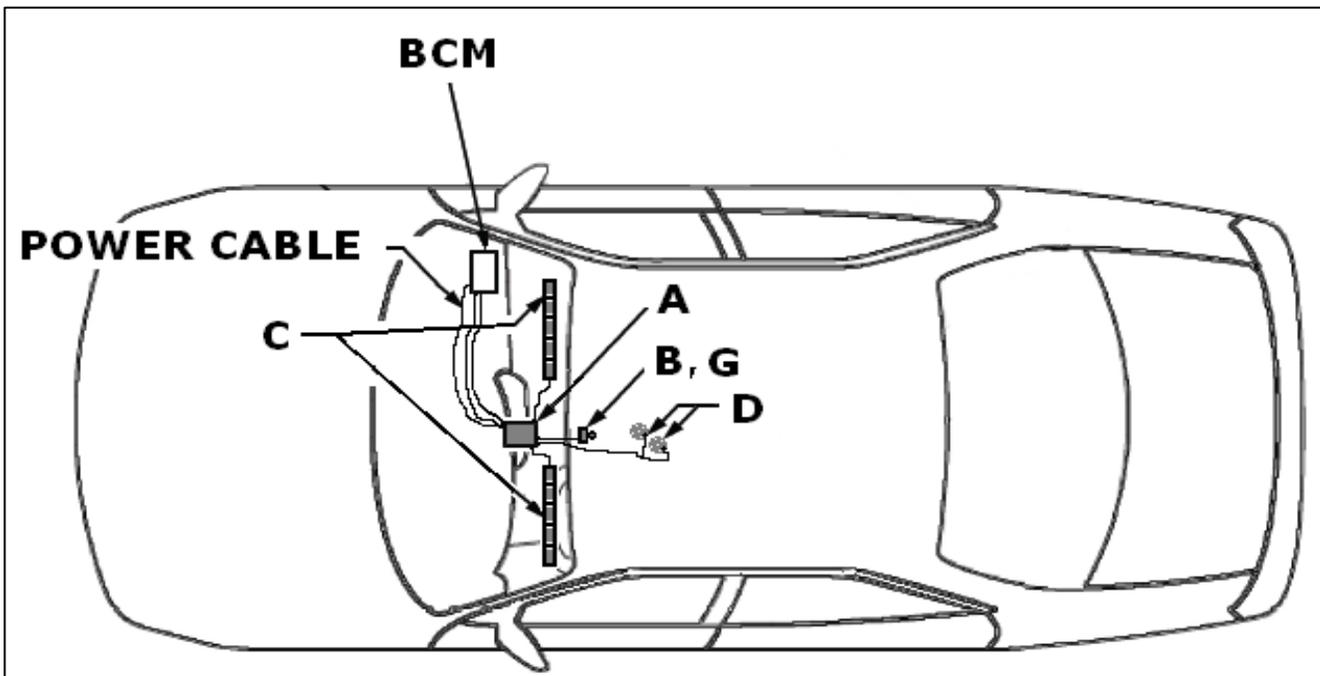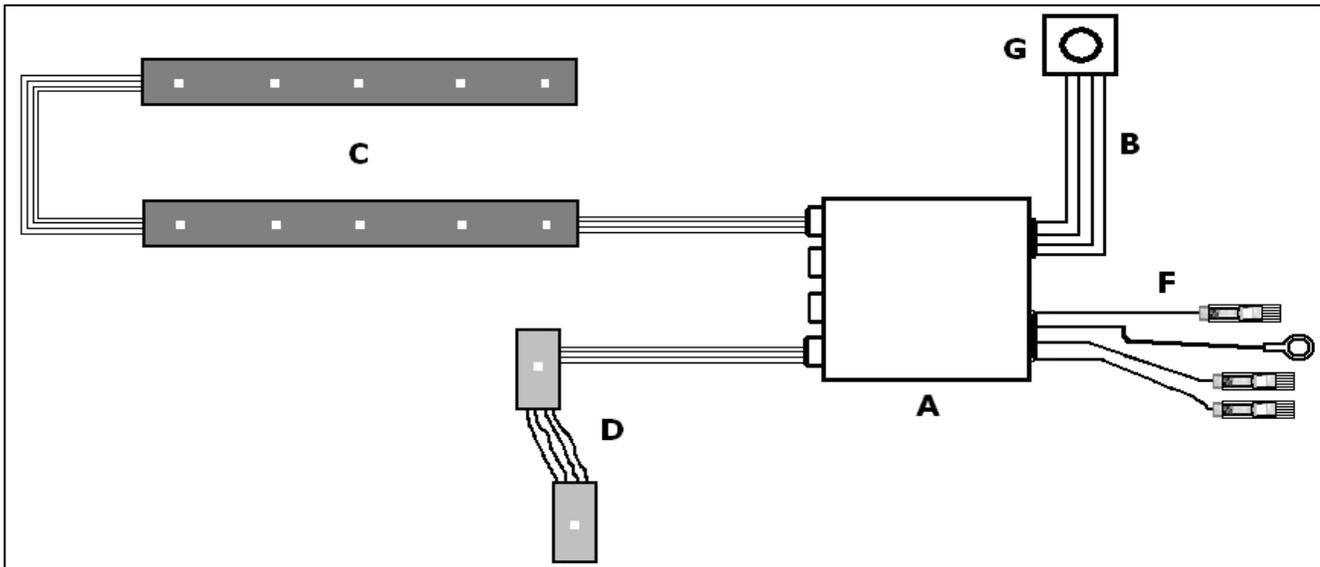

## 8. CRITICAL STEPS:

The following steps are critical and must be performed EXACTLY as specified to ensure proper installation:

- Location of the lights must be followed exactly as described in this instruction.
- Posi-Tap™ instructions must be specifically followed as described.

# INSTALLATION INSTRUCTIONS - Accent Lighting Kit

## 9. VEHICLE PREPARATION:

Versa (2007~)

- 1) Vehicle Preparation
  - a) Record customer radio presets.


|          | 1 | 2 | 3 | 4 | 5 | 6 |
|----------|---|---|---|---|---|---|
| <b>A</b> |   |   |   |   |   |   |
| <b>B</b> |   |   |   |   |   |   |
| <b>C</b> |   |   |   |   |   |   |

- b) Apply parking brake.
- c) Turn off the ignition.
- d) Place A/T Shifter in DRIVE.
- e) Disconnect battery negative terminal.

**NOTE: USE CAUTION WHEN REMOVING/RE-INSTALLING TRIM COMPONENTS TO AVOID DAMAGE, SCRATCHES, BREAKING OF CLIPS AND/OR INTERIOR TRIM PANELS. MOVE ALL TRIM COMPONENTS TO A PROTECTED AREA.**

- 2) Remove the following interior parts as shown. Refer to the vehicle service manual.


- |   |                       |                              |
|---|-----------------------|------------------------------|
| a) Console mask                         | e) Shifter finisher   | j) Instrument side finisher  |
| b) Console mask cover                   | f) Console body ass'y | k) Instrument lower finisher |
| <b>Note: For M/T, remove shift knob</b> | g) Center console     | l) Glove box assembly        |
| c) Console rear finisher                | h) Fuse block lid     | m) Rear cup holder           |
| d) LH and RH instrument lower covers    | i) Side mask LH       |                              |

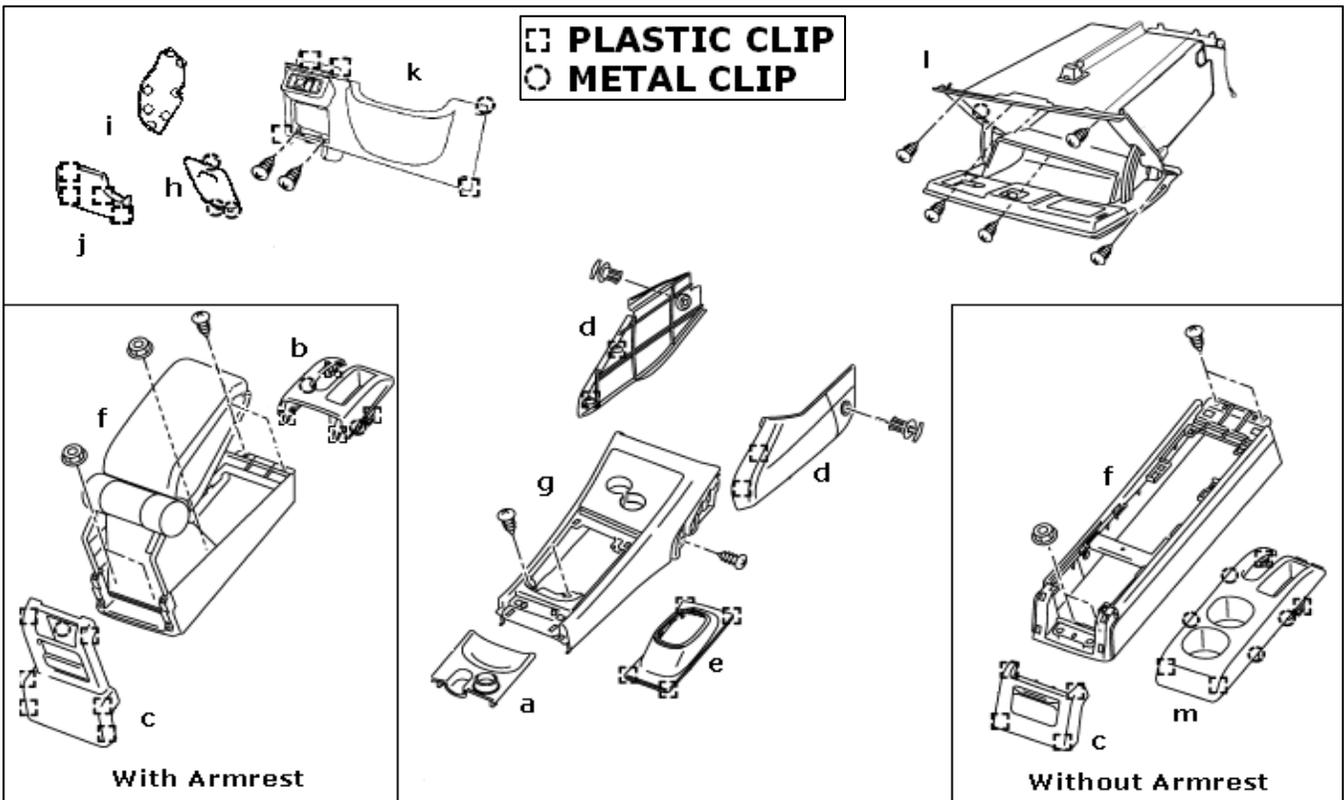

# INSTALLATION INSTRUCTIONS - Accent Lighting Kit

## 10. INSTALLATION PROCEDURE:


Versa (2007~)

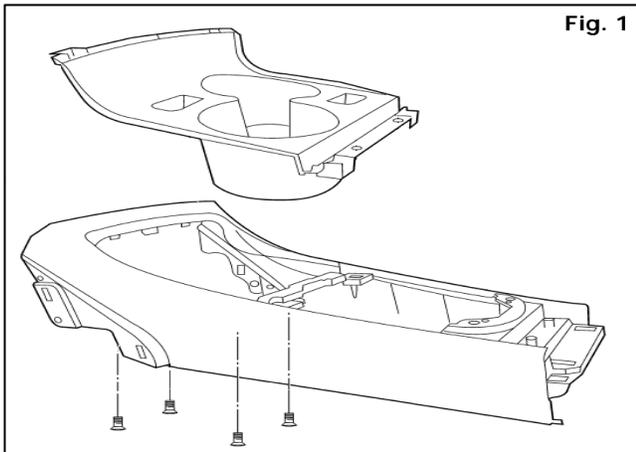


- 1) Remove (4) Phillips screws attaching Cupholder.

### CAUTION

- Use only a 9/32" drill to avoid damage to Cupholder. Holes larger than 9/32" will not retain LED's.
- Use a drill stop to avoid damage to the Cupholder.

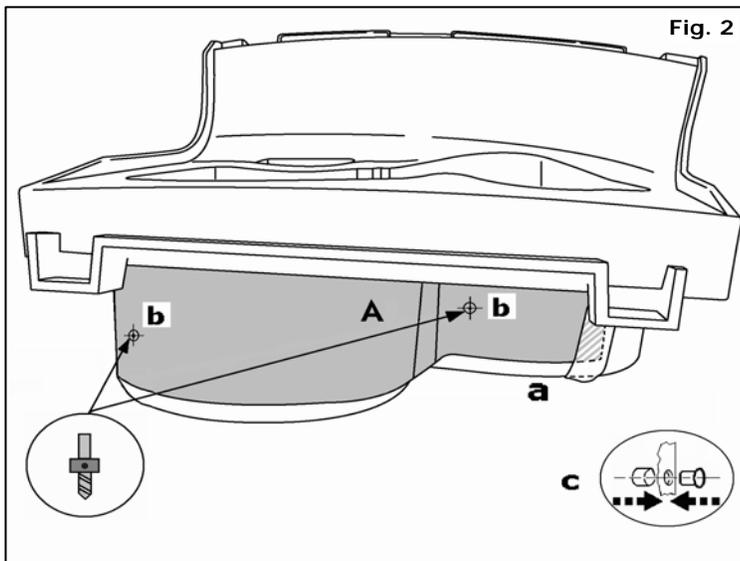

- 2) Prepare Cupholder for LEDs.
  - a) Tape LED template (A) to cupholder.
  - b) Mark and drill (2) 9/32" holes.
  - c) Snap in Cupholder LED Lenses and lens retainers.

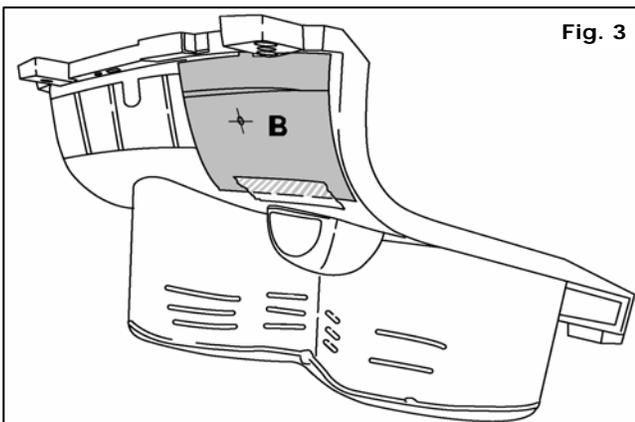


- 3) Prepare Cupholder for Encoder.
  - a) Tape Encoder template (B) to cupholder.
  - b) Mark and drill (1) 5/16" hole.


# INSTALLATION INSTRUCTIONS - Accent Lighting Kit

## 10. INSTALLATION PROCEDURE:


Versa (2007~)

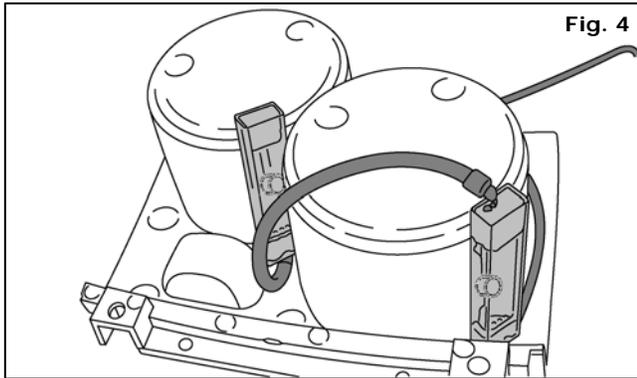

- 4) Install Cupholder LED's and Encoder.
  - a) Clean mounting area with alcohol wipe.
  - b) Peel double-sided tape liner and place each Cupholder light assembly as shown.

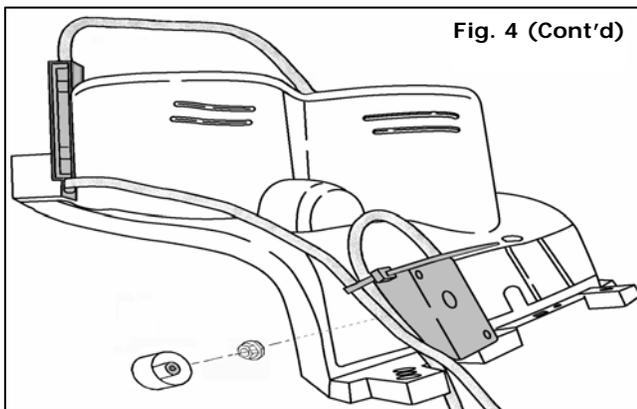


- c) Install Encoder, 11mm Lock Nut and Knob.
  - d) Route LED wires next to Encoder wires and install 4" cable tie.
  - e) Reinstall Cupholder and (4) Phillips screws to center console.

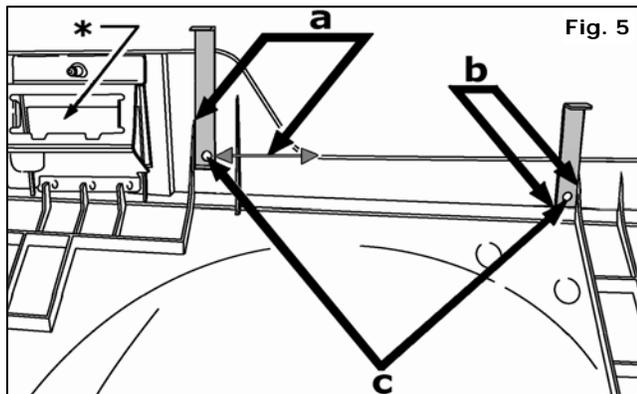

- 5) Prepare Instrument Lower Finisher.
  - a) Align Long bracket to finisher rib and bracket hole to finisher edge as shown. Mark the hole.
  - b) Align Medium bracket to finisher rib and flat finisher surface before break. Mark the hole.
  - c) Drill (2) 3/16" holes at marked locations.

★ (OBD Connector)

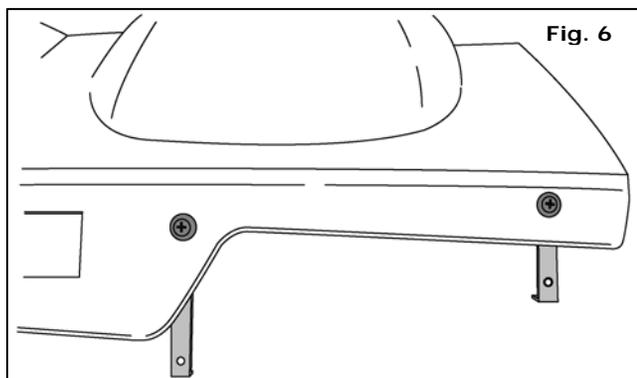


- 6) Install the brackets.
  - a) Clean mounting area with alcohol wipe.
  - b) Peel off double-sided tape liner from brackets.
  - c) Install brackets to lower finisher with holes aligned.
  - d) Install (2) Phillips screws from Kit.

# INSTALLATION INSTRUCTIONS - Accent Lighting Kit


## 10. INSTALLATION PROCEDURE:

Versa (2007~)

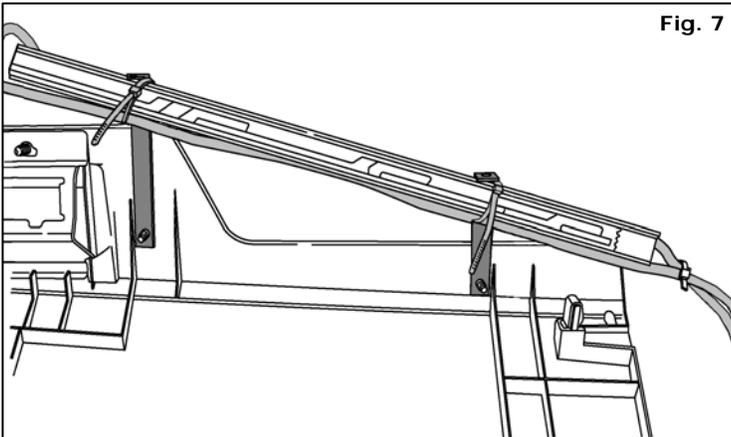


- 7) Install Driver side light assembly.
  - a) Clean mounting area with alcohol wipe.
  - b) Peel off double-sided tape liner from light assembly.
  - c) Press assembly on top and to end of bracket with tape centered on brackets.
  - d) Install (2) 4" cable ties around wire, light assembly and brackets.  
Trim excess tie.

**NOTE: ENSURE LED'S ARE NOT BLOCKED BY CABLE TIES, WIRING, BRACKETS ETC.**

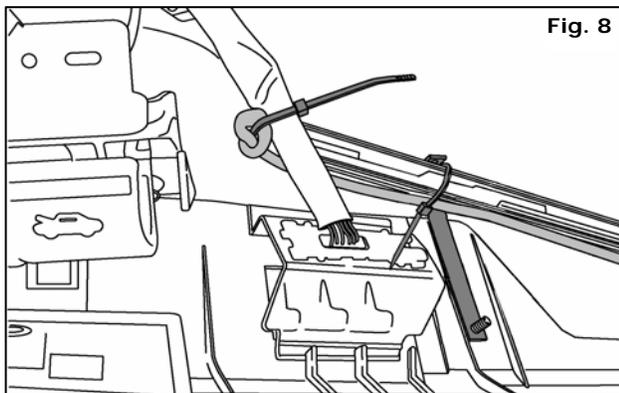

- 8) Reinstall Instrument lower finisher.
  - a) Reinstall OBD connector to finisher.
  - b) Add 4" cable tie to secure wire loop on light stick to OBD harness as shown.
  - c) Reinstall Instrument lower finisher.

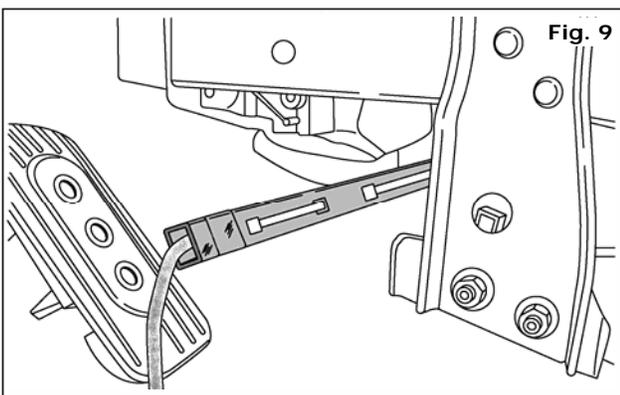


- 9) Route Passenger side light assembly behind IP brace as shown.


# INSTALLATION INSTRUCTIONS - Accent Lighting Kit

## 10. INSTALLATION PROCEDURE:

Versa (2007~)

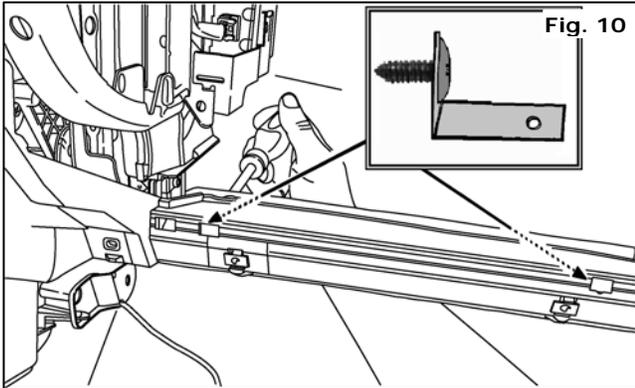


- 10) Install Passenger side brackets.
- a) Remove (2) Phillips IP screws.
  - b) Install the (2) Short brackets under IP screws and reinstall.

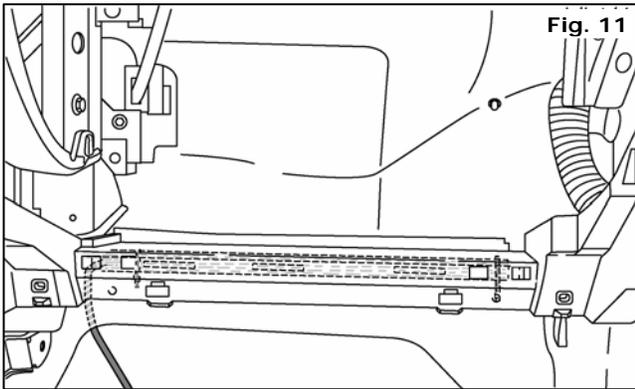

- 11) Mount Passenger side light assembly.
- a) Clean bracket surface with alcohol wipe.
  - b) Peel off double-sided tape liners from light assembly.
  - c) Press light assembly on top of brackets with tape centered over brackets.
  - d) Install (2) 4" cable ties through bracket holes, around wire, light assembly and brackets.

**NOTE:**

**ENSURE LED'S ARE NOT BLOCKED BY CABLE TIES, WIRING, BRACKETS ETC.**

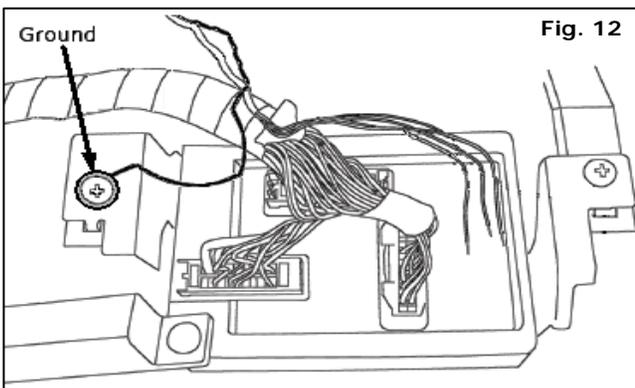

- 12) Connect Accent Lighting Ground.
- a) Remove Phillips screw from left BCM bracket.
  - b) Install Accent Lighting Ground eyelet under screw and reinstall.

# INSTALLATION INSTRUCTIONS - Accent Lighting Kit



## 10. INSTALLATION PROCEDURE:

Versa (2007~)

### ⚠ CAUTION


- If vehicle wire is being used by another accessory, tap the other accessory wire and not vehicle wire.

- 13) Tap Accessory Light Green wire to Light Green wire, Cavity 57 of Black BCM connector M20.  
See steps 14-18 for wire tap installation instructions.

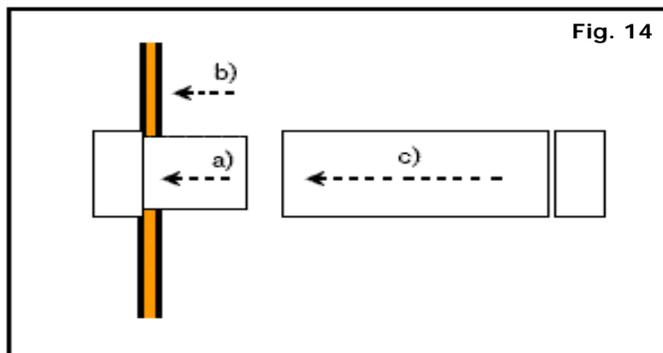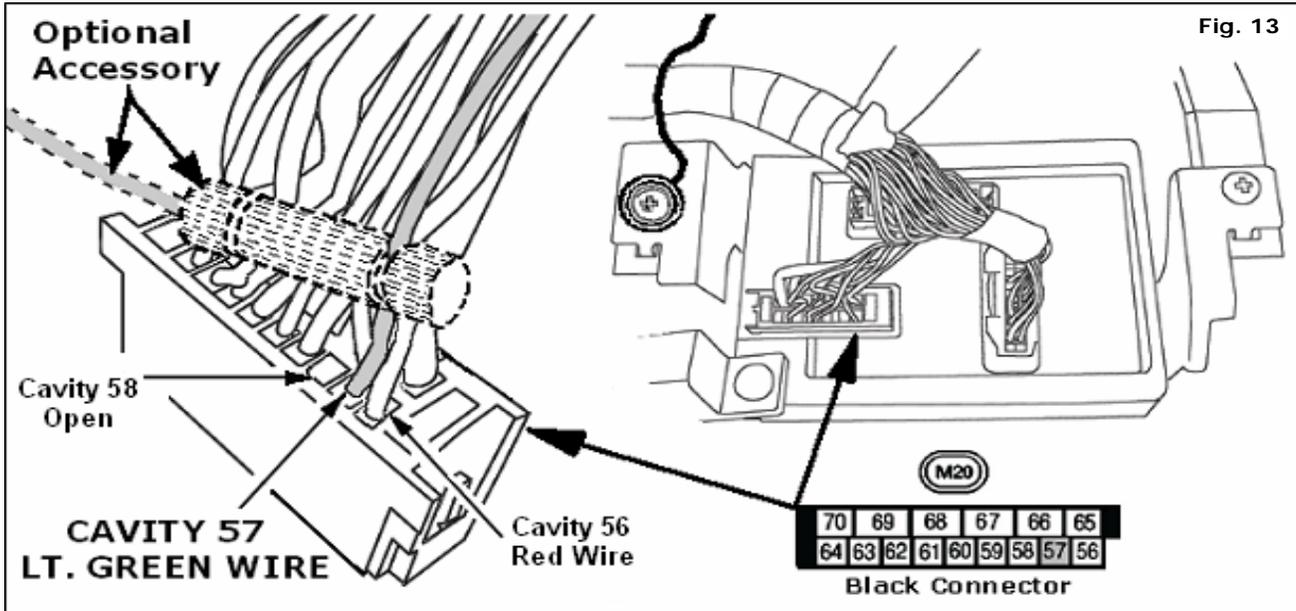

- 14) Tap vehicle wire.  
a) Remove cap (slot side) from tap body.  
b) Slide cap around vehicle wire.  
c) Tighten the tap TIGHT with finger pressure.

**NOTE:**  
**DO NOT RE-USE THE TAP FOR SUBSEQUENT RE-INSTALLATION.**

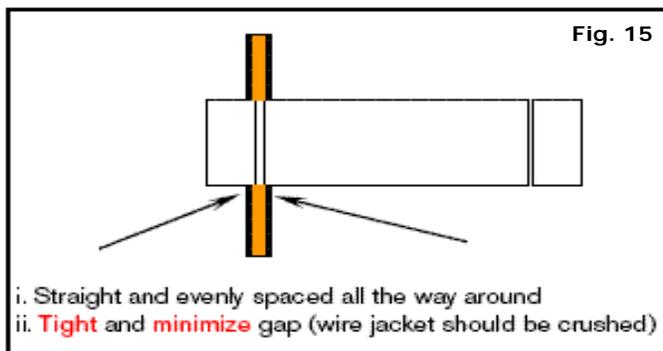


- 15) Inspect the tap to ensure correct installation.

**NOTE:**  
**AVOID PUTTING PRESSURE ON THE WIRE AND TAP FOR THE REST OF THE INSTALL.**


# INSTALLATION INSTRUCTIONS - Accent Lighting Kit

## 10. INSTALLATION PROCEDURE:


Versa (2007~)

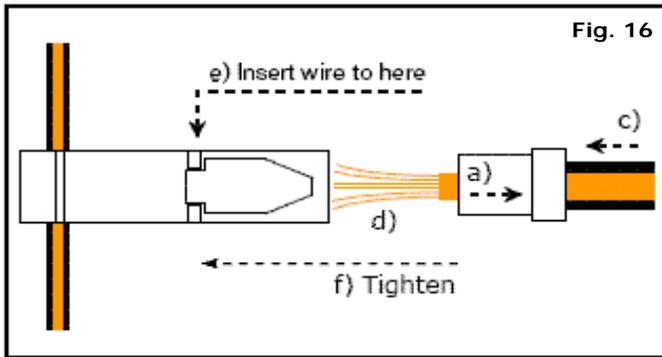

- 16) Tap the Light Green wire from the Accessory harness.
- Remove tap (non-pierce) side from tap.
  - Remove protective stub from wire.
  - Insert wire through the non-pierce side opening.
  - Spread the individual strands into a fan shape.
  - Insert wire into tap body and ensure it is all the way in.
  - Tighten the tap TIGHT with finger pressure.

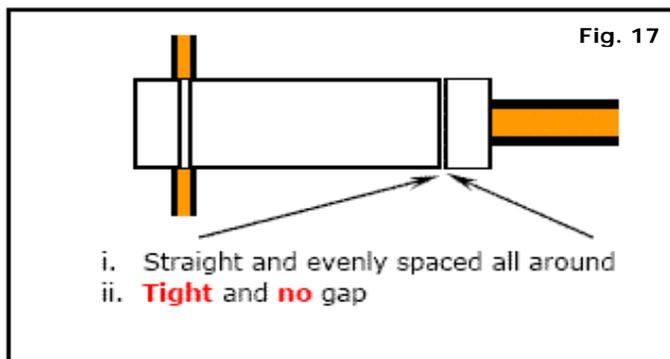

- 17) Confirm installation of the tapped accessory wire.
- Inspect the tap to ensure correct installation.
  - Test the signal to ensure it is working properly.

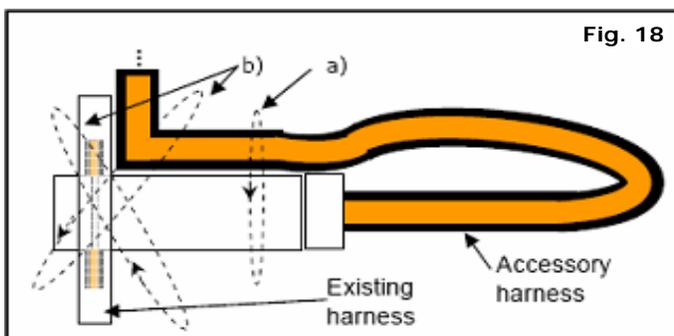


- 18) Secure the tap.
- Secure tapped wire on the non-pierce side to an existing anchor point such as harness, clip, metal structure, etc. within 1" (25.4mm) with electrical tape ( $\geq 2$  revolutions).
  - Secure the body to an existing anchor point such as harness, clip, metal structure etc. nearby with electrical tape. ( $\geq 2$  revolutions).

# INSTALLATION INSTRUCTIONS - Accent Lighting Kit


## 10. INSTALLATION PROCEDURE:

Versa (2007~)

- 19) Tap Accessory Brown wire to the Brown wire, Cavity 63 of BCM connector M20.  
See steps 14-18 for wire tap installation instructions.

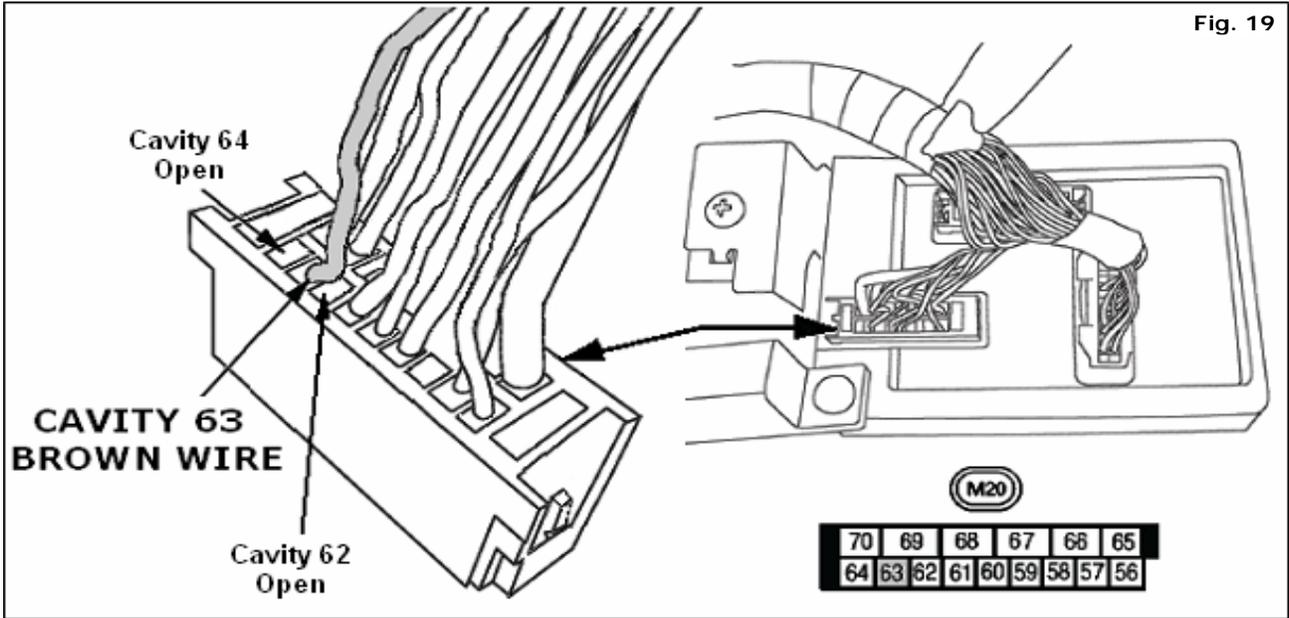


- 20) Tap Accessory Blue wire to the Dark Blue wire, Cavity 11 of BCM connector M18.  
See steps 14-18 for wire tap installation instructions.

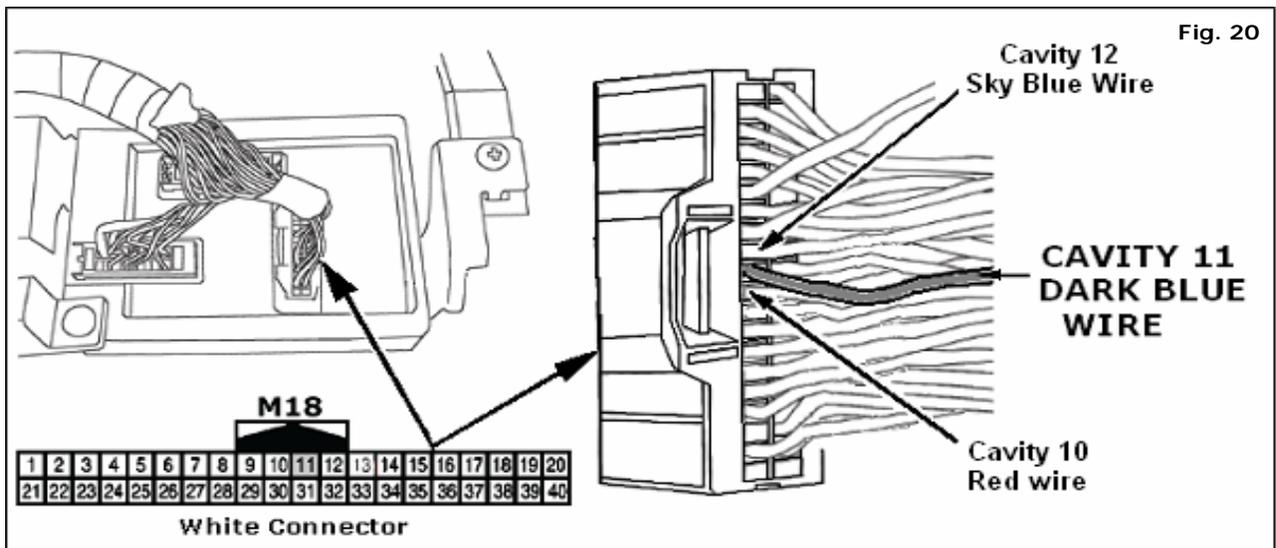


# INSTALLATION INSTRUCTIONS - Accent Lighting Kit

## 10. INSTALLATION PROCEDURE:

Versa (2007~)

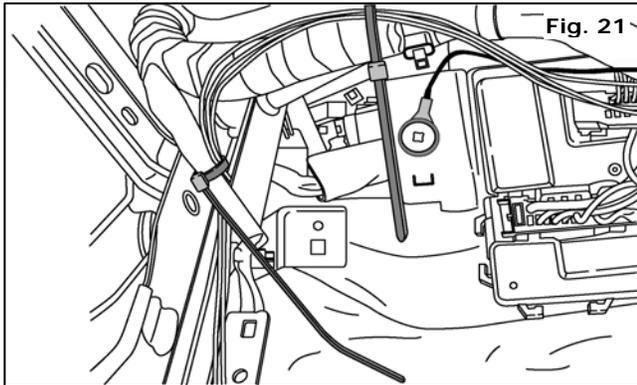


- 21) Route Power cable.
- Route Power cable along existing IP harness as shown.
  - Install (2) 4" cable ties as shown.
  - Route Power cable behind center IP brace following light stick wire routing.

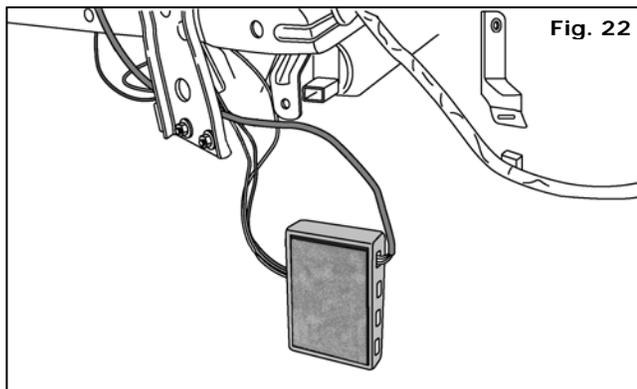

- 22) Prepare Module.
- Connect Power Cable to Module.
  - Connect footwell light wiring to Module.
  - Peel tape liner from foam pad and stick pad to Module.

## CAUTION

- Only use your fingers to release Module connector.
- Prying on release tab with any tool may damage the tab.

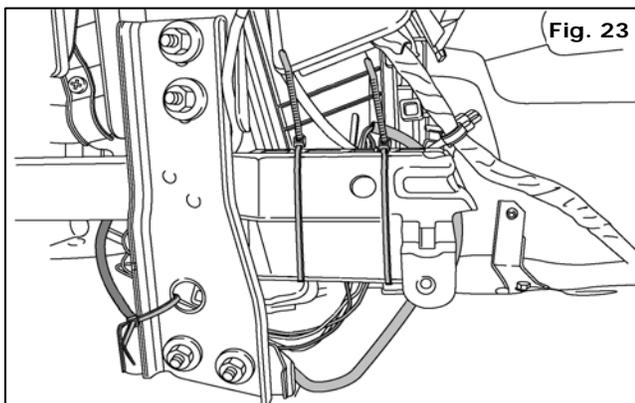


- 23) Mount Module.
- Peel tape liner from foam pad on Module.
  - Adhere module to Driver Side IP brace.
  - Use (2) 11" cable ties to secure Module to IP brace.
  - Use 4" cable tie to secure power and footwell light wiring to IP brace.

## INSTALLATION INSTRUCTIONS - Accent Lighting Kit

### 10. INSTALLATION PROCEDURE:

Versa (2007~)

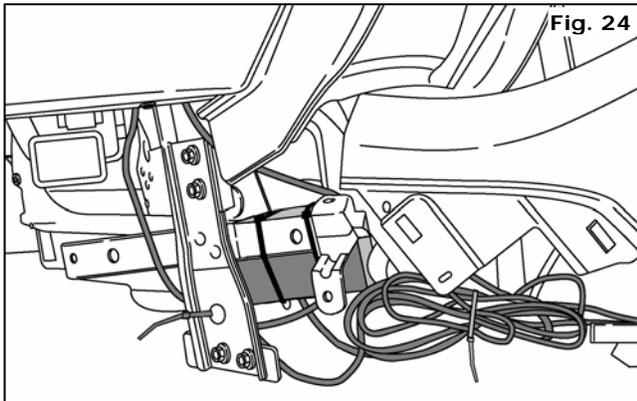

- 24) Connect console accessory wiring.
- Place console in vehicle so console accessory wiring can reach Module.
  - Route console accessory wires over IP brace.
  - Connect console accessory wiring to module.
  - Use 11" cable tie to secure remaining wiring under console.

- 25) Re-assemble vehicle in reverse order.

### CAUTION

- Use caution when removing/re-installing trim components to avoid damage, scratches, breaking of clips and/or interior trim panels.

## INSTALLATION INSTRUCTIONS - Accent Lighting Kit

### 11. CHECKLIST:

Prior to completion, verify the following

- (1) Connect the battery negative terminal.
- (2) Turn the vehicle ignition switch to the "ACC" position, push lighting control knob, and confirm the Accent Lighting illuminates.
- (3) Turn the lighting control knob and confirm that the color changes through 20 variations.
- (4) Press and hold control knob for 3 seconds and confirm that the Accent Lighting enters "Demo Mode" and cycles through colors. Press knob again to exit demo mode.
- (5) Leaving the accessory ON, turn the Interior Room Lamp to "DOOR" and ignition switch OFF. Open the door and confirm the Accent Lighting illuminates.
- (6) Leaving the accessory ON and the ignition switch OFF, close and lock the door using CDL or Key Fob (if equipped). Confirm that the Accent Lighting turns off.
- (7) Reset the radio presets to the recorded settings.
- (8) Place the Accent Lighting Quick Reference card in the glove box.
- (9) Check the trim for a proper flush fit after re-installing the interior components.
- (10) Clean the interior of the vehicle.
- (11) Inspect the vehicle interior and exterior for damage.

**For installation or technical questions, call Dealer Technical Support at: 866-559-0074.**

Posi-Tap™ is protected by patent # 5,228,875 5,695,369 5,868,589 6,692,313 Jap 2881414  
Aus 708700 Tia 103534 Can 2204826 Mex 200626 Korea 477279 China Z197105562.9 &  
others pending.