



GENUINE PARTS

INSTALLATION INSTRUCTIONS


1. DESCRIPTION: Under Rail Bedliner

2. APPLICATION: Titan '04 and after (King Cab and Crew Cab Short Bed)
Titan '08 and after (Crew Cab Long Bed)

3. PART NUMBER: 999T1 WQ100KC (King Cab)
999T1 WQ100CC (Crew Cab Short Bed)
999T1 WU100CC (Crew Cab Long Bed)

4. KIT CONTENTS:

Item	Qty	Description
A	1	Bedliner
B	1	Tailgate Cover
C	8	Shoulder Screw
D	2	Barbed Fastener
E	1	Urethane Tape
F	1	Gas Warning Label (installed on bedliner)

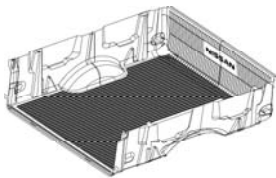

A



B




C



D



E

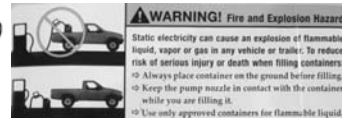

F

5. TOOLS REQUIRED:

- Clean cloth
- 50/50 Alcohol and water solution
- Phillips screwdriver with variable torque setting
- Torque wrench with 12mm socket
- Hammer

6. INSTALLATION PRECAUTIONS / NOTES:

⚠ WARNING

- Static electricity can cause an explosion of flammable liquid, vapor or gas in any vehicle or trailer. Do not use bedliner or tailgate cover as a surface for filling a container with flammable liquid.

⚠ CAUTION

- Installation of the bedliner requires two people. Do not attempt to install the bedliner by yourself.
- For proper installation, the sheetmetal truck box and bedliner must be at room temperature (65-80 F) at the time of installation.

7. INSTALLATION PROCEDURE

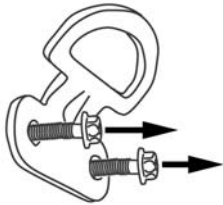


Figure 1

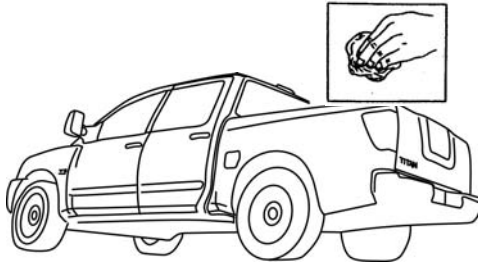


Figure 2

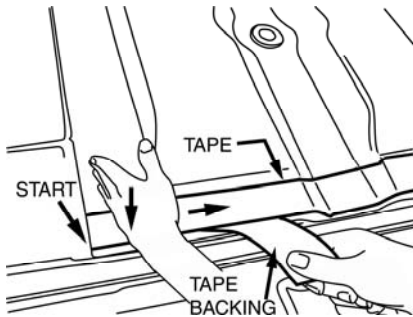


Figure 3

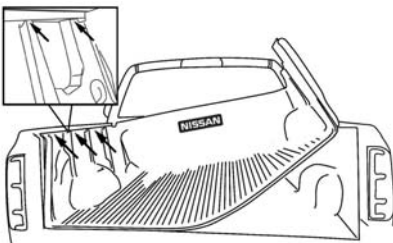


Figure 4

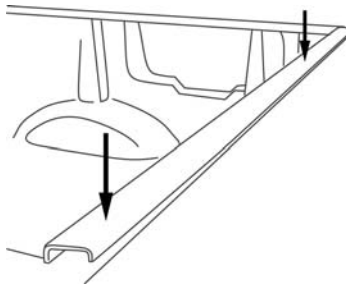


Figure 5

IMPORTANT – Please read the entire installation procedure prior to installing your new bedliner in order to become familiar with the process.

- 1) Remove the four (4) tie-down hooks located at the front and rear sidewalls. Save all hardware to be re-installed. (See Figure 1).
- 2) Before installing the bedliner and tailgate cover, thoroughly clean the bed and tailgate sheet metal with mild soap and water. Clean the rear edge of the sheet metal bed with a 50/50 alcohol and water solution. (See Figure 2).
- 3) To install the protective tape, remove one edge of the tape backing and secure the tape at the starting location. While pressing downward with the side of your palm, use a continuously smooth motion to adhere the tape from one side of the truck bed to the other. Remove the tape backing with your other hand as you proceed. (See Figure 3). To avoid trapping air bubbles, apply moderate tension to the tape as you follow the contour of the floor. **Be sure to position the tape within the ramped area of the sheet metal between the termination line of the floor ribs and the end of the truck bed.**
- 4) Place the bedliner in the bed by lifting the passenger's side so that the driver's side is installed under the side rail. (See Figure 4). Make sure the front rail of the bedliner is over the front rail of the bed. (See Figure 5).

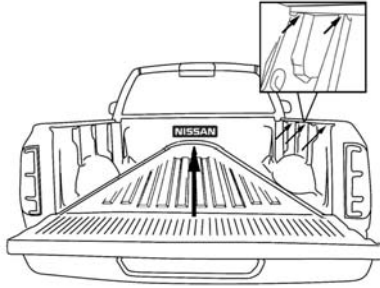


Figure 6

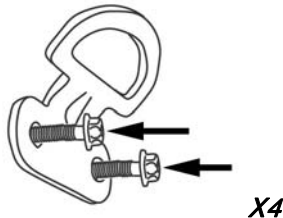


Figure 7

- 5) While pushing up on the center of the bedliner floor, hook the passenger's side of the bedliner under the other side rail. Be sure to install both sidewalls of the bedliner entirely under the side rails of the truck. (See Figure 6). Two people are necessary in order to perform this operation properly.

- 6) Install the tie-down hooks. (See Figure 7). The tightness range for the tie-down bolts is 11 to 16 N-m (8 to 12 ft-lb.).

Tailgate Cover Installation

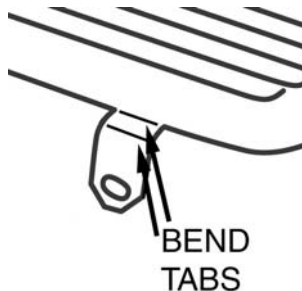


Figure 8

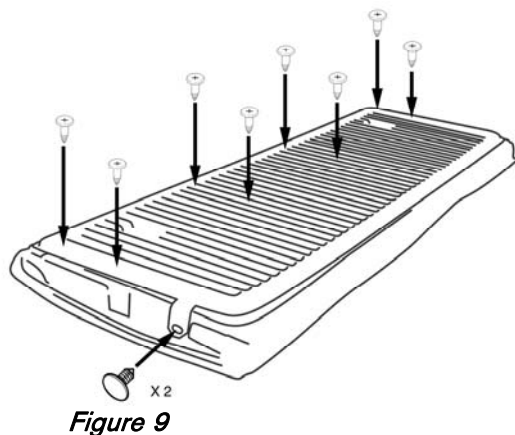


Figure 9

- 7) Remove the eight (8) tailgate screws holding the access cover to the center of the tailgate. **DO NOT REMOVE THE ACCESS COVER.**
- 8) Prior to installing the tailgate cover, bend the plastic tabs downward at the hinge lines. (See Figure 8). Place the tailgate cover on the tailgate and fasten the cover using the eight (8) shoulder screws as shown in Figure 9. The tightness range for the tailgate screws is 1.7 to 2.0 N-m (15 to 18 in-lb.).
- 9) Using a hammer, lightly tap the barbed plastic fasteners through the slots in the tailgate cover and into the holes in the holes as shown in Figure 9. These holes are located at the sides of the tailgate.