




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION: Body Side Molding
APPLICATION: Sentra (2013 and after)
PART NUMBER: 999G2 Lxxxx01 / 02

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Molding - LH Front Door	999G2 Lxxxx01
B	1	Molding - LH Rear Door	999G2 Lxxxx01
C	1	Molding - RH Front Door	999G2 Lxxxx02
D	1	Molding - RH Rear Door	999G2 Lxxxx02
E	1	Template	999G2 LZTEM01
F	1	Installation Instruction	999G2 LZ100II

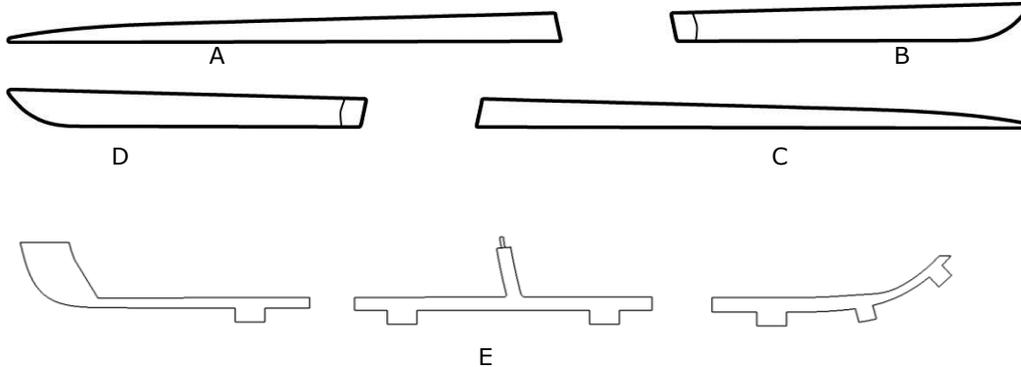

TOOLS REQUIRED:

- Clean, lint-free wiping cloth
- 90% or greater alcohol solution
- Scissors
- Masking Tape
- Roller (optional)




PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer installation recommended. Instructions may refer to Service Manual.

NOTE:




- Failure to clean mounting surface properly may cause tape to have poor adhesion to vehicle.
- If vehicle has been recently repainted, please allow vehicle paint to dry and age 24 hours before installing body side moldings.
- Install body side moldings when ambient temperature is above 15°C (60°F).
- Do not wash or expose vehicle to a wet environment for 24 hrs after installing moldings.
- Please use proper pressure of 103kPa (15lbs) to adhere body side molding to door.
- These installation instructions are for left side of vehicle; same procedure applies to right side.
- For right side installation, use template with text facing the vehicle.
- Alignment of all body side moldings must be on flat door surfaces. Moldings can not hang over door edges and no gaps allowed. Please follow instructions very carefully for alignment of molding to door edges.

INSTALLATION PROCEDURE:

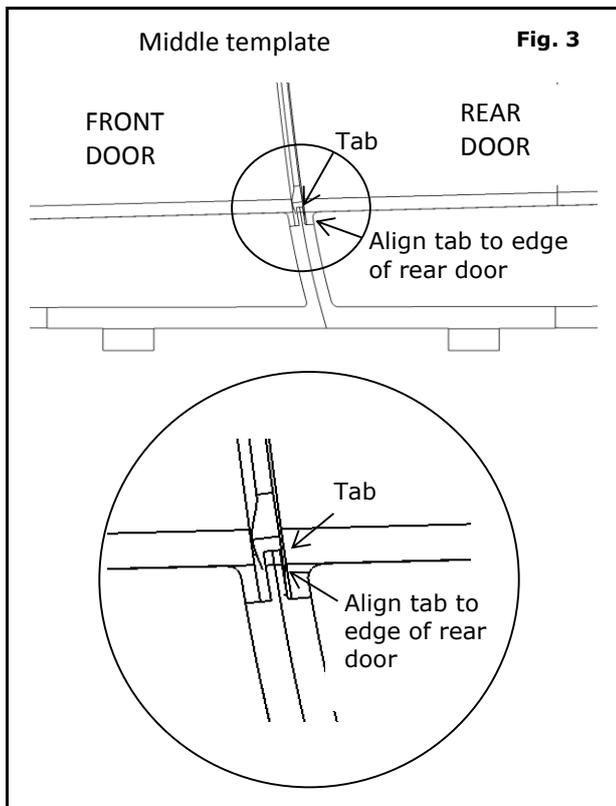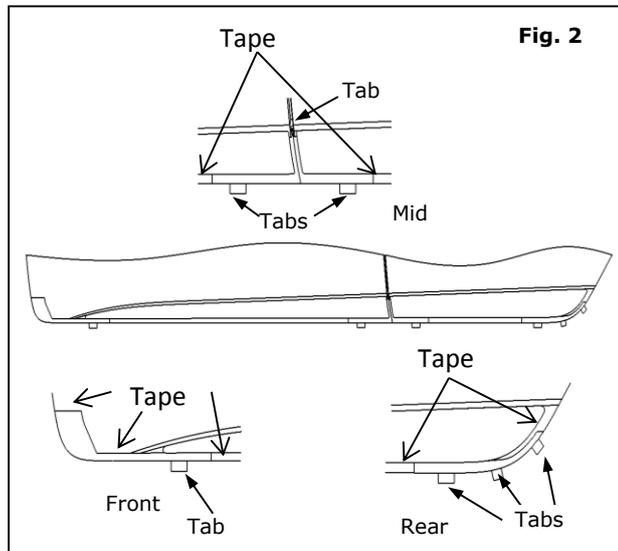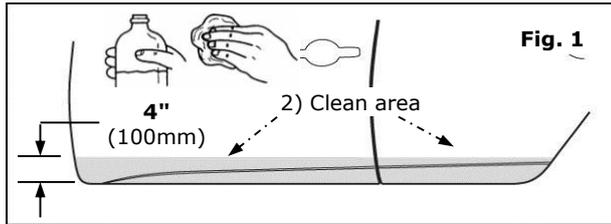

- 1) Clean vehicle area thoroughly with soap and water to remove any dirt or debris and allow to dry. **(Fig. 1)**
- 2) Using a clean, lint-free cloth and 90% alcohol solution, clean area on doors where part will be installed. **(Fig. 1)**
- 3) Fold all tabs on all templates. (Fig 2)
Place front and rear door Body Side Molding Templates on doors as shown. Align edge of template with edge of door. For middle template placement see Fig. 3.
- 4) Secure Body Side Molding Templates with masking tape as needed. **(Fig. 2)**
- 5) Align tab with edge of rear door **(Fig. 3)**

INSTALLATION PROCEDURE:

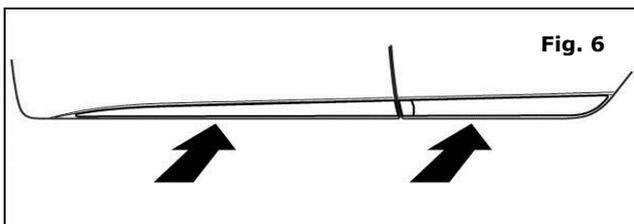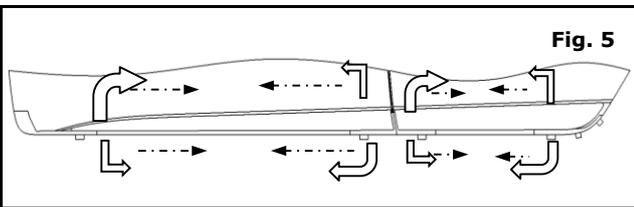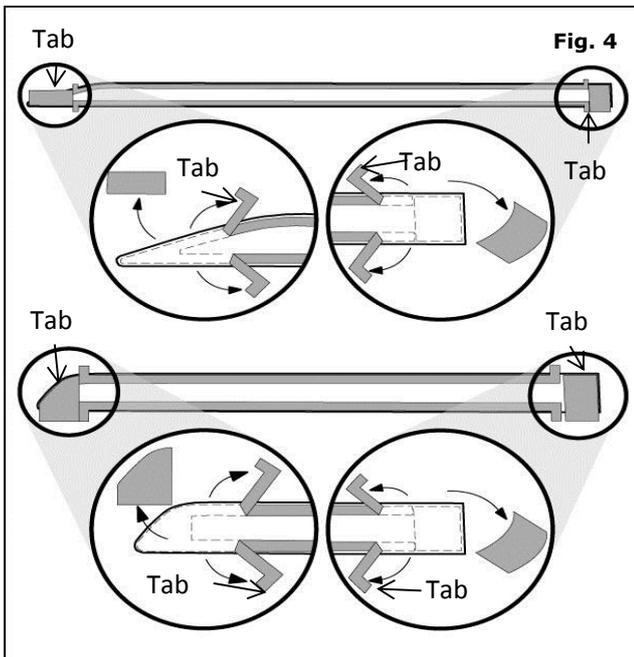

- 6) Using pull tabs, remove red tape liner from small tape on each end and approximately 30mm from each end of the long tape. **(Fig. 4)**
- 7) Place Body Side Moldings into position, Tack lightly at each end and check for correct fit. Remove and adjust if necessary. Carefully remove the remaining tape liners from the Body Side Moldings. **(Fig. 5)**
- 8) Open doors to confirm no interference between doors and moldings.
- 9) Starting from between the front & rear doors use a clean rubber roller or hand to apply firm, even pressure (15 lbs) across the Body Side Molding to adhere to vehicle. **(Fig. 6)** Repeat pressure application.
- 10) Repeat steps 1 - 9 for opposite side.