




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Side Window Deflector
APPLICATION:	Aramada / Titan
PART NUMBER:	999D3 WZ000/WZ001

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Deflector, front, driver side	---
B	1	Deflector, front, passenger side	---
C	1	Deflector, rear, driver side	---
D	1	Deflector, rear, passenger side	---
E	1	Hardware Kit	---
F	4	● Alcohol pad	---
G	8	● Push Rivet	---
H	8	● Bracket	---
I	8	Protective Film	---
J	1	Installation Instruction Replacement Template	---

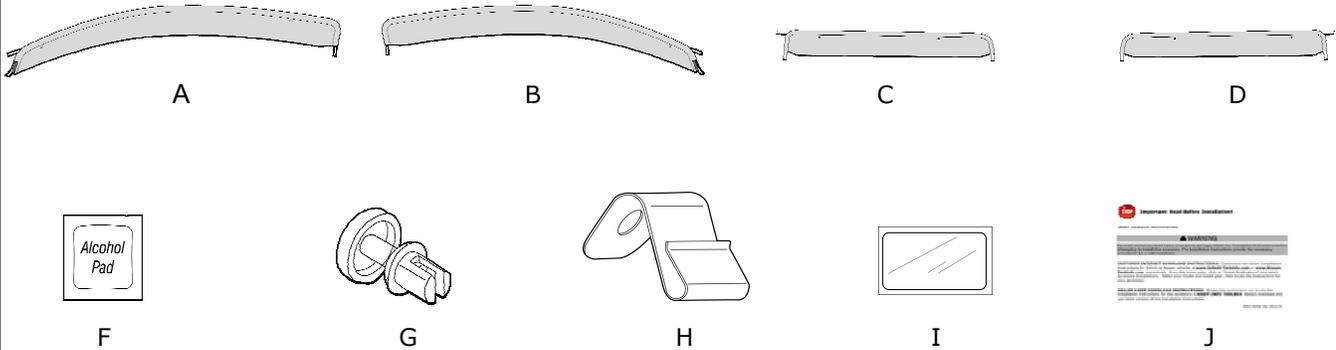


TOOLS REQUIRED:

- Clean Cloth
- Soap / Water
- Non Permanent Marker / Pencil
- Masking Tape
- Scale / Measuring Tape (mm)


CAUTIONS/NOTES:

- Read all instructions carefully before beginning the installation.
- The ideal ambient temperature for installation is above 55°F (15°C).
- No driving for one hour after installation.
- No moisture contact or washing vehicle for 24 hours after installation
- Dealer installation recommended.
- Never use ammonia based cleaner or solvents on the side window deflector.


INSTALLATION PROCEDURE:

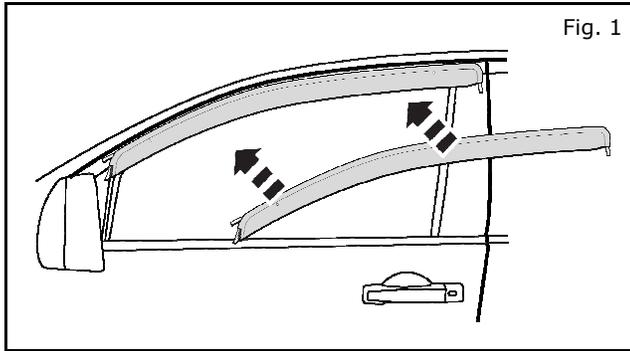


- 1) Clean front door with soap/water, dry with a clean cloth and lower window.
- 2) Test fit deflector in place.

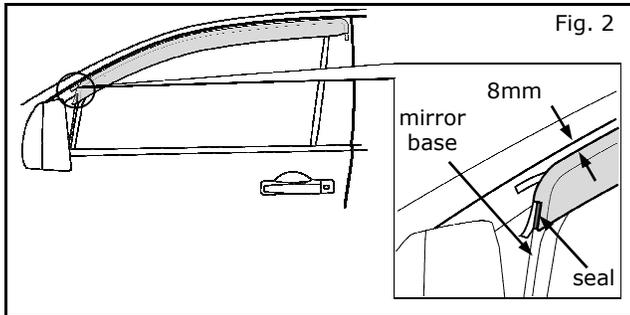

- 3) Place deflector so seal compresses against mirror base and deflector is 8mm below door edge.

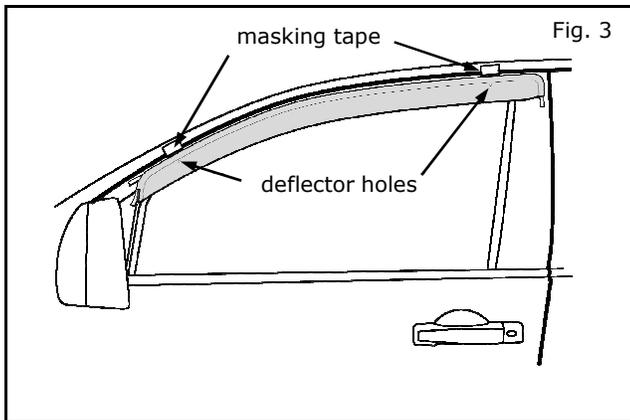


- 4) Place masking tape on door edge above deflector holes.

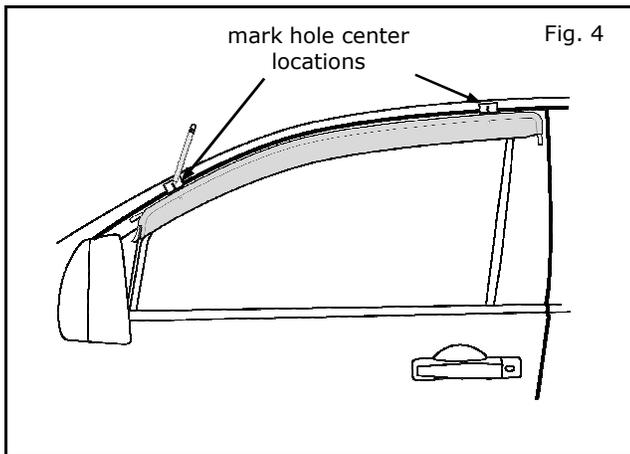


- 5) Mark center hole locations on masking tape.


INSTALLATION PROCEDURE: (continue)

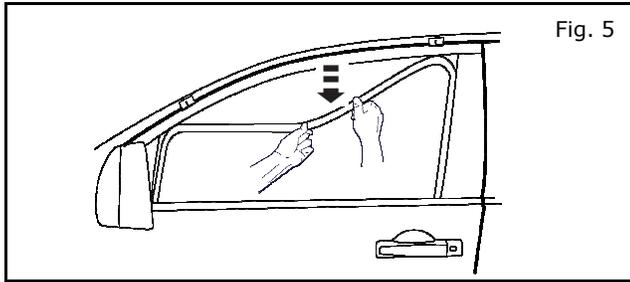


- 6) Set deflector aside and pull rubber weather strip down to expose door flange.

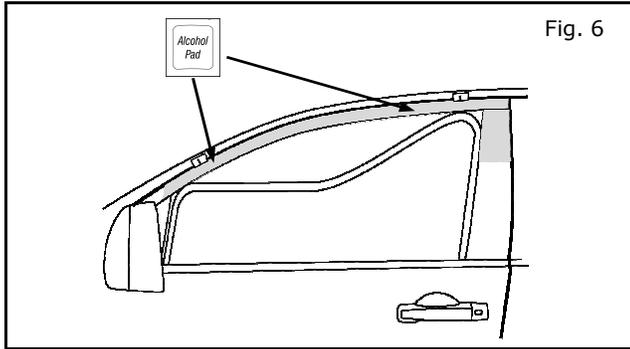


- 7) Clean shaded area of door with alcohol pad.

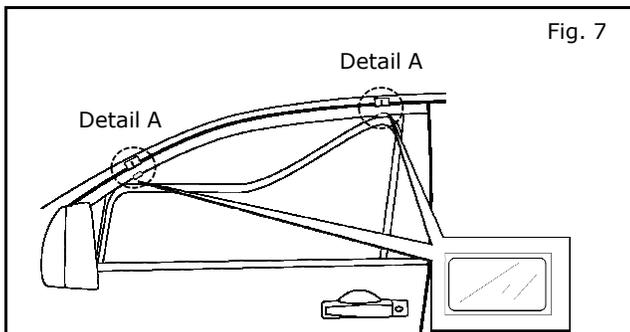

- 8) Place protective film 15mm from bottom edge of door frame centered on marks on masking tape and wrap to inside of door frame.

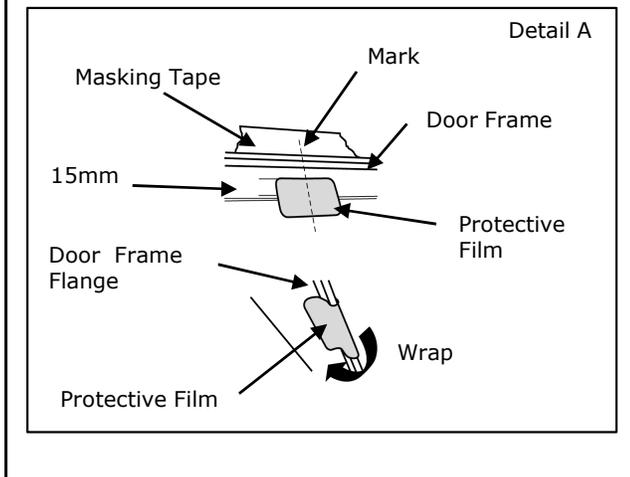


INSTALLATION PROCEDURE: (continue)

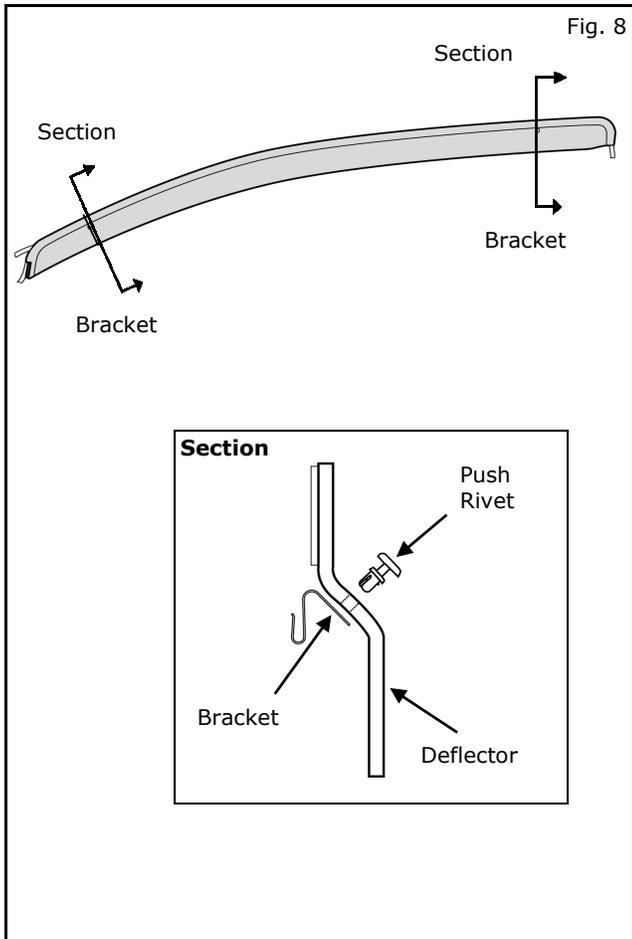


9) Attach brackets to deflector using push rivets.

NOTE: Push rivet should be seated against deflector and fully engaged.

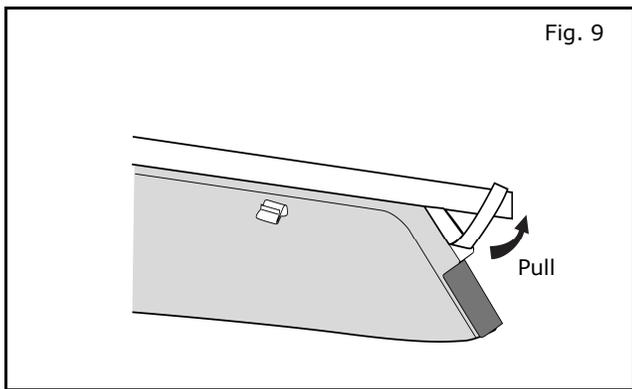


10) Pull and remove tape liner completely from front flange of deflector.


INSTALLATION PROCEDURE: (continue)

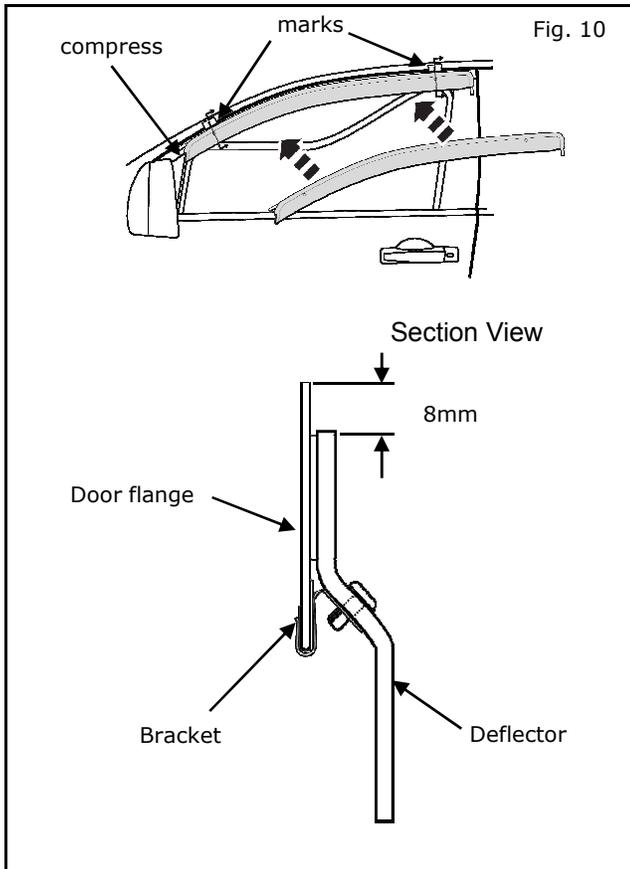

- 11) Reinstall deflector.
 - a) Clip brackets over door flange.
 - b) Push part forward to compress seal.
 - c) Align to marks on tape.
 - d) Position 8mm below door edge.
- 12) Push front edge of part to tack in place.

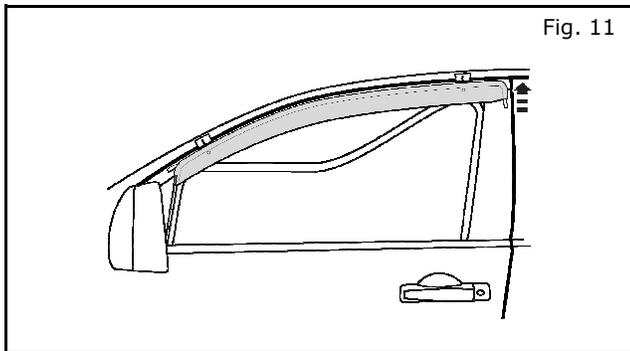


- 13) Remove rear tape liner and tack deflector down in place.

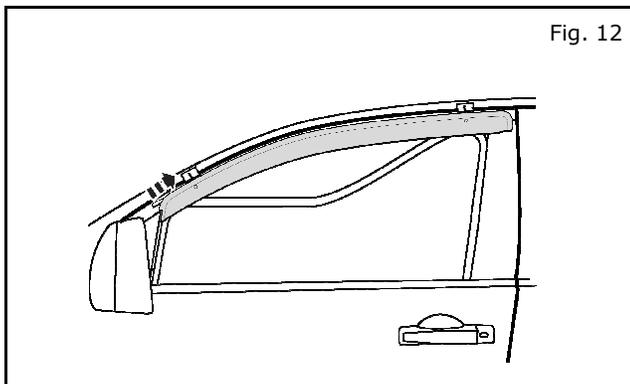


- 14) Remove tape liner by pulling on exposed pull tab.

INSTALLATION PROCEDURE: (continue)

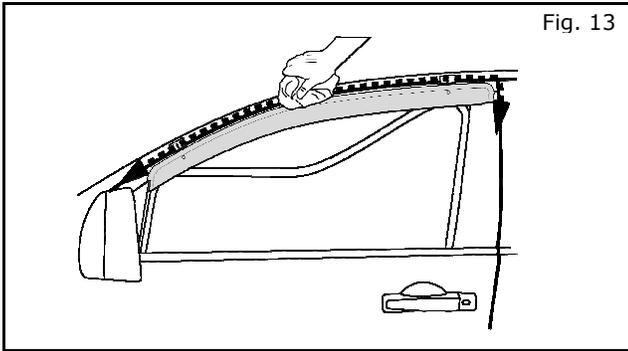


15) Using a clean cloth apply at least 15 lbs. of pressure along tape length.

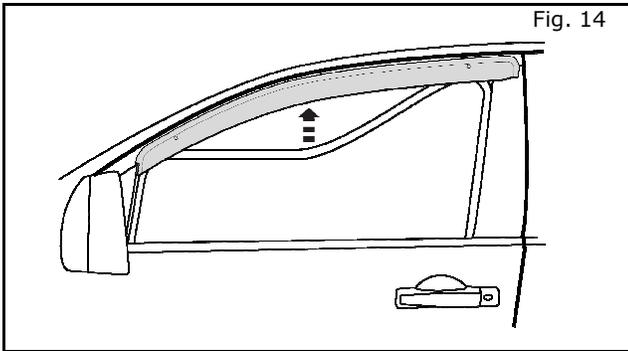

16) Replace rubber weather strip and make sure it is fully seated. Remove masking tape.


17) Repeat steps 1 through 16 for opposite side.

INSTALLATION PROCEDURE: (continue)

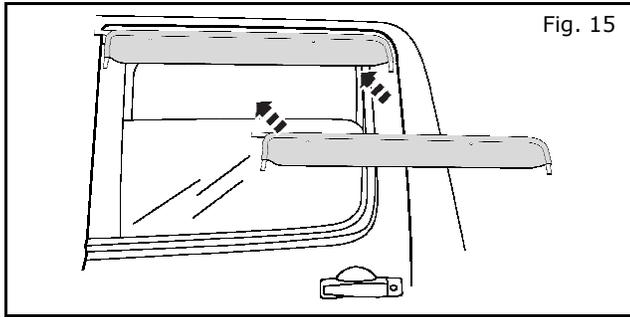


18) Clean rear door with soap/water and dry with a clean cloth. Lower window.


19) Test fit deflector in place.

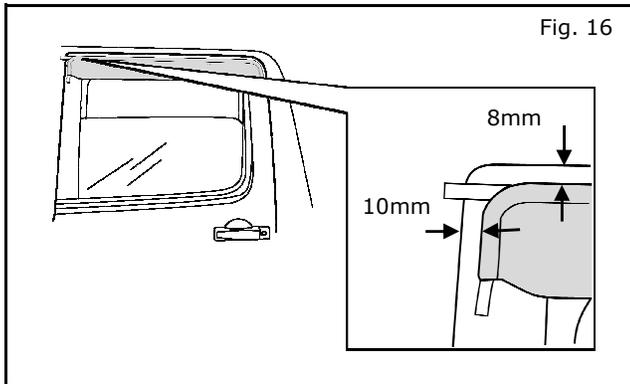

20) Ensure there is an 8mm gap between top flange of deflector and door edge and 10mm gap between front flange and front of door.

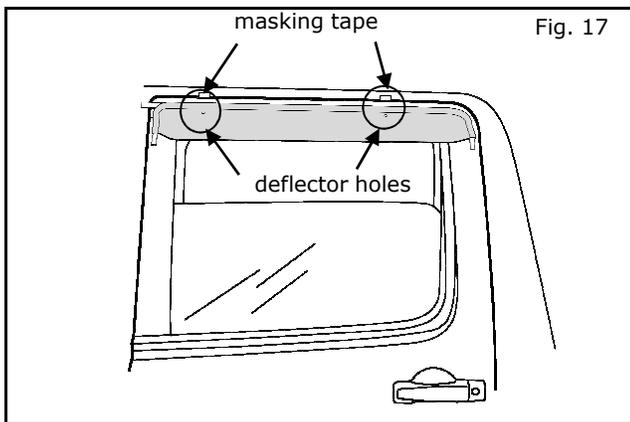


21) Place masking tape on door edge above deflector holes.

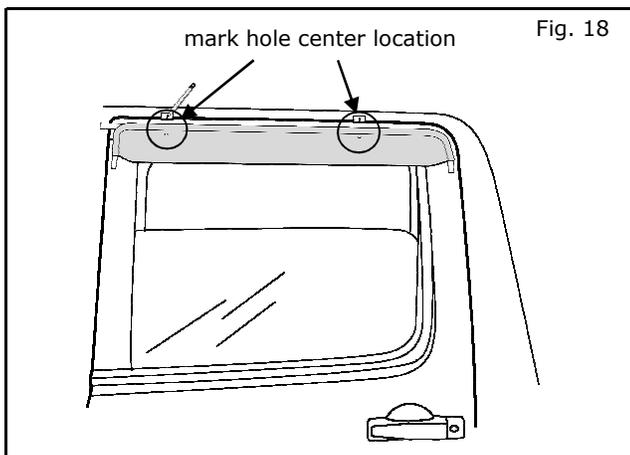


22) Mark center hole locations on masking tape.


INSTALLATION PROCEDURE: (continue)

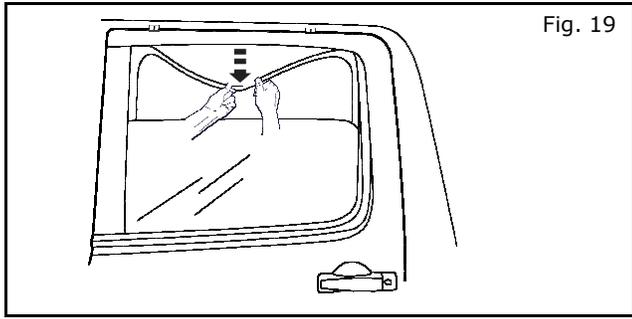


23) Set deflector aside and pull rubber weather strip down to expose door flange.

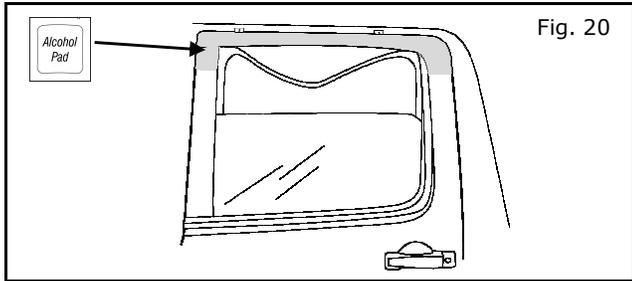


24) Clean shaded area of door with alcohol pad.

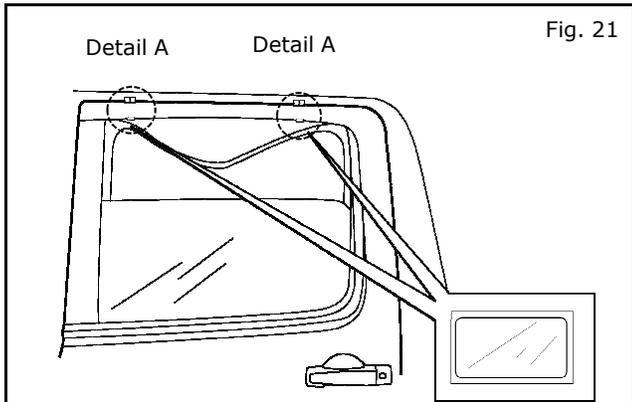

25) Place protective film 15mm from bottom edge of door frame centered on marks on masking tape and wrap to inside of door frame.

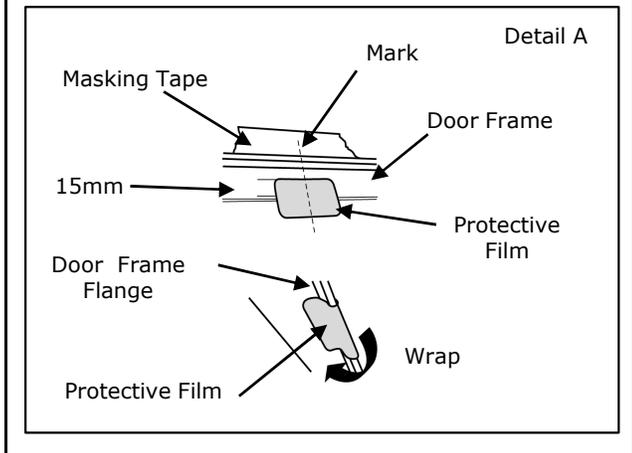


INSTALLATION PROCEDURE: (continue)

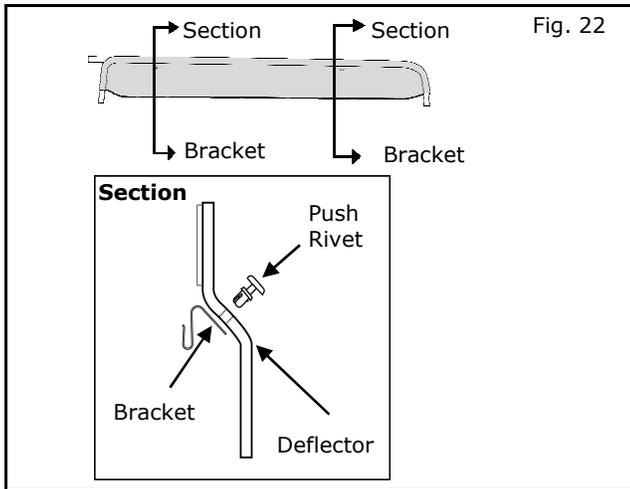

26) Attach brackets to deflector using push rivets.


NOTE: Push rivet should be seated against deflector and fully engaged.

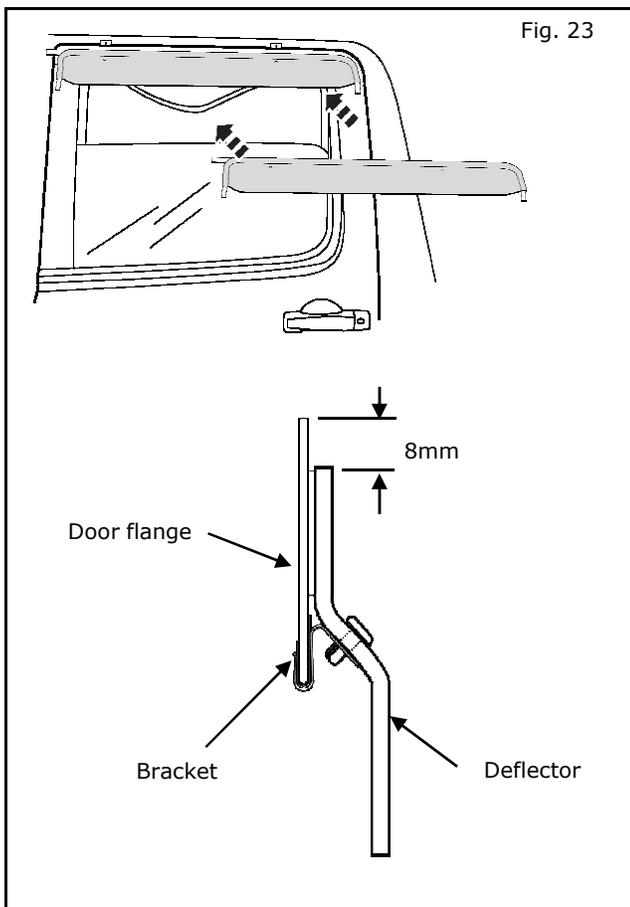


27) Reinstall deflector.

- a) Clip brackets over door flange.
- b) Align to marks on tape.
- c) Position 8mm below door edge.
- d) Position 10mm from front door edge.


INSTALLATION PROCEDURE: (continue)

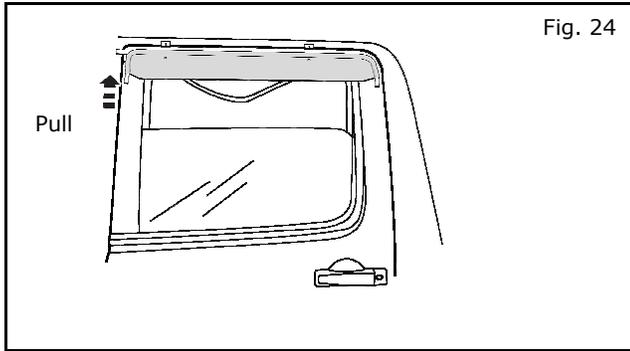


28) Remove front vertical tape liner and tack deflector in place.

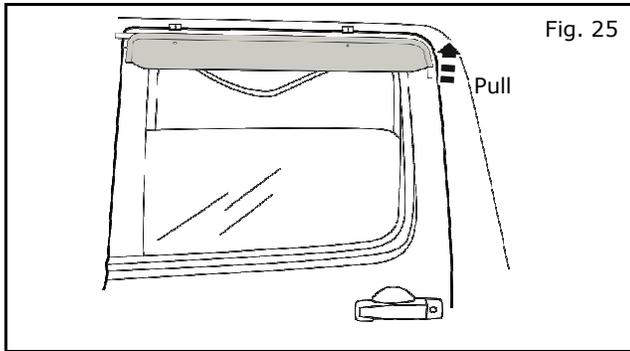

29) Remove rear vertical tape liner.

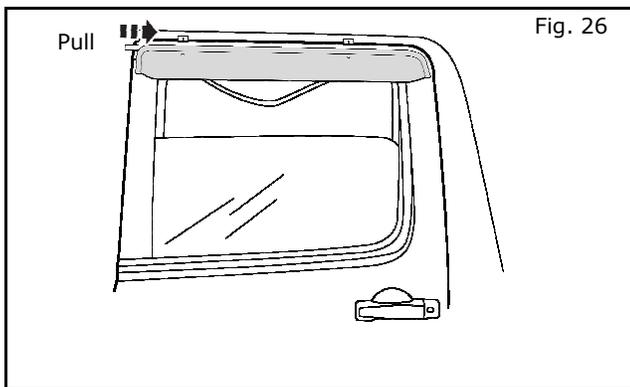

30) Remove horizontal tape liner.

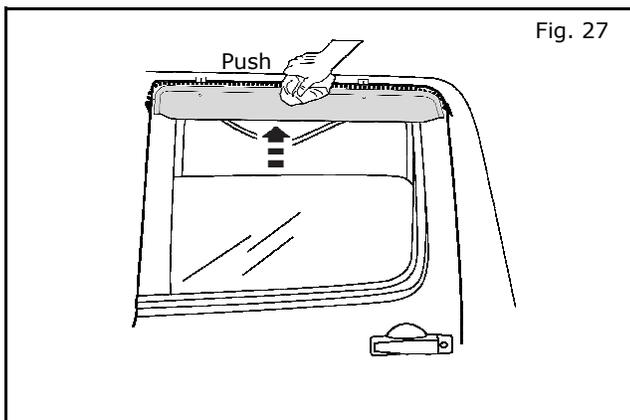

31) Using a clean cloth apply at least 15 lbs. of pressure along tape length.

32) Replace rubber weather strip and make sure it is fully seated. Remove masking tape.