




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Rocker Molding - Paint/Chrome
APPLICATION:	Maxima
PART NUMBER:	T99G24RAxA

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Molding - LH	T98G2 4RAxA
B	1	Molding - RH	T98G2 4RAxB
C	2	Spring Clip M5	12-41 00771
D	8	Plastic Clip	15-53 10501
E	2	Screw M5 X 20mm	14-51 00891
F	1	Template LH and RH	---
G	1	Installation Instruction Replatement Template	999V2 AW000

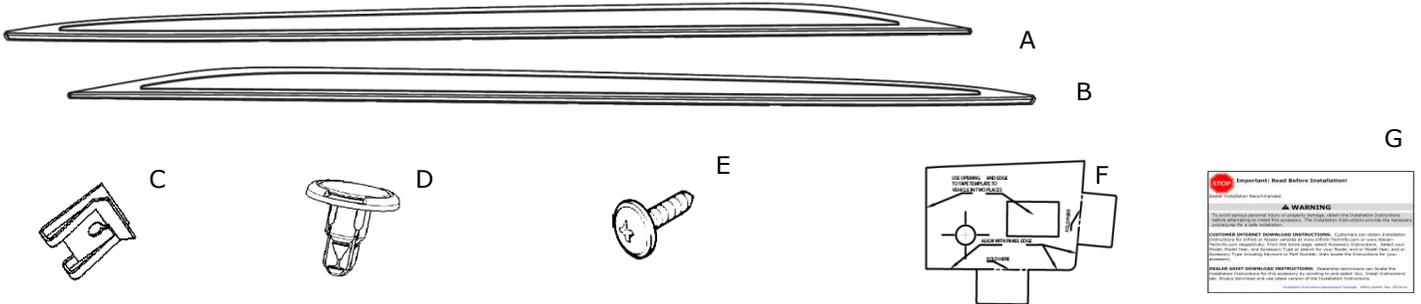





TOOLS REQUIRED:

- Clean, lint-free wiping cloth
- 90% or greater alcohol solution
- Scissors
- Masking Tape
- Roller (optional)
- Phillips screw driver
- Drill
- 3mm Drill Bit
- 8mm Drill Bit
- 11/32" Drill Bit

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer Installation Recommended. Instructions may refer to Service Manual.
- Failure to clean mounting surface properly may cause tape to have poor adhesion to vehicle.
- If vehicle has been recently repainted, please allow vehicle paint to dry and age 24 hours before installing rocker moldings.
- Install rocker moldings when ambient temperature is above 15°C (60°F)
- Do not wash or expose vehicle to a wet environment for 24 hrs after installing moldings.
- Please use proper pressure of 103kPa (15lbs) to adhere rocker molding to rocker panel.
- These installation instructions are for left side of vehicle; same procedure applies to right side.
- Please follow instructions very carefully for alignment of molding.

INSTALLATION PROCEDURE: (Continued)

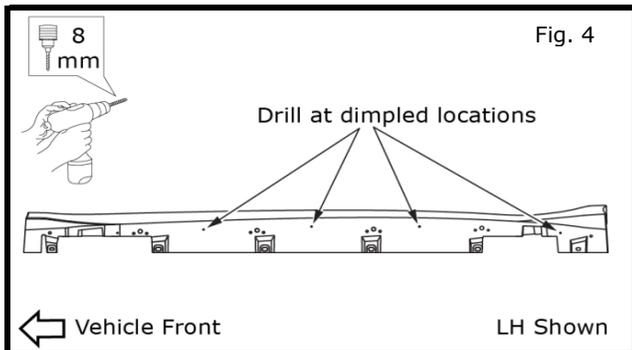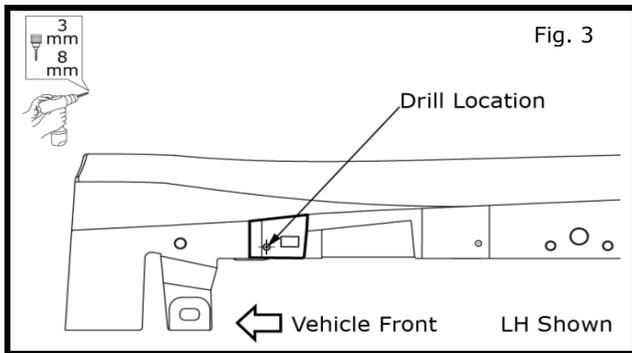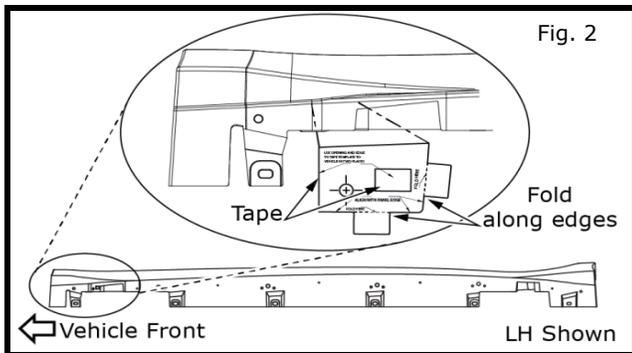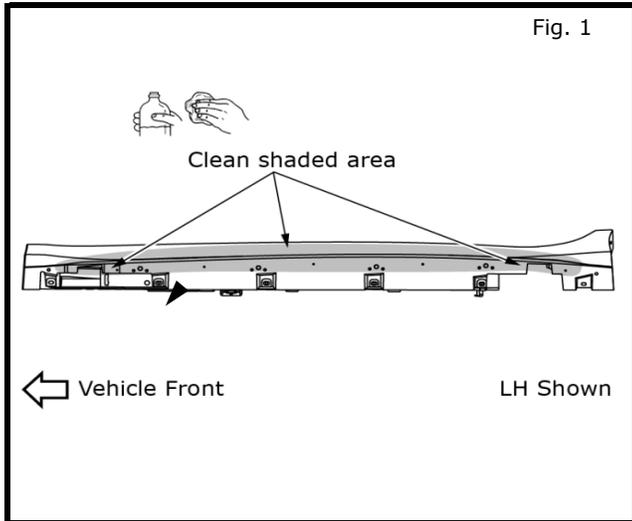


CAUTION


- If security lighting is present, verify the wiring is not in line with drilling locations. Secure wires with tape if necessary.

- 1) Raise vehicle and secure on lift.
- 2) Clean driver and passenger side vehicle area thoroughly with soap and water to remove any dirt or debris and allow to dry.
- 3) Using a clean, lint-free cloth and 90% alcohol solution, clean tape and fastener locations on panel. See shaded area in Fig. 1.
- 4) Fold tabs on template and place as indicated. (See Fig. 2)
- 5) Align template edge shown in Fig. 2 with panel.
 - a) Align template edge with bottom edge of panel.
 - b) Secure template with masking tape as indicated on template. (See Fig. 2)
- 6) Using template, mark hole on panel as indicated on template. (See Fig. 3)
- 7) First, drill 3mm pilot hole at marked location, then drill 11/32 inch hole.
- 8) Drill 8mm holes at 4 dimpled locations on under side of mudguard. (See Fig. 4)


INSTALLATION PROCEDURE: (continued)

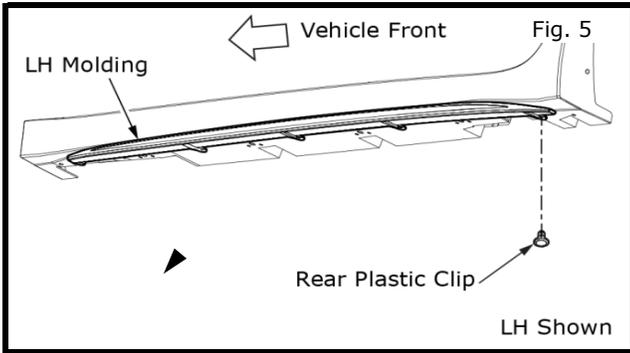


- 9) Mount LH molding to mud guard and install rearmost plastic clip.

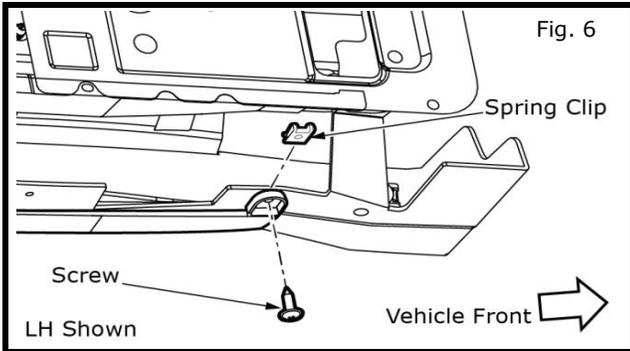

- 10) Installation of spring clip.
a) Install spring clip to forward most hole as shown in Fig. 6.
b) Loose install screw.

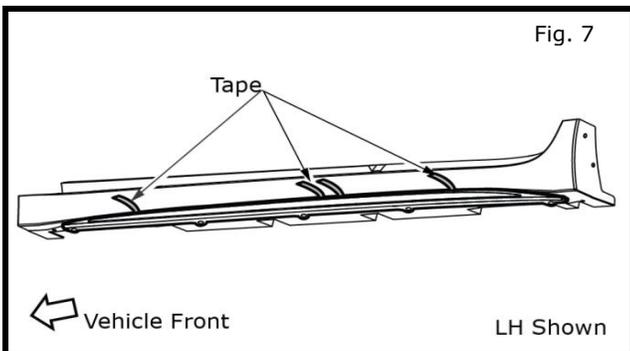


- 11) Remove and discard tape liner, pulling tape liner forward as shown. See Fig. 7.

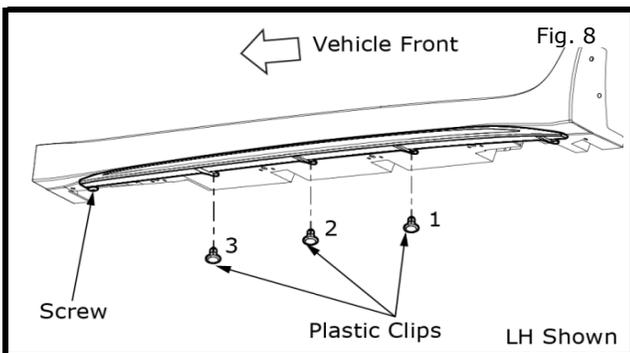

- 12) Install 3 plastic clips in order shown in Fig. 8.
13) Tighten screw in forward most hole to 4 N·m (36 in·lb).

INSTALLATION PROCEDURE: (continued)

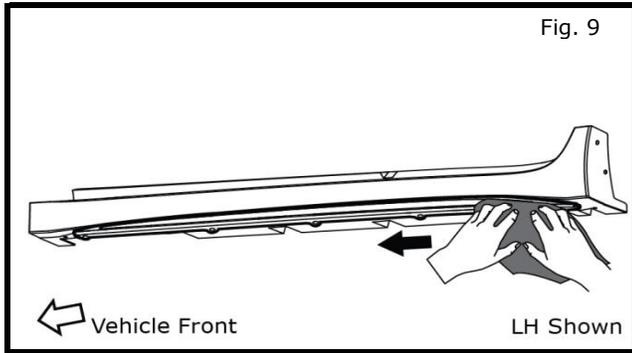

- 14) Beginning at rear of vehicle and moving forward, apply 15 lbs of pressure over entire part.

Repeat steps 1 through 14 for opposite side of vehicle.