



# GENUINE PARTS

## INSTALLATION INSTRUCTIONS


<b>DESCRIPTION:</b>	Roof Cross Bar Kit
<b>APPLICATION:</b>	Pathfinder
<b>PART NUMBER:</b>	Roof Cross Bar Kit (999R1 XZ500)

### KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Cross Bar - Front	999R1 XZ507
B	1	Cross Bar - Rear	999R1 XZ508
C	8	M6 Torx Bolt - 26 MM Long	999R1 XZ500-S1
D	1	T30 Torx Wrench	N/A
E	1	Installation Instruction Replacement Template	999V2 AW000



A, B



C



D



E




### TOOLS REQUIRED:

None.

### PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer Installation Recommended. Instructions may refer to Service Manual.
- Removal and Re-Installation of Cross Bars requires purchase of new M6 bolts (999R1 XZ500-S1) or the re-application of Thread locking adhesive such as LOCTITE® 242® or equivalent.

## INSTALLATION PROCEDURE:

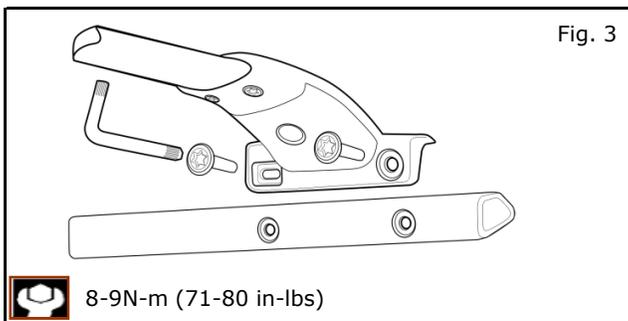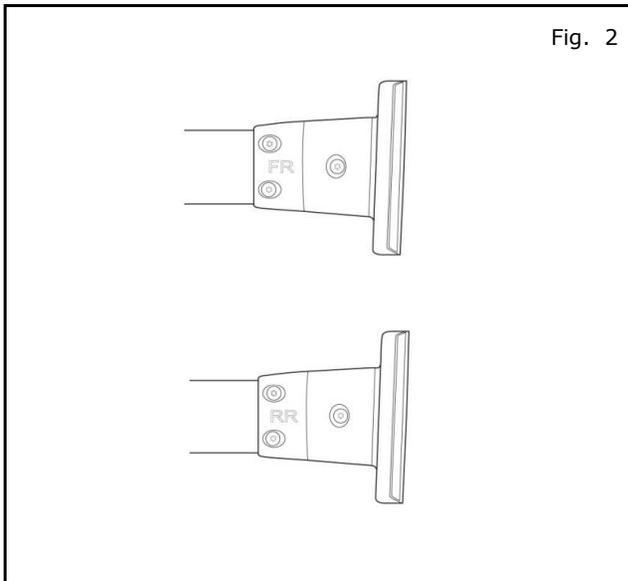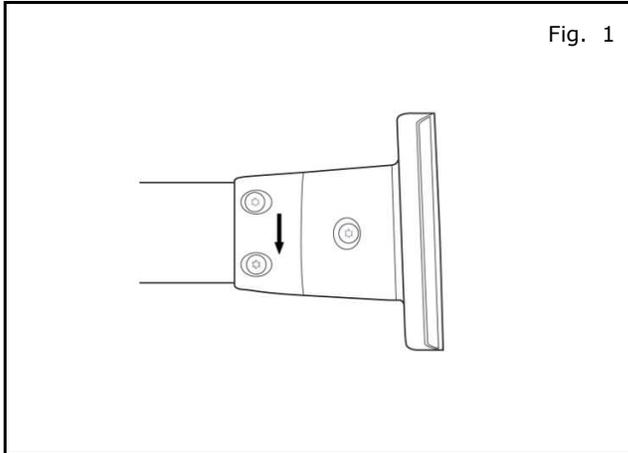

### **⚠ CAUTION**

- Arrow points forward.

### **⚠ CAUTION**

**Make sure cross bars are installed in proper location.**

- Each cross bar marked with "FR" or "RR".
- Front (FR) cross bar installed on side rail in front of rear doors.
- Rear (RR) cross bar installed on side rail behind rear doors.

### **⚠ CAUTION**

**Make sure cross bar is properly in place on each side rail with attaching holes/slots positioned over rivet nuts before tightening to specification.**

- 1) Loosely install all 4 bolts on front (FR) cross bar.
- 2) Secure forward bolt on driver side first and then secure remaining 3 bolts.
- 3) Repeat procedure for rear (RR) cross bar.