



GENUINE PARTS



INSTALLATION INSTRUCTIONS

DESCRIPTION:	Cargo Net	
APPLICATION:	QX80 / Armada	
PART NUMBER:	999C1 3X000	
KIT CONTENTS:		
Item	Qty.	Part Description
A	1	Cargo Net
B	1	Installation Instruction Replacement Template

A

Important: Read Before Installation

Order Installation Recommended

WARNING


To avoid serious personal injury or property damage, please read the installation instructions before attempting to install this accessory. The installation instructions provide the necessary precautions for safe installation.

CUSTOMER SERVICE & DOWNLOAD INSTRUCTIONS: Customers can obtain installation instructions for Infiniti or Nissan vehicles at www.Infiniti.com/Infiniti.com or www.NissanUSA.com respectively. From the home page, click on "Trade-In/Lease and Sales" and select "Accessories/Installations". Select your model and model year, then locate the instructions for your accessory.


DEALER ONLY DOWNLOAD INSTRUCTIONS: Dealers and authorized users locate the installation instructions for this accessory in **MODEL YEAR'S TOOL BOX**, always download and use latest version of the installation instructions.

B

- TOOLS REQUIRED:**
- No tools required.
- PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:**
- Ensure that net is securely attached so cargo does not fall out during transit.
 - Keep this installation instruction sheet with Vehicle Owner's Manual for future reference.
 - Max load not to exceed 30 lbs.

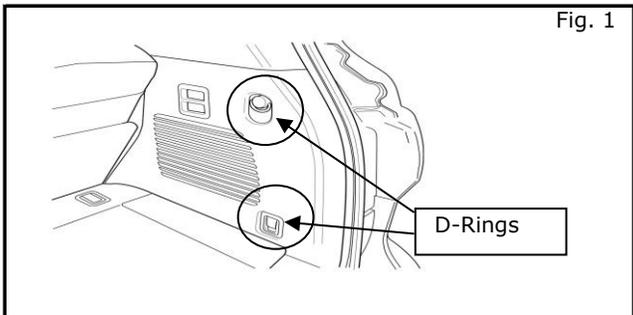

- 1) Locate the D-rings in the cargo area.
- 2) Attach cargo net hooks to the D-rings on the passenger side of trunk.

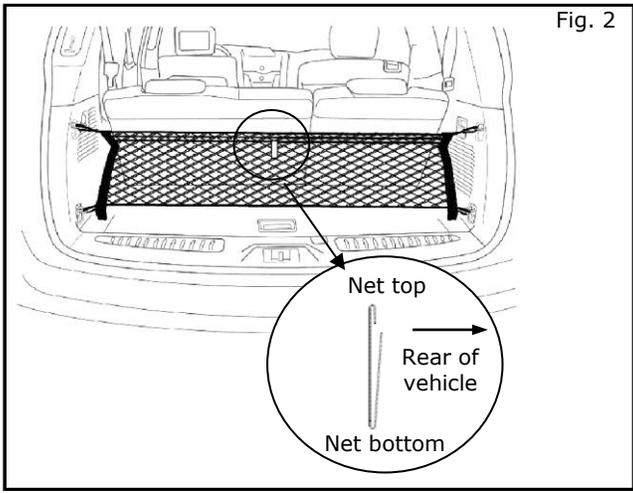

- 3) Attach cargo net hooks on the other side of the net to the D-rings on the driver's side.

NOTE:

- Make sure the opening on the top of the net is facing rear of vehicle (Fig. 2).