




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Cargo Net
APPLICATION:	Murano
PART NUMBER:	999C1 C3000
KIT CONTENTS:	

Item	Qty.	Part Description	Service Part Number
A	1	Cargo Net	999C1 C3000
B	1	Installation Instruction Replacement Template	999V2 AW000

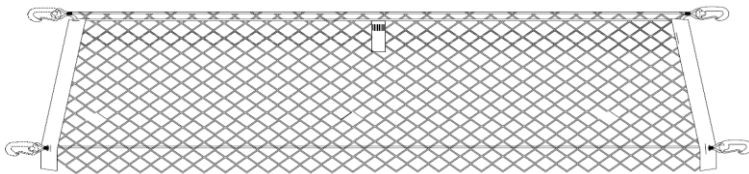

A



B

TOOLS REQUIRED:

- No tools required

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Ensure that net is securely attached so items do not fall out during transit.
- Keep this installation instruction sheet with the Vehicle Owner's Manual for future reference.
- Max load not to exceed 30 lbs.

INSTALLATION PROCEDURE:

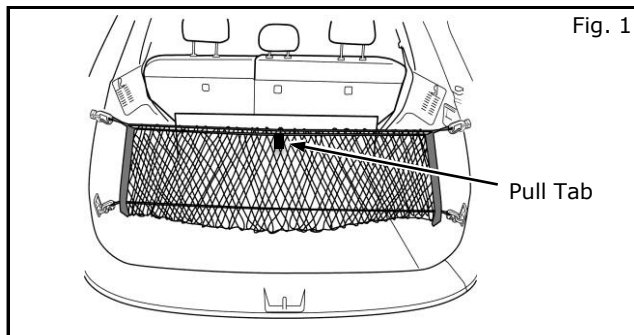


Fig. 1

- 1) Install net in cargo area with pull tab facing rear of vehicle (Fig. 1).

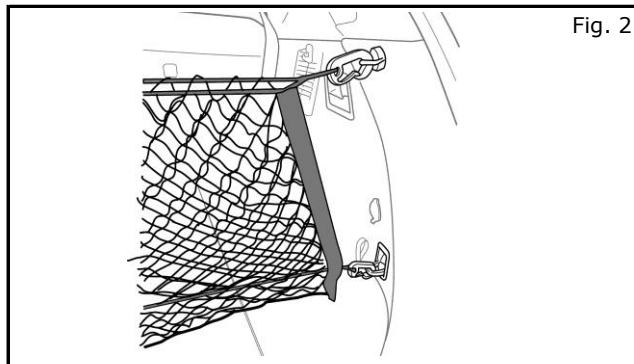


Fig. 2

- 2) Connect net clips to vehicle mounts as shown. Repeat for opposite side of cargo area.