



GENUINE PARTS

INSTALLATION INSTRUCTIONS


DESCRIPTION:	Splash Guard Kit - Front Set
APPLICATION:	Maxima
PART NUMBER:	T99J2 4RAXx (xx Designates color/year)

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Splash Guard - Front Left	---
B	1	Splash Guard - Front Right	---
C	1	Installation Instruction Replacement Template	999V2 AW000
D	1	Installation Hardware Kit	---
E	4	● Phillips Screw M5 x 20mm	14-51 00891
F	2	● Spring Nut M5	12-41 01011
G	2	● CLIP	15-53 10501



A

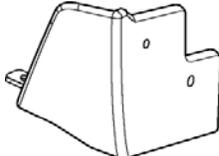


B



C



E

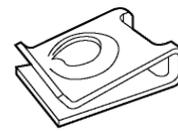

F



G

TOOLS REQUIRED:

- Phillips head short screwdriver
- Drill
- 6mm (1/4") drill bit
- Clean, lint-free wiping cloth
- Mild soap / water mixture
- 90% or greater alcohol


PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer Installation Recommended. Instructions may refer to Service Manual.
- These instructions are for left side of vehicle; same procedure applies to right side.


CAUTION

- Install the splash guards when the ambient temperature is above 60°F (15°C).
- Do not wash or expose the vehicle to a wet environment for 24 hours after installing the splash guards.


INSTALLATION PROCEDURE:

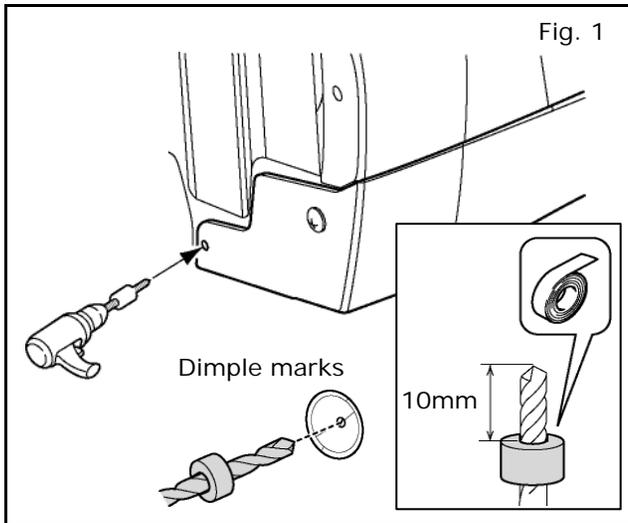

- 1) Turn wheel to access front screws.
 - a. Turn wheel full right to best access driver side screws.
 - b. Turn wheel full left to best access passenger side screws.
- 2) Drill 3mm(1/8")→6mm(1/4") holes at 1 marked locations.

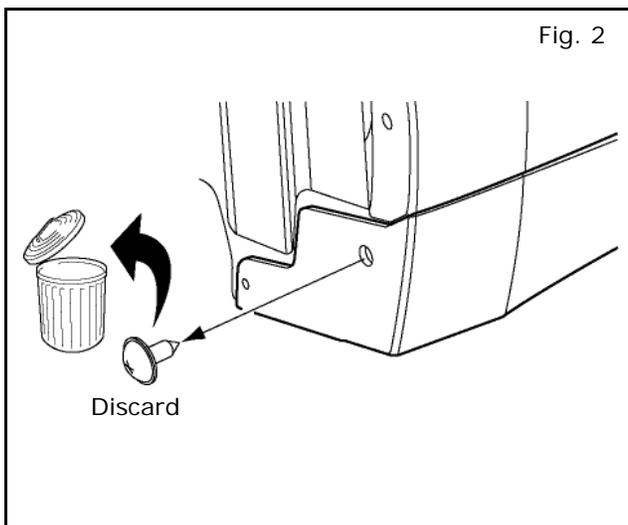


- 3) Remove screws from sill cover and discard.

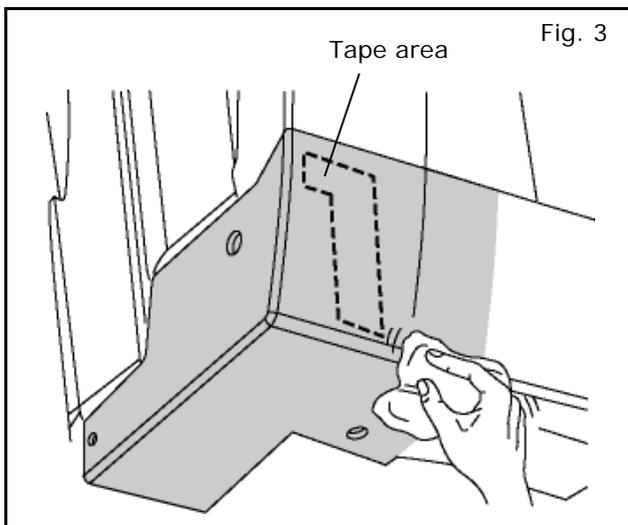


- 4) Clean installation surface (shaded area) with mild soap/water mixture.
- 5) Using a clean, lint free cloth, wipe tape area with 90% or greater alcohol.


INSTALLATION PROCEDURE:

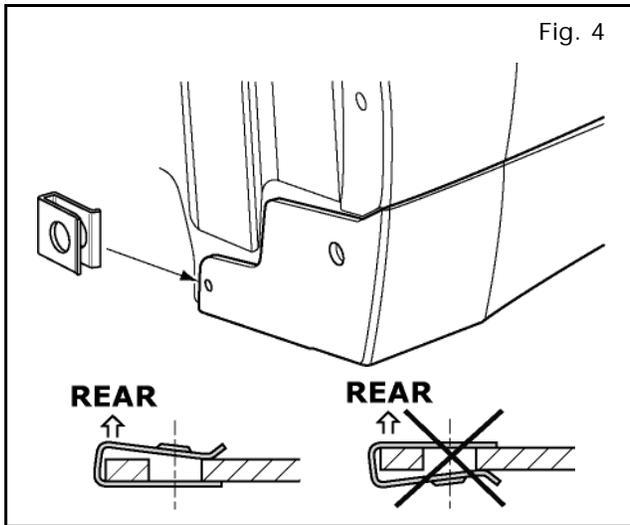

6) Install spring nut (F).

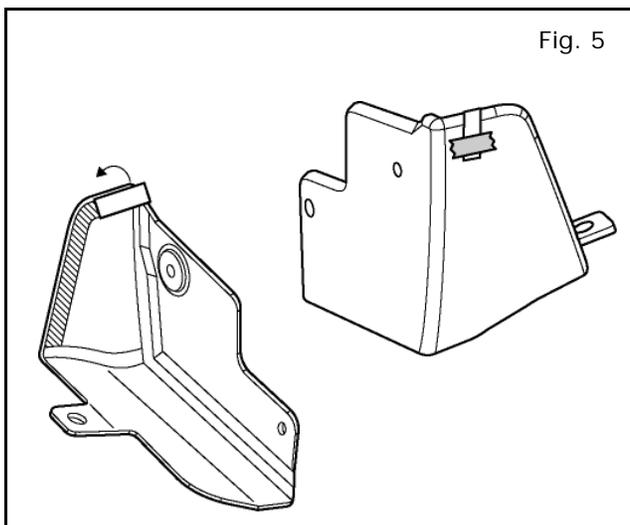


7) Fold tape liner pull tabs onto front splash guard surface and apply masking tape to ensure that pull tabs are accessible.

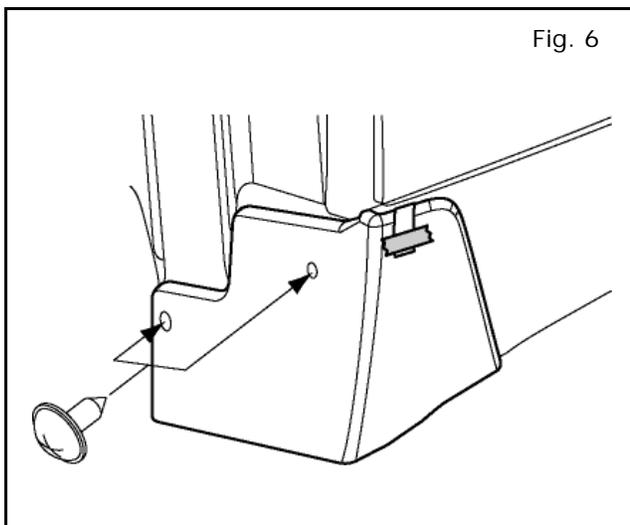

8) Align front splash guard to vehicle and loosely install phillips screws (E) making sure pull tab is exposed.

INSTALLATION PROCEDURE:

Fig. 7

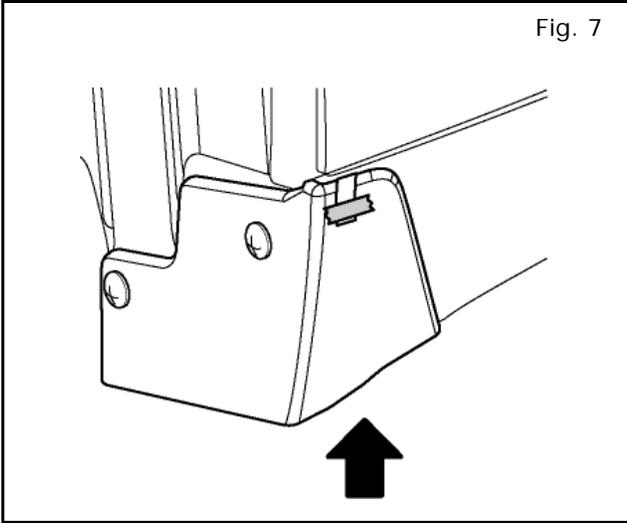


- 9) While pushing up splash guard from bottom, tighten phillips screws (E) as shown in Fig. 7.

NOTE:


Do not over tighten screws. Reference Tighten Torque: 3.8~4.4 N-m {34~39 in-lb}

Fig. 8

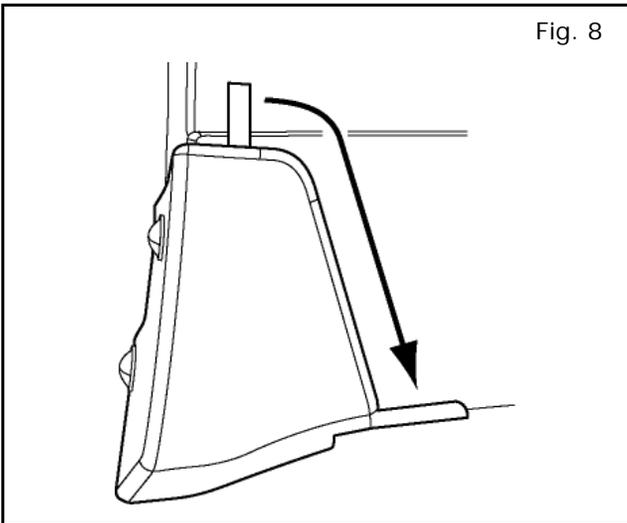

- 10) Remove tape liner in direction shown by arrow.

Fig. 9

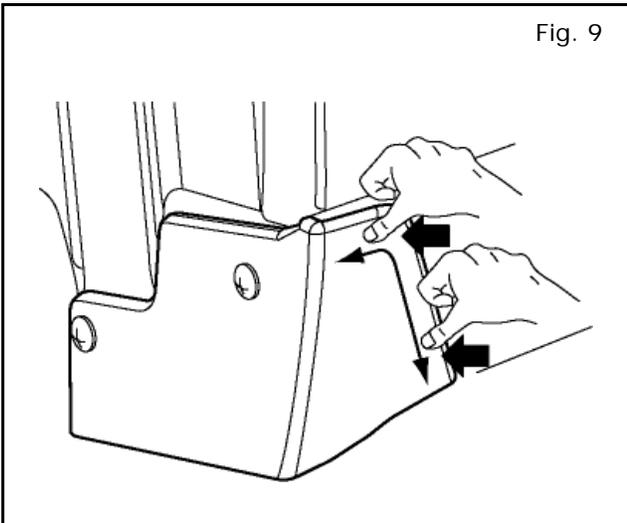


- 11) Apply at least 15lbs of pressure to front splash guard to ensure that tape is attached.


NOTE:

Use a roller or burnish by hand with a rag and apply a minimum of 15lbs of pressure along length of tape.

INSTALLATION PROCEDURE:

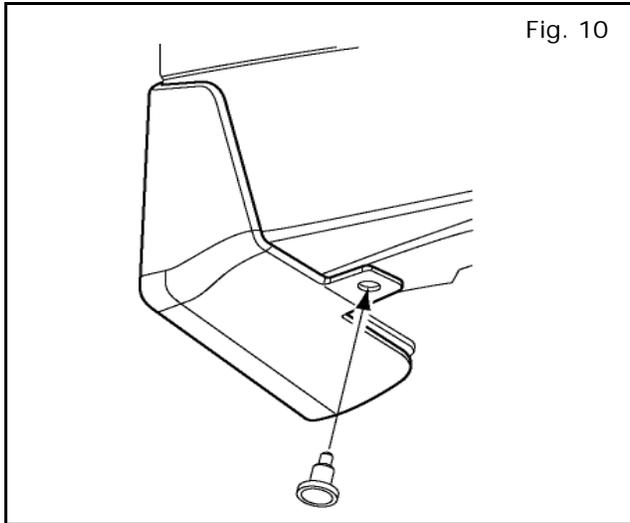

12) Install clip (G).

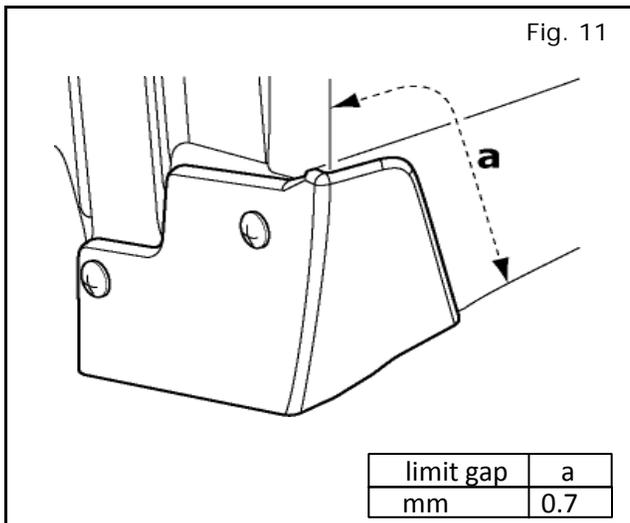

ACCESSORY CHECK:

- Check all torque values.
- Check gap. See Fig.11.
- Clean the fenders and sill covers near the installation areas of the vehicle.

FINAL INSPECTION:

- Verify exterior is not damaged.