




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Splash Guard Kit - Rear Set
APPLICATION:	Maxima
PART NUMBER:	T99J2 4RAXB (x Designates color)

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Splash Guard - Rear Left	---
B	1	Splash Guard - Rear Right	---
C	1	Installation Instruction Replacement Template	999V2 AW000
D	1	Installation Hardware Kit	---
E	4	● Phillips Screw M5 x 20mm	14-51 00891
F	4	● Spring Nut M5	12-41 01011
G	2	● CLIP	15-53 10501

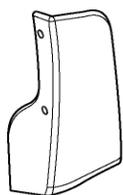

A



B



C



E



F



G

TOOLS REQUIRED:

- Phillips head short screwdriver
- Drill
- 6mm (1/4") drill bit
- Clean, lint-free wiping cloth
- Mild soap / water mixture
- 90% or greater alcohol
- Flathead Screwdriver


PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer Installation Recommended. Instructions may refer to Service Manual.
- These instructions are for left side of vehicle; same procedure applies to right side.


CAUTION

- Install the splash guards when the ambient temperature is above 60°F (15°C).
- Do not wash or expose the vehicle to a wet environment for 24 hours after installing the splash guards.


INSTALLATION PROCEDURE:

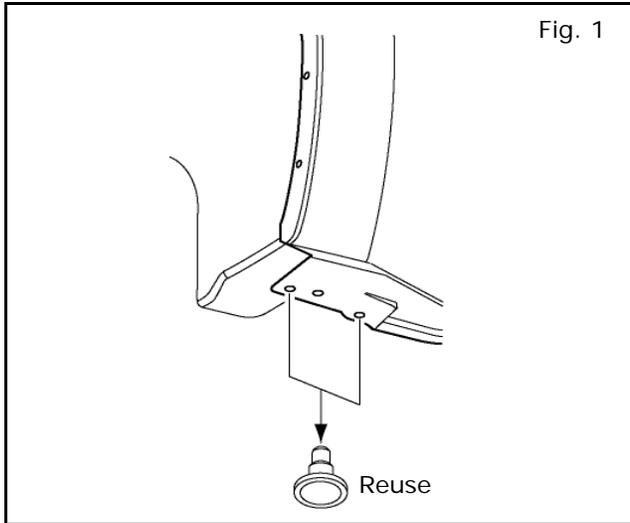

1) Remove clips from rear bumper.

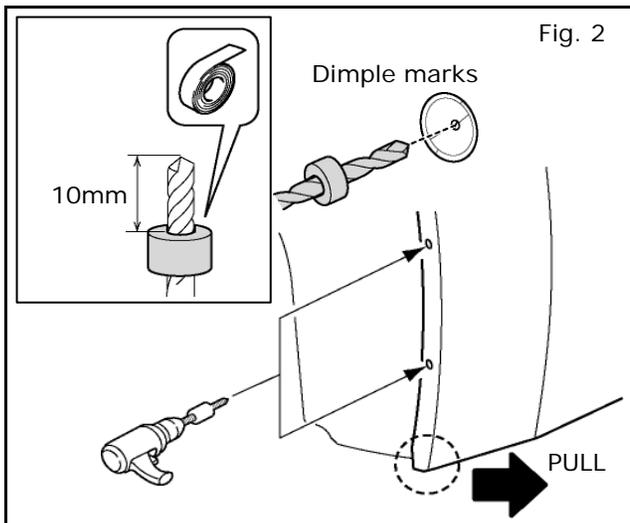


2) Pull out on bumper and Drill 3mm(1/8")→6mm(1/4") holes at 2 marked locations.

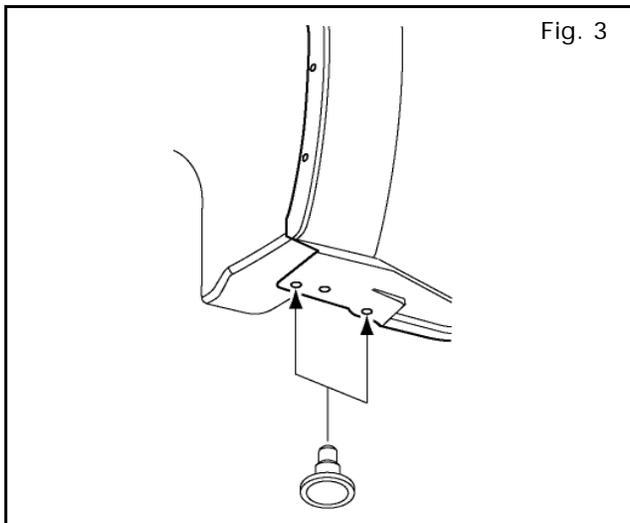


3) Reinstall clips.


INSTALLATION PROCEDURE:

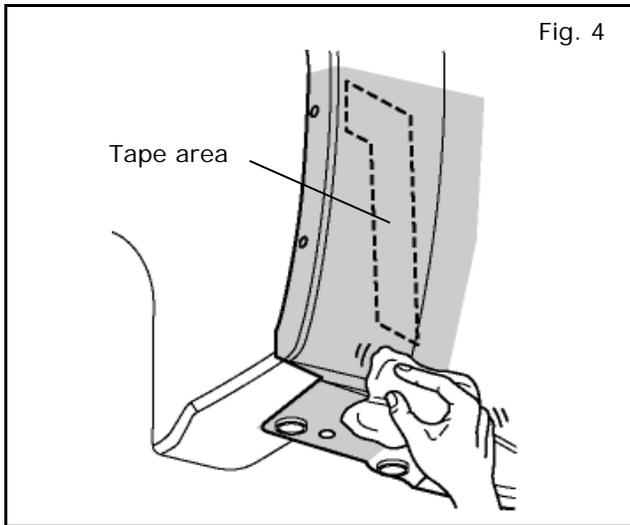

- 4) Clean installation surface (shaded area) with mild soap/water mixture.
- 5) Using a clean, lint free cloth, wipe tape area with 90% or greater alcohol.

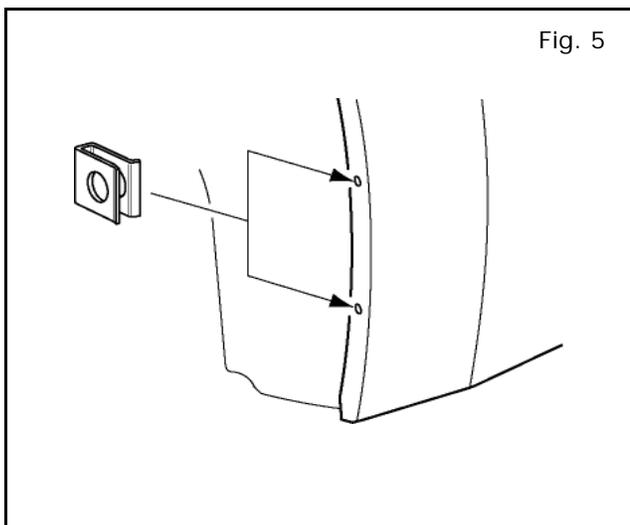


- 6) Install spring nuts (F).

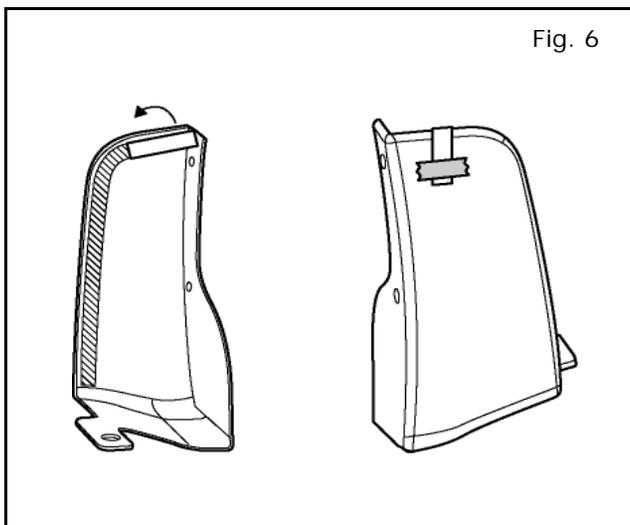


- 7) Fold tape liner pull tabs onto rear splash guard surface and apply masking tape to ensure that pull tabs are accessible.

INSTALLATION PROCEDURE:

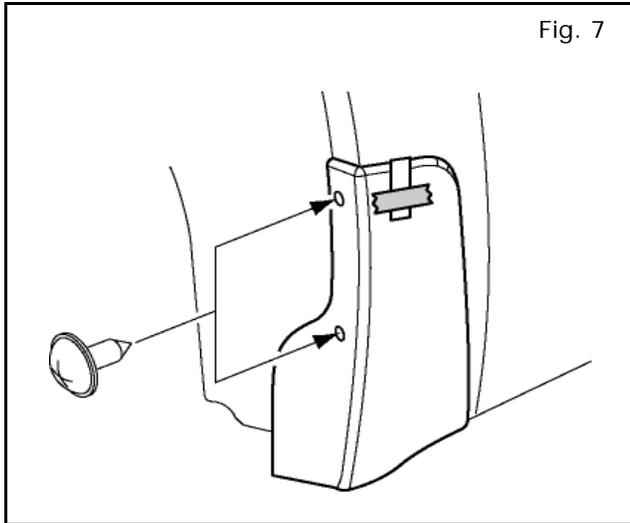


- 8) Align rear splash guard to vehicle and loosely install phillips screws (E).

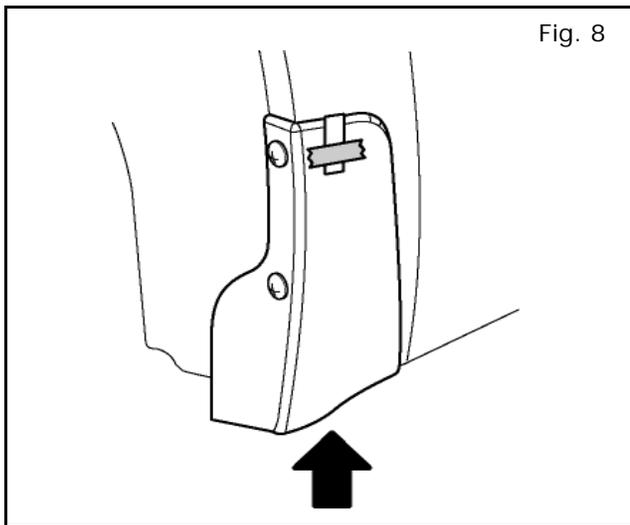

- 9) While pushing up splash guard from bottom, tighten phillips screws (E) as shown in Fig. 8.

NOTE:


Do not over tighten screws. Reference Tighten Torque: 3.8~4.4 N-m { 34~39 in-lb }

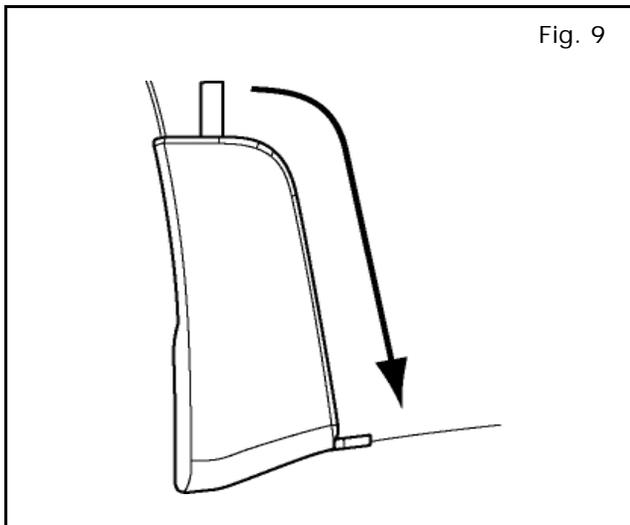

- 10) Remove tape liner in direction shown by arrow.

INSTALLATION PROCEDURE:

Fig. 10

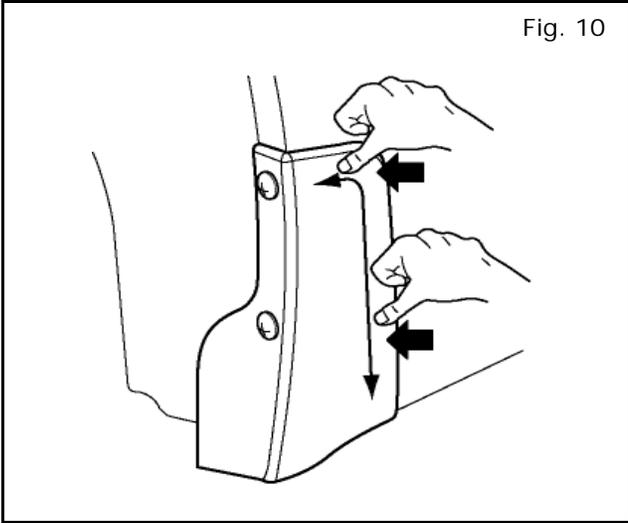


11) Apply at least 15lbs of pressure to rear splash guard to ensure that tape is attached.

NOTE:


Use a roller or burnish by hand with a rag and apply a minimum of 15lbs of pressure along length of tape.

Fig. 11

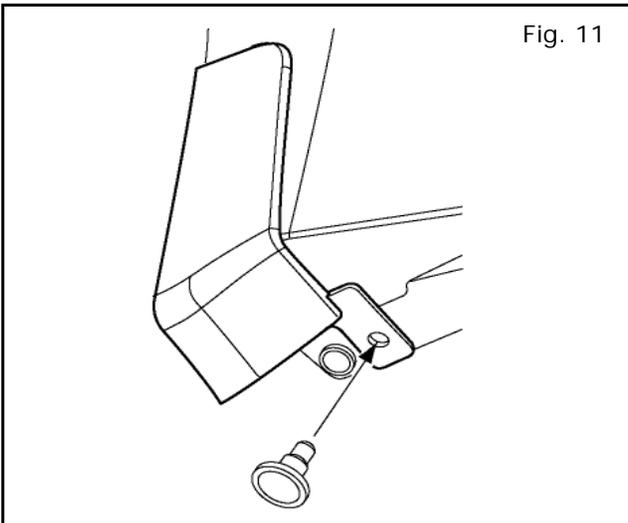

12) Install clip (G).

Fig. 12

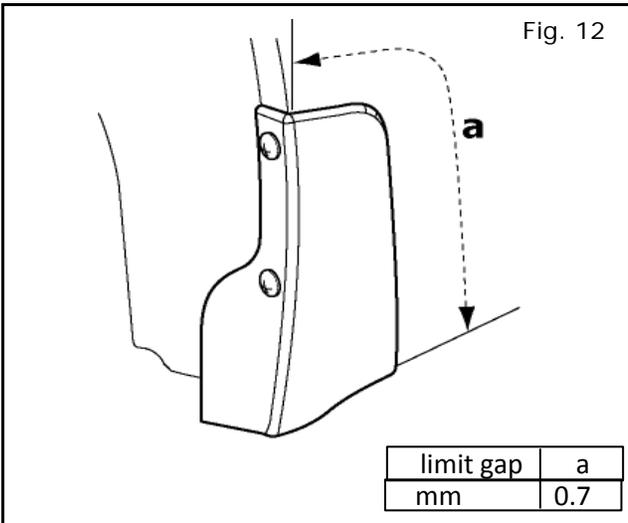

limit gap	a
mm	0.7

INSTALLATION PROCEDURE:

ACCESSORY CHECK:

- Check all torque values.
- Check gap. See Fig.12.
- Clean the rear bumper near the installation areas of the vehicle.

FINAL INSPECTION:

- Verify exterior is not damaged.

