



GENUINE PARTS

INSTALLATION INSTRUCTIONS


DESCRIPTION: Storage Compartment Mats

APPLICATION: KICKS


PART NUMBER: T99E7 5RL0A

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Shifter Liner	T99E7 5RL1A
B	1	Center Stack Liner	T99E7 5RL2A
C	1	Installation Instructions Replacement Template	999V2 AW000

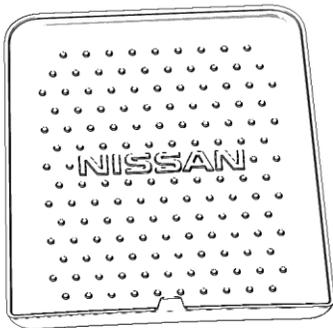

A

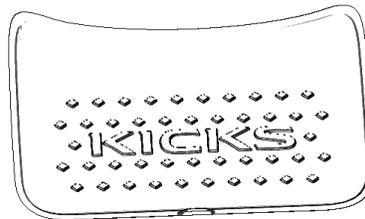

B



C

TOOLS REQUIRED:

- N/A

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer Installation Recommended. Instructions may refer to Service Manual.
- To maintain the luster of your storage compartment mats, clean with a cloth as required using standard automotive vinyl, leather and upholstery cleaners or soap and water.


⚠ WARNING

- Your tray is designed to transport normal compartment contents. Flammable or dangerous materials should not be transported in your vehicle at any time. If any corrosive chemicals are spilled on your tray it should be cleaned as described above


⚠ CAUTION

- Tray does not provide load restraint.

INSTALLATION PROCEDURE:

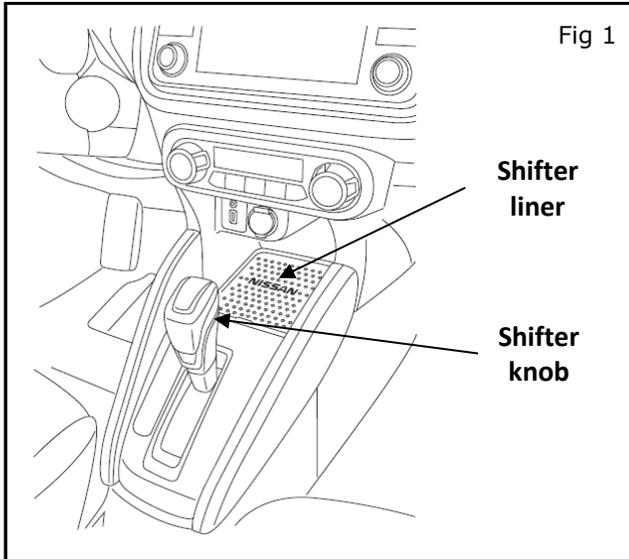

- 1) Place shifter liner (Item A) in compartment behind shifter knob (Fig 1).
- 2) Ensure that liner sits flat inside compartment.

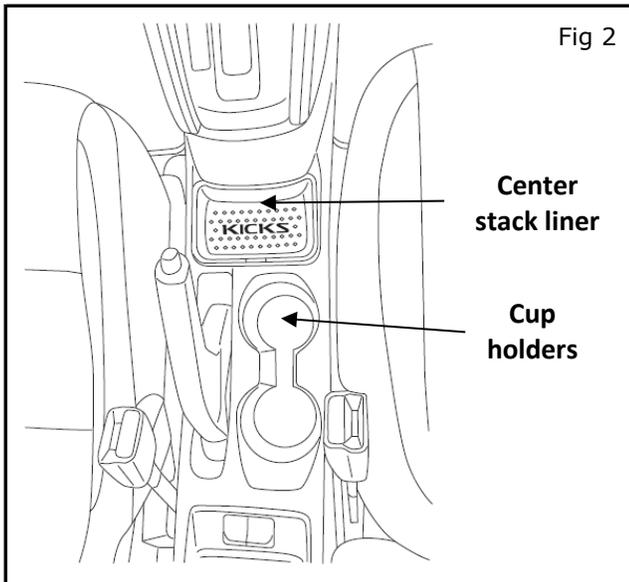

- 3) Place center stack liner (Item B) in compartment in front of cup holders (Fig 2).
- 4) Ensure that liner sits flat on top of compartment.