




# GENUINE PARTS

## INSTALLATION INSTRUCTIONS


<b>DESCRIPTION:</b>	Cargo Organizer
<b>APPLICATION:</b>	Leaf
<b>PART NUMBER:</b>	T99C2 5SA1A

### KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Cargo Bin	Not Available
B	2	Dividers	Not Available
-	-	Installation Hardware Kit	Not Available
C	2	• Jack nut	Not Available
D	1	• Jack nut installation tool	
E	1	• Bolt (Hex 10-24)	
F	2	• Knob	
G	4	• Spacer	
H	1	Installation Instruction Replacement Template	999V2 AW000

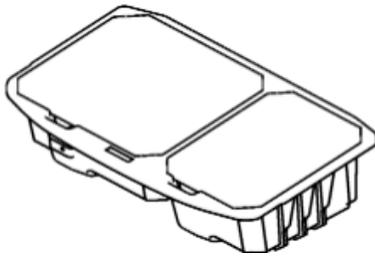


A

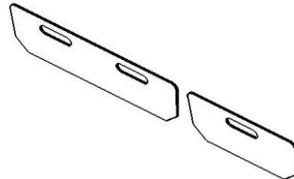

B




C

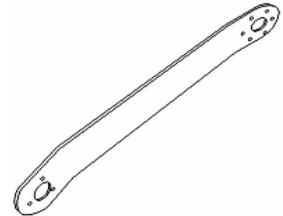


D



E

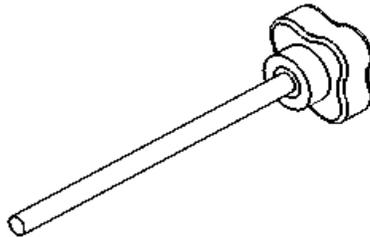

F



G

**STOP Important: Read Before Installation!**

Dealer Installation Recommended.

**WARNING**

To avoid serious personal injury or property damage, obtain the Installation Instructions before attempting to install this accessory. The Installation Instructions provide the necessary procedures for a safe installation.

**CUSTOMER INTERNET DOWNLOAD INSTRUCTIONS:** Customers can obtain Installation Instructions for Infiniti or Nissan vehicles at [www.Infiniti-TechInfo.com](http://www.Infiniti-TechInfo.com) or [www.Nissan-TechInfo.com](http://www.Nissan-TechInfo.com) respectively. From the home page, click on "Inside Publications" and select Accessory Installations. Select your model and model year, then locate the Instructions for your accessory.

**DEALER ASSIST DOWNLOAD INSTRUCTIONS:** Dealership technicians can locate the Installation Instructions for this accessory in **ASST\INFO TOOLBOX**. Always download and use latest version of the Installation Instructions.

Installation Instructions Replacement Template 999V2 AW000 Rev. 05/2018

H

### TOOLS REQUIRED:

- 5/16" socket & driver
- Clip removal tool
- Drill Motor
- 3/8" Drill bit

**PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:**

** WARNING**

• Cargo organizer is designed to transport normal cargo contents. Flammable or dangerous materials should not be transported in your vehicle at any time. If any corrosive chemicals are spilled in your organizer it should be cleaned as described below.





** CAUTION**

- Organizer does not provide load restraint.
- Maximum load of 150lbs (68Kg).
- Do not overtighten hand knob. Knob restraints organizer from moving in case of impact.

**NOTE:**

- DEALER - Provide these installation instructions to the customer as reference for proper operation and care of this unit.
- Dealer Installation Recommended. Instructions may refer to Service Manual.
- To maintain the luster of the plastic bin in your organizer, clean with a cloth as required using standard automotive vinyl, leather and upholstery cleaners or soap and water.
- Care should be taken to avoid damaging the interior panels while installing or removing the organizer. Do not use sharp tools to remove trim or weatherseal.

## INSTALLATION PROCEDURE:

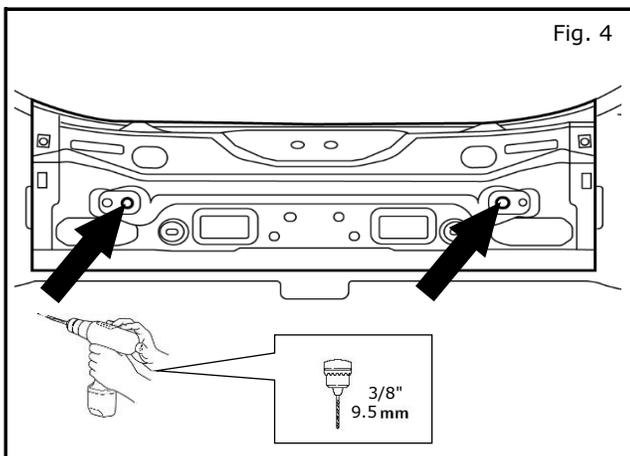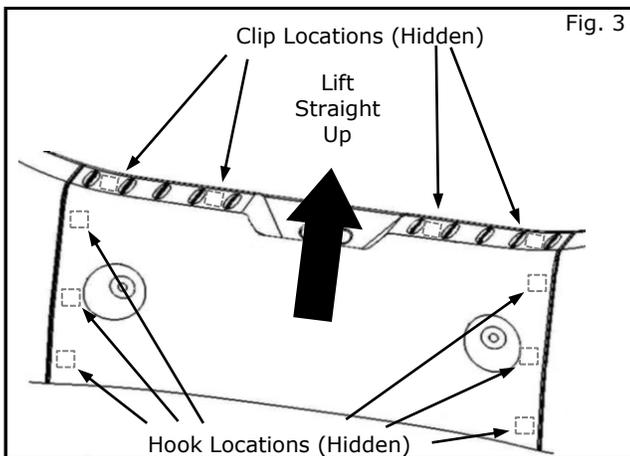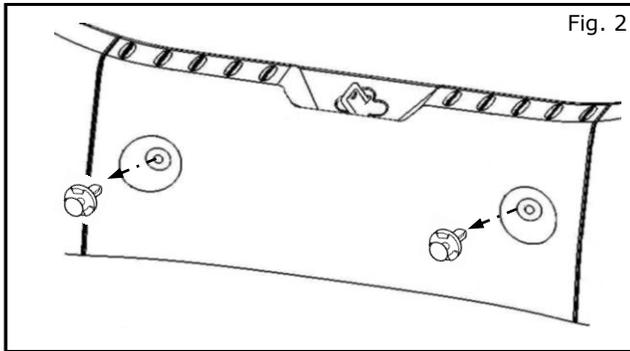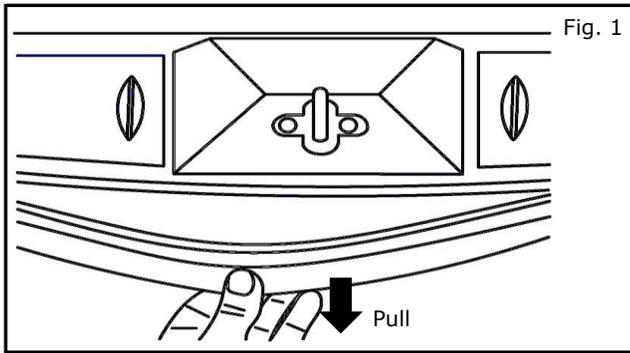

- 1) Remove parcel shelf and any contents in cargo area.
- 2) Gently pull weatherseal away from rear plastic trim plate.

- 3) Remove 2 rear trim clips.





**Critical Steps:** The following steps 4) and 5) are critical and must be performed **EXACTLY** as specified to ensure proper installation.

### NOTE:

• Failure to lift trim straight up will result in broken hooks.

- 4) Remove trim by using clip removal tool to disengage 4 top clips.
- 5) Disengage hooks by lifting trim straight up.
- 6) Drill out two holes where plastic trim clips were located using a 3/8" bit.
- 7) Deburr holes and apply rust preventative or touch up paint.

## INSTALLATION PROCEDURE: (continued)

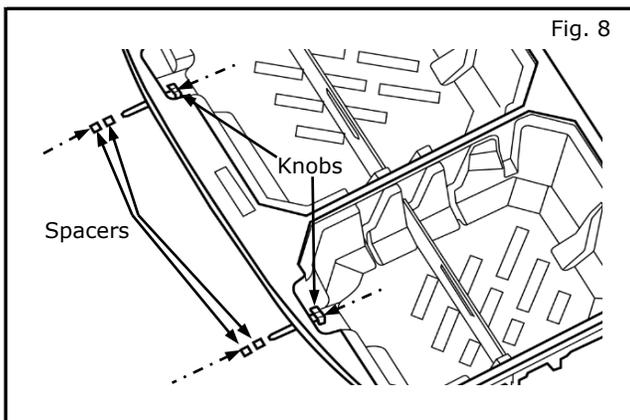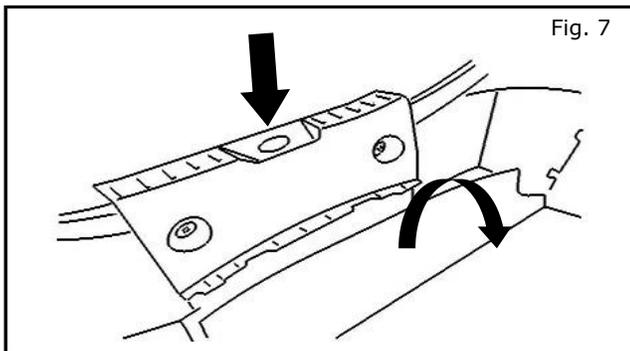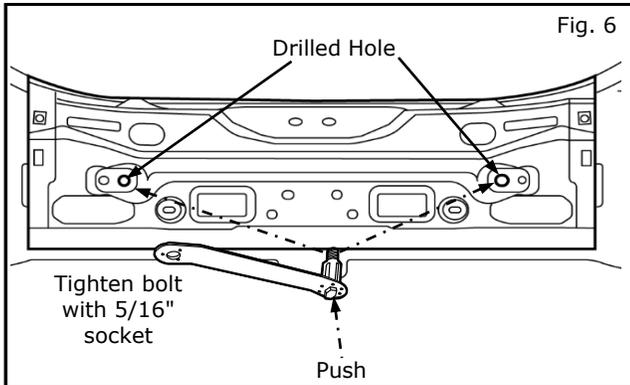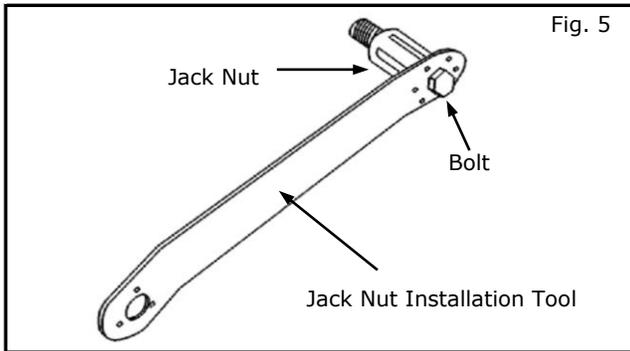

8) Place bolt through holes in jack nut installation tool and thread jack nut on bolt.

9) Push jack nut into driver side drilled hole and tighten bolt with 5/16" socket & driver.

### NOTE:

• Apply constant pressure to keep nut against sheet metal.

10) Secure jack nut to sheet metal by fully tightening bolt. Remove bolt and repeat steps 8 and 9 for passenger side drilled hole.


11) Lift load floor and reinstall rear trim.

12) Insert knob with threaded stud through each hole inside rear of cargo organizer and push 2 spacers onto each stud.


13) Place spacers so end of studs are covered.

14) Push spacers against cargo organizer.

**INSTALLATION PROCEDURE: (continued)**

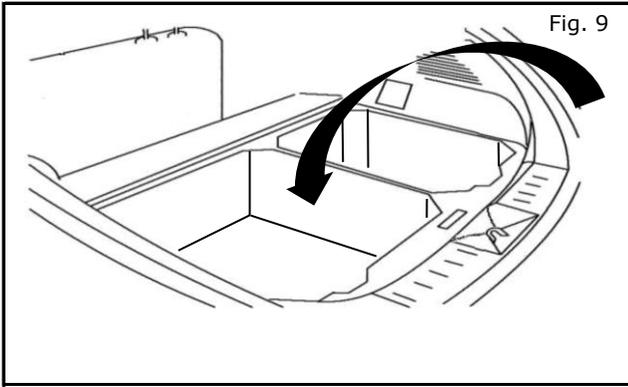


- 15) Slide cargo organizer into rear trunk well.

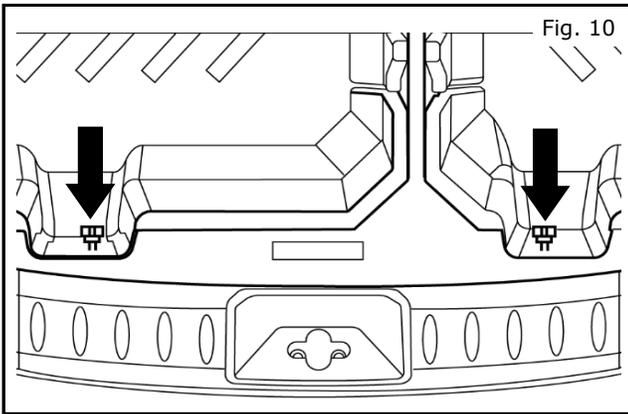


- 16) Align knob studs with jack nut holes and hand tighten against spacers.

**⚠ CAUTION**

- Turn knob **ONLY** until resistance is felt from the spacers. Do not overtighten knob.
- Maximum bin load of 150lbs (68Kg)

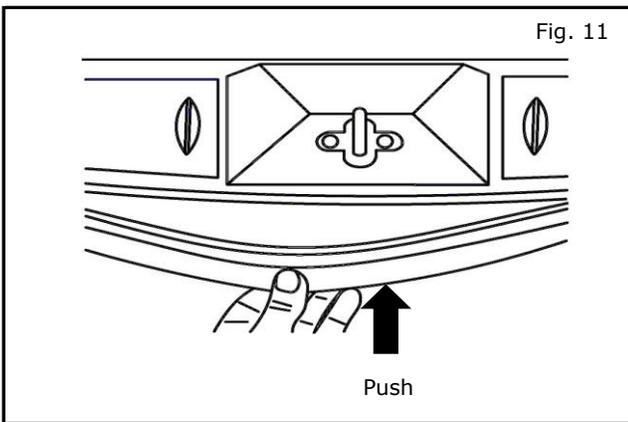


- 17) Reinstall trunk weatherseal.

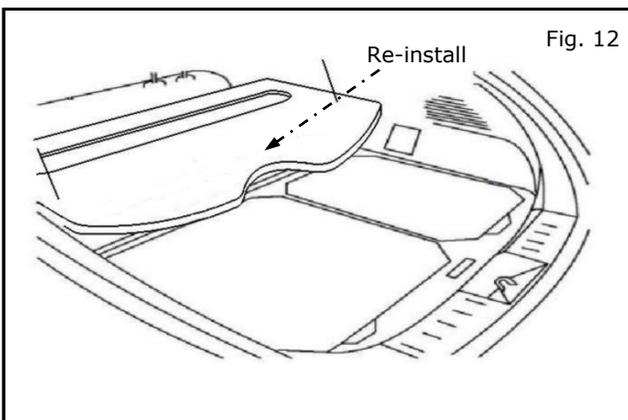

- 18) Reinstall parcel shelf once cargo bin is secured (if applicable).

**INSTALLATION PROCEDURE: (continued)**

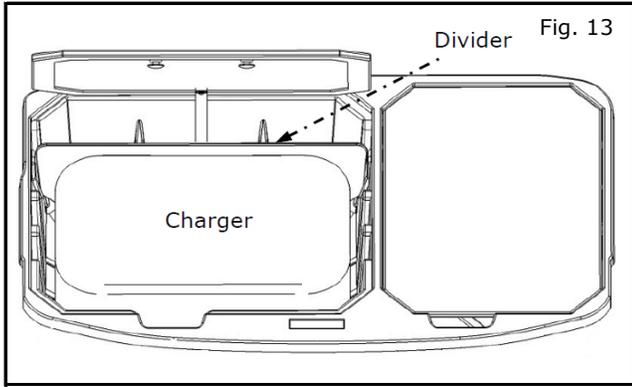

- 19) Store charge kit in larger bin with divider installed behind it.