





GENUINE PARTS

INSTALLATION INSTRUCTIONS


DESCRIPTION: Hide-Away Trunk Net Kit			
APPLICATION: Altima			
PART NUMBER: T99C1 6CA0A			
KIT CONTENTS:			
Item	Qty.	Part Description	Service Part Number
A	1	Trunk Net	---
B	2	Loop Style Clip	84937 CA002
C	1	Installation Instruction Replacement Template	---

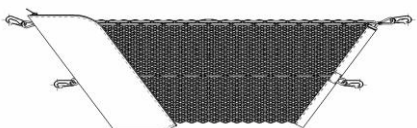

A



B



C

TOOLS REQUIRED:

- Clip Removal Tool

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Ensure that net is securely attached so items do not fall out during transit.
- Keep this installation instruction sheet with the Vehicle Owner's Manual for future reference.
- Max load not to exceed 30 lbs.

INSTALLATION PROCEDURE:

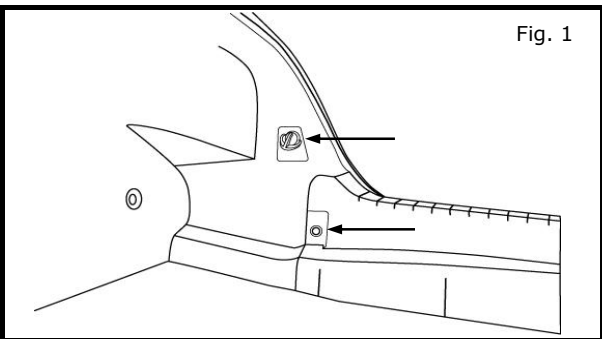


Fig. 1

1) Locate 4 attachment points in cargo area (passenger side shown).




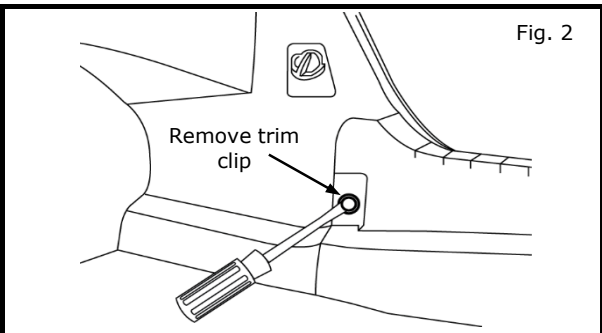


Fig. 2

2) Use clip removal tool to pry out center portion of passenger lower side trim clip. Once center is partially out, trim clip can be fully removed.

INSTALLATION PROCEDURE:

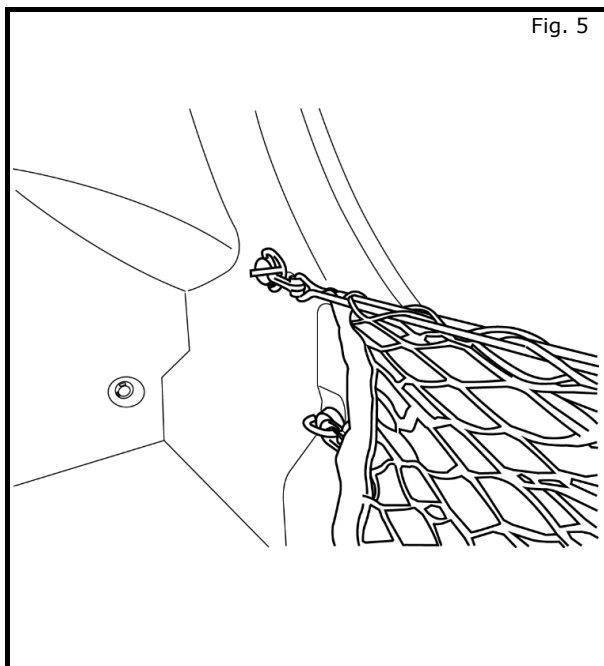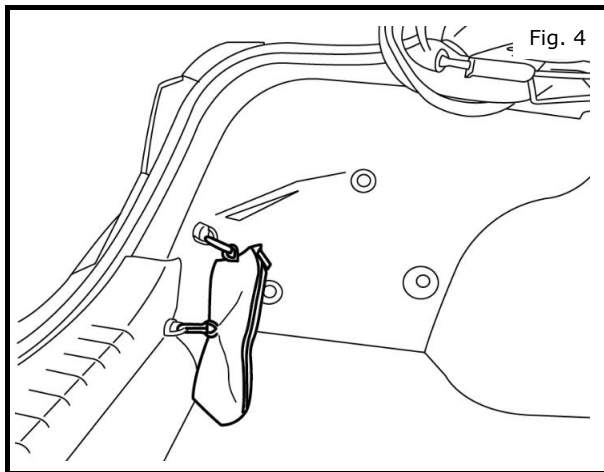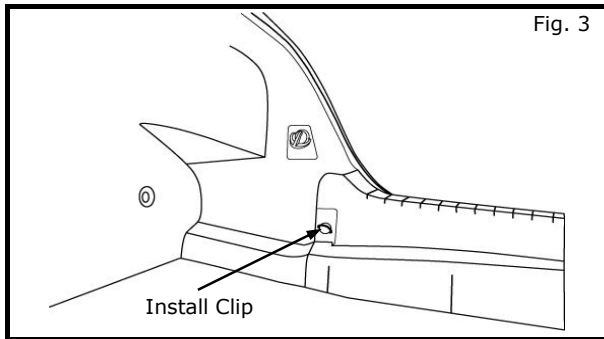

- 3) Install Loop Style Clip.
 - a) "Pop-out" center portion of clip.
 - b) Position pointed end of clip in hole.
 - c) When fully seated, push in center to secure clip.
- 4) Repeat steps 2 and 3 for driver side.
- 5) Attach pouch to drivers side clips, un-zip pouch and un-roll net to attach to passengers side of vehicle.
- 6) Locate upper hook and attach to upper passenger side clip. Repeat for lower attachment point.
- 7) To store cargo net in pouch, detach passenger side hooks, fold cargo net into hide-away pouch and zip closed.