




## GENUINE PARTS

### INSTALLATION INSTRUCTIONS


**DESCRIPTION:** Splash Guard Kit - Front Set  
**APPLICATION:** Altima  
**PART NUMBER:** T99J2 6CAxx (xx Designates color)

**KIT CONTENTS:**

Item	Qty.	Part Description	Service Part Number
A	1	Splash Guard - Front Right	---
B	1	Splash Guard - Front Left	---
C	1	Installation Instruction Replacement Template	999V2 AW000
D	1	Installation Hardware Kit	---
E	6	• Phillips Screw M5 x 20mm	14-51 00891
F	2	• Clip	11296 AG000

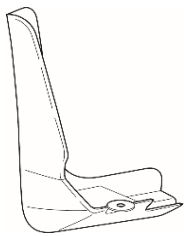

A

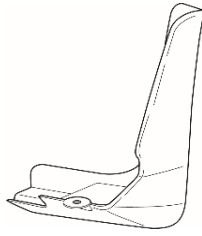

B



C



E



F


**TOOLS REQUIRED:**

- Phillips head short screwdriver
- Clip removal tool
- Clean, lint-free wiping cloth
- Mild soap / water mixture
- 90% or greater alcohol


**PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:**

- Dealer Installation Recommended. Instructions may refer to Service Manual.
- These instructions are for left side of vehicle; same procedure applies to right side.


## INSTALLATION PROCEDURE:

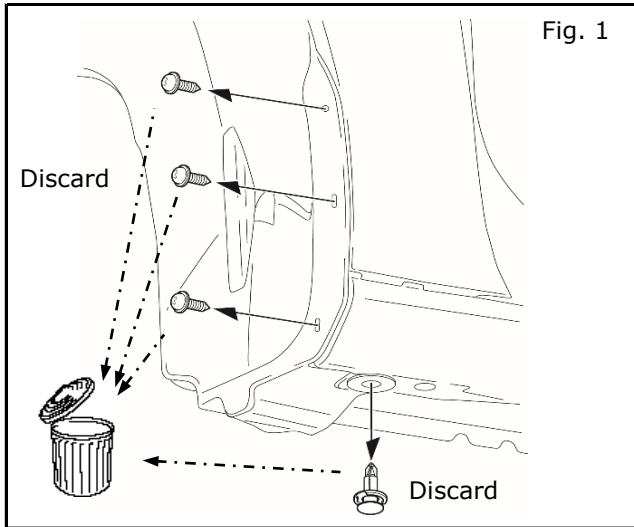

- 1) Remove screws and clip from sill fender protector and discard.

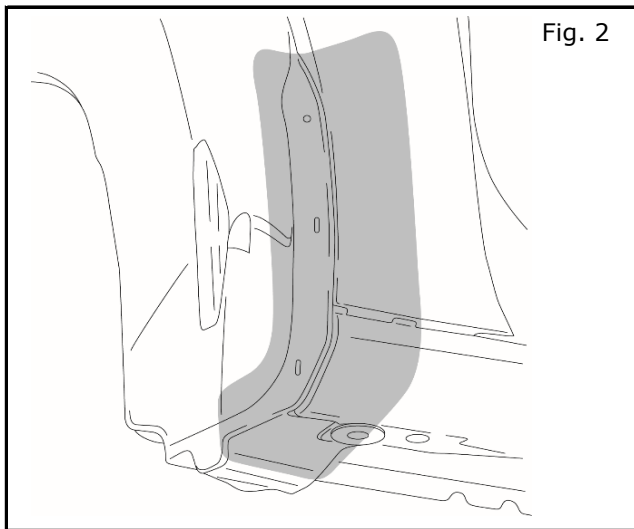


- 2) Clean installation surface (shaded area) with mild soap/water mixture.
- 3) Using a clean, lint free cloth, wipe tape area with 90% or greater alcohol.

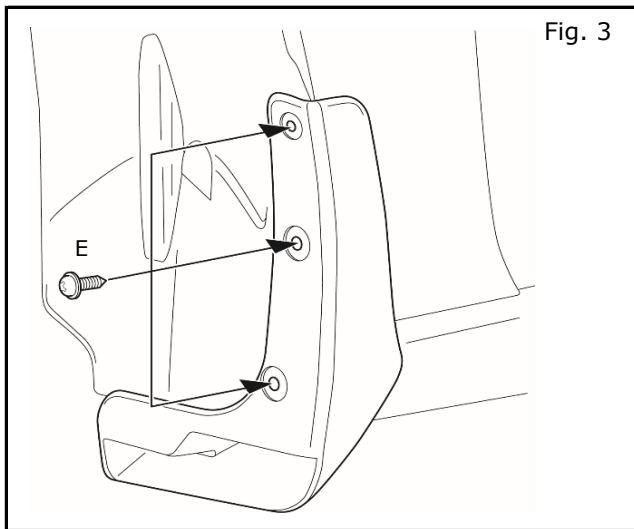


- 4) Align front splash guard to vehicle and loosely install phillips screws(E).

## INSTALLATION PROCEDURE:

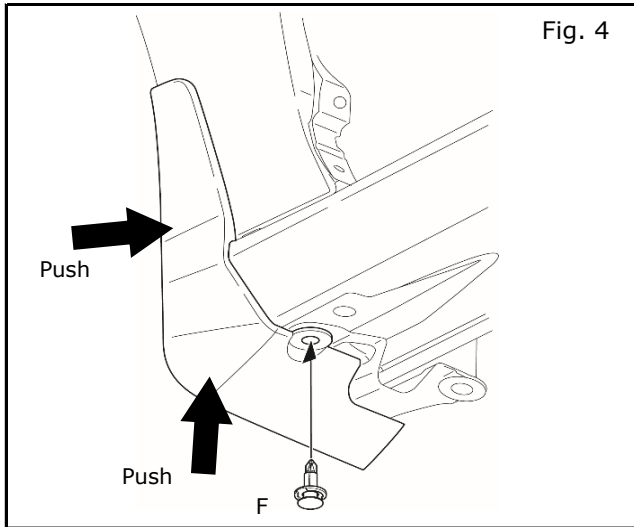

- 5) Push splash guard upward/inward and install clip(F).

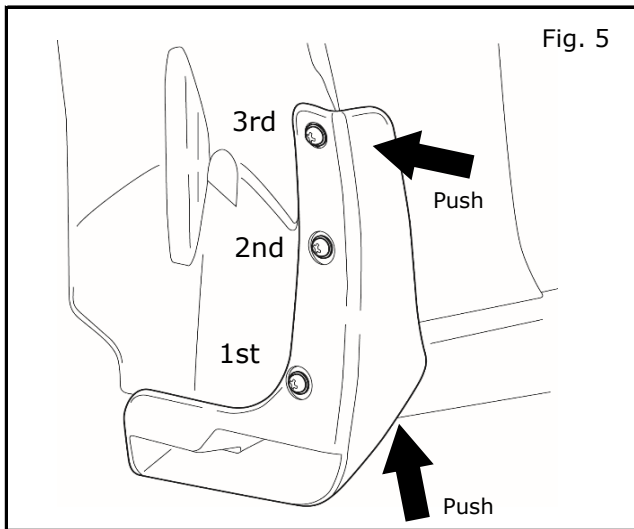

- 6) Push splash guard upward/inward, and tighten phillips screw(E) in sequence shown.

### NOTE:

**Do not over tighten screws. Reference tightening torque 3.8~4.4 N-m (33.6~38.9 lb-in).**

## ACCESSORY CHECK:

- ☐ Check all torque values.
- ☐ Clean fenders and sill covers near installation areas of vehicle.

## FINAL INSPECTION:

- ☐ Verify exterior is not damaged.