




GENUINE PARTS


INSTALLATION INSTRUCTIONS

DESCRIPTION:	Door Edge Protector - Clear		
APPLICATION:	Murano		
PART NUMBER:	T99D7 C6000		
KIT CONTENTS:			
Item	Qty.	Part Description	Service Part Number
A	5	Door Edge Protector - Front LH	Available as Kit only/Kit PN# T99D7 C6000
B	5	Door Edge Protector - Front RH	
C	5	Door Edge Protector - Rear LH Top	
D	5	Door Edge Protector - Rear LH Bottom	
E	5	Door Edge Protector - Rear RH Top	
F	5	Door Edge Protector - Rear RH Bottom	
G	2	Felt Block	
H	1	Chizzler	
I	1	Installation Instruction Website Address	999V2 AW000
TOOLS REQUIRED:			
<ul style="list-style-type: none">● 90% or greater alcohol● Clean, lint-free wiping cloth			
PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:			
<ul style="list-style-type: none">● An overview video is available online as additional aid to help with installation at following web address: https://www.youtube.com/watch?v=pdmj-zPFkva&feature=youtu.be● Dealer installation recommended. Instructions may refer to Service Manual.● Please read this instruction carefully before installing this product for correct installation.● Please DO NOT use or install the part in ways other than what is described.● Thoroughly wash vehicle with soap and water prior to installation.● Take care not to scratch or damage any component during the removal or re-installation process.● Do not install out doors, installation should be done indoors, and in clean environment with adequate lighting.● Make sure your hands are clean and free from any contaminants that can transfer to adhesive.● Use tabs when handling protective film so no fingerprints are left on adhesive.● Vehicle body and protective film should be at 18°C to 32°C (65°F to 90°F) for optional installation.● Avoid washing vehicle and exposure to moisture for 24 hours after protective film installation.● If a problem occurs during installation, please contact Nissan dealer where you purchased the product.			


INSTALLATION PROCEDURE:

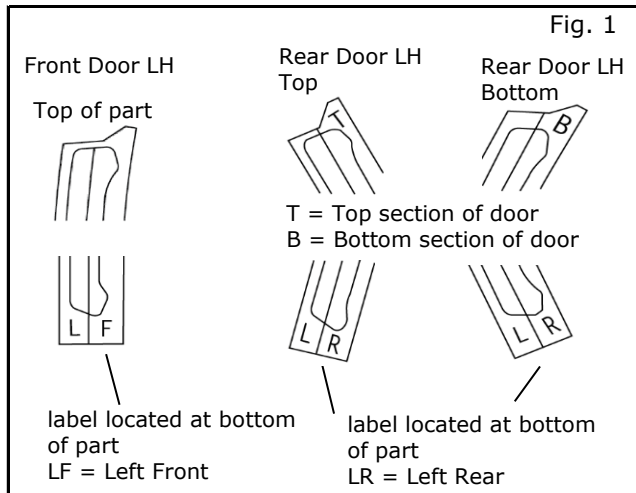

- 1) Review table shown in fig. 1 to identify where each part is to be installed on vehicle.

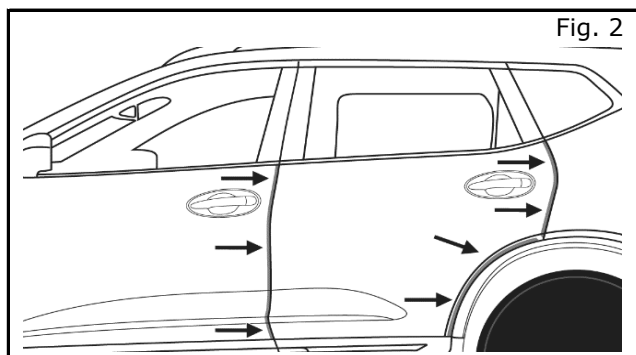

- 2) With alcohol and clean micro fiber cloth; clean inner and outer door edge surface where film is to be applied.

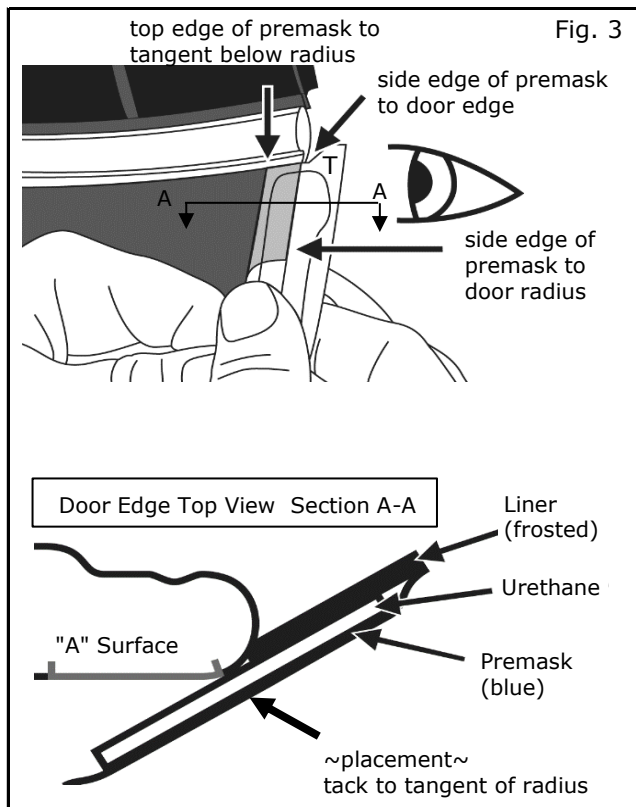

- 3) Roll down one half of back side of liner (frosted) that will adhere to door surface, exposing 6-8 inches of adhesive.
- 4) Align top edge of premask (blue) to tangent below radius on door and gently tack down exposed adhesive edge of remaining liner to edge of door radius as shown in section A-A.
- 5) Continue moving downward while gently tacking and aligning corner edge of film to radius of door while removing half of liner (frosted) in 6-8 inch increments.


NOTE:

Do not touch exposed adhesive.

NOTE:

Do not apply firm pressure at this time.

INSTALLATION PROCEDURE:

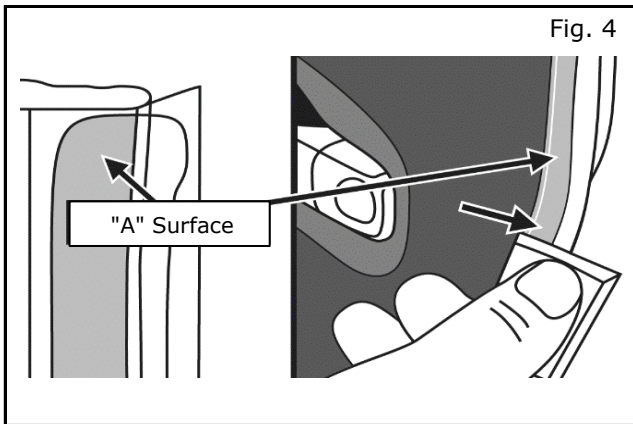


- 6) Starting from top use felt block (pointed beveled edge) at an angle and apply firm pressure on "A" surface to squeegee bubbles out.

NOTE:


Do not use a shoveled motion.

NOTE:


Do not move on if any air bubbles present gently lift up film and reapply.

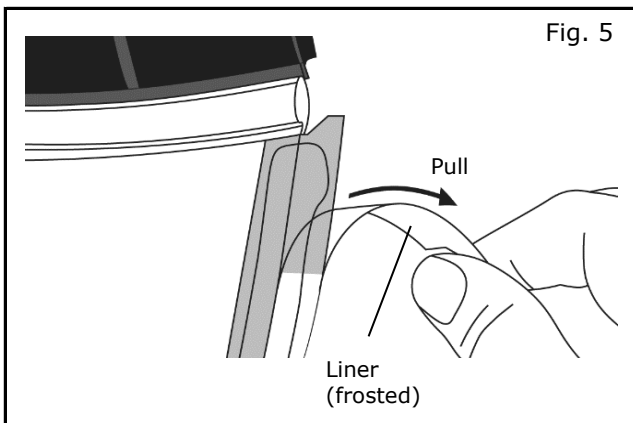

- 7) Starting from top and from back carefully remove other half of remaining liner strip (frosted) and discard.

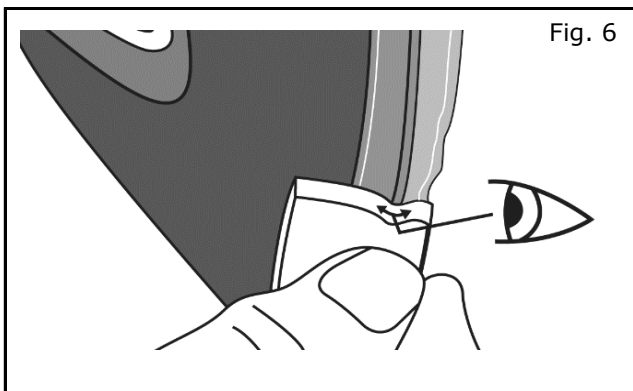


- 8) Use felt block to squeegee film with firm pressure approximately half way around door edge.

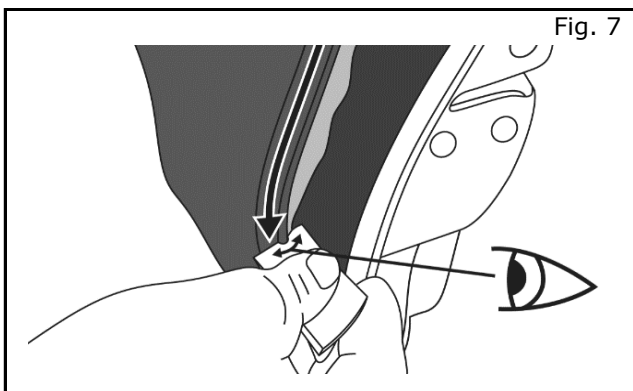


- 9) Use felt block to squeegee film with firm pressure around remaining radius of door edge.


INSTALLATION PROCEDURE:

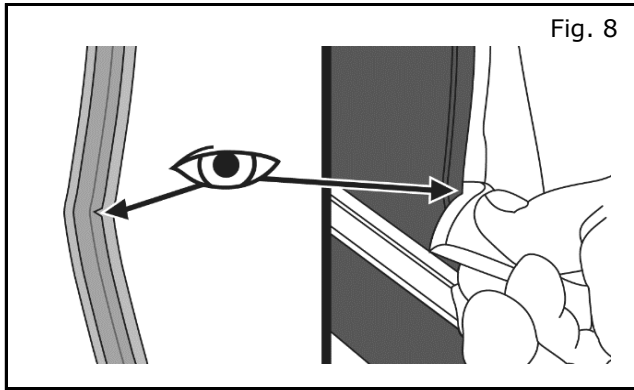


10) Using felt block complete wrap around "notched" corner features first.

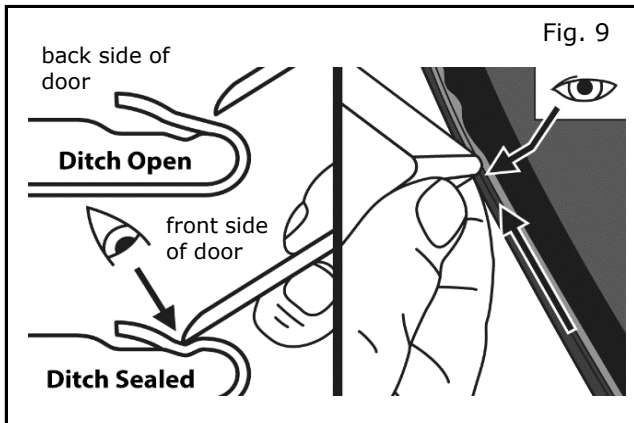

11) Use hard chisler tool and push film into back crease located at back side of door.

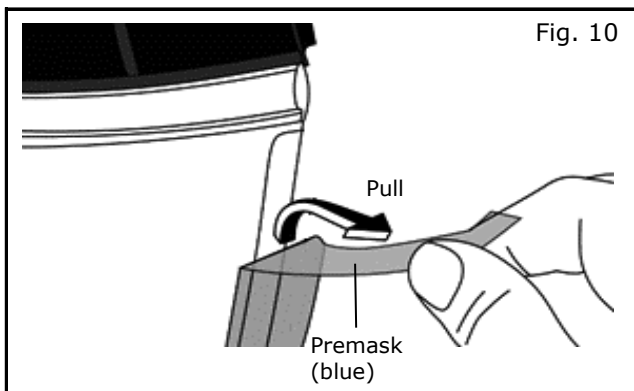

12) Carefully remove premask (blue) perpendicular to door edge and discard.

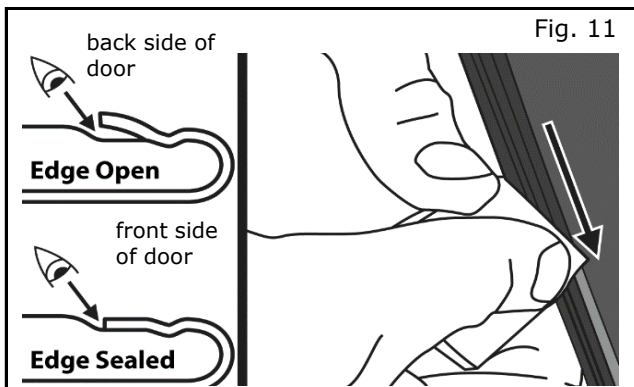


13) Repeat step 11 and use hard chisler tool to push film into back crease located at back side of door.

14) Use felt block and press smoothly to completely seal remaining film on backside of door edge.

15) Repeat steps 3 - 14 for rear left hand top protector.

INSTALLATION PROCEDURE:

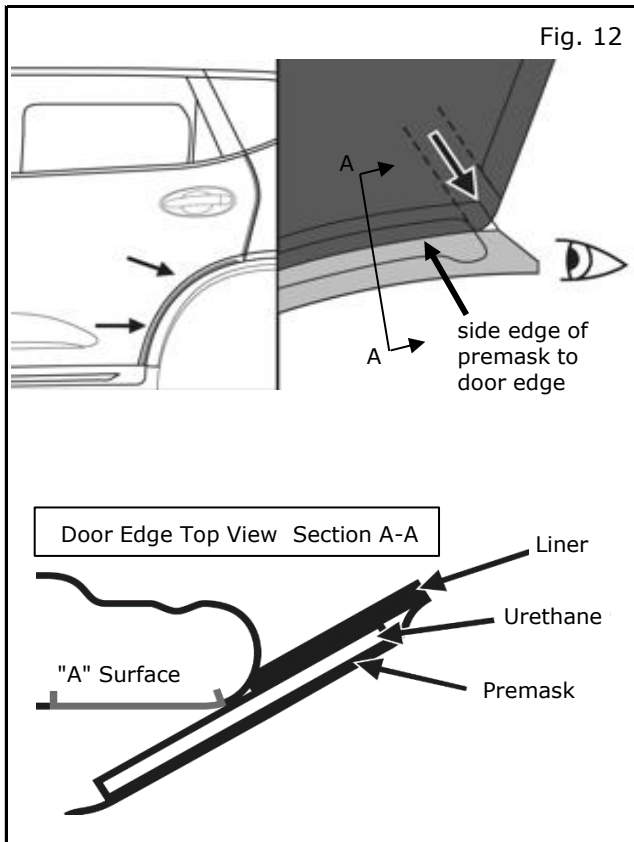

- 16) Roll down back side of liner exposing 6-8 inches of adhesive.
- 17) Align edge of door edge guard to tangent below radius on door and side edge of remaining liner to edge of door as shown in section A-A.
- 18) Repeat steps 6 - 14.

- 19) Repeat for RH side.