



GENUINE PARTS

INSTALLATION INSTRUCTIONS


DESCRIPTION: Rear Underbody Trim

APPLICATION: Murano


PART NUMBER: T99G8 C7020

KIT CONTENTS:


Item	Qty.	Part Description	Service Part Number
A	1	Painted Rear Underbody Trim	T99G8 C7021
B	4	Push Pin	M32 0800 08
C	1	Drilling Template	999G8 C7020TP
D	1	3M Auto Adhesive Promoter	4298
E	1	Installation Instruction Replacement Template	999V2 AW000

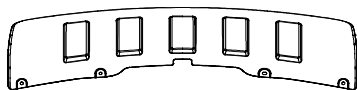

A

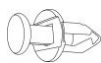

B

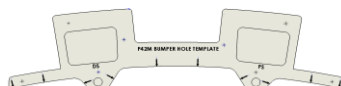

C



D



E

TOOLS REQUIRED:

- 3.0 mm(1/8") Drill Bit
- 8.0 mm(5/16") Drill Bit
- 9.5 mm(3/8) Drill Bit
- Flat Screwdriver
- Awl
- Drill
- ≥90% alcohol/water solution.
- Clean, Lint Free Cloth
- Safety Glasses
- Masking Tape

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:


- Dealer Installation Recommended.
- Jack up vehicle using instructions under "Changing Tire" section of owner's manual.

WARNING

- Exhaust pipes can be extremely hot. Wait at least 30 minutes after running the engine to allow the exhaust pipes to cool.


INSTALLATION PROCEDURE:

Fig. 1

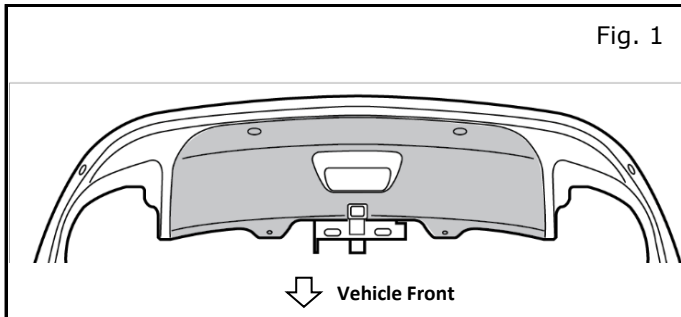


- 1) Clean installation surface (shaded area) with mild soap/water mixture.

Fig. 2

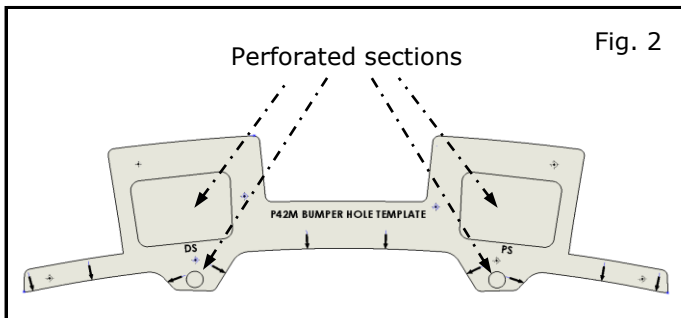


- 2) Remove perforated sections of drill template.

Fig. 3

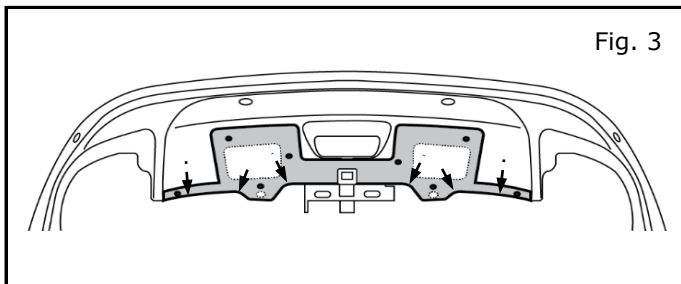

- 3) Align drill template to bottom edge of rear fascia using arrows. Tape Drill Template to Fascia according to sequence shown on the template


Fig. 4

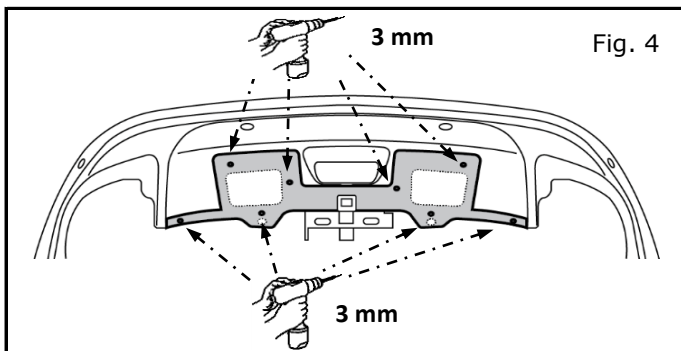

- 4) Using Awl, firmly mark center of each of the eight holes and drill 3mm(1/8") pilot holes.

NOTE: Use care when drilling holes. Do not allow drill bit to go too deep. There are other parts behind rear fascia

Fig. 5

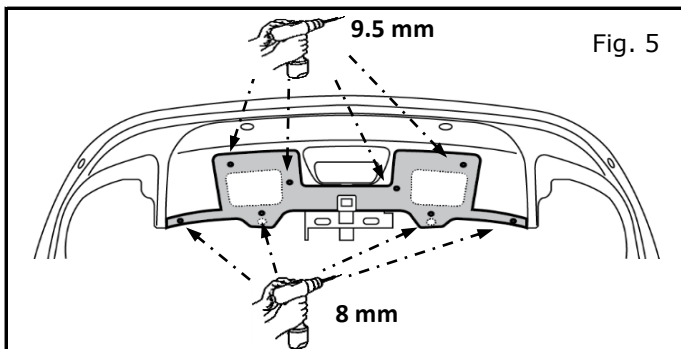

- 5) Drill four 8mm(5/16") holes at bottom edge of rear fascia and then drill four 9.5mm(3/8") holes in center area of rear fascia.

NOTE: Use care when drilling holes. Do not allow drill bit to go too deep. There are other parts behind rear fascia

INSTALLATION PROCEDURE:

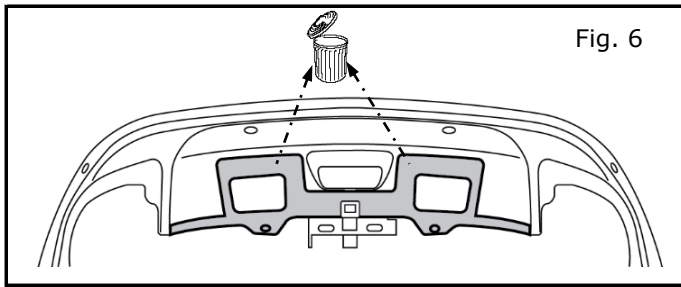


Fig. 6

- 6) Remove template from car and wipe off any plastic shavings from drilling.

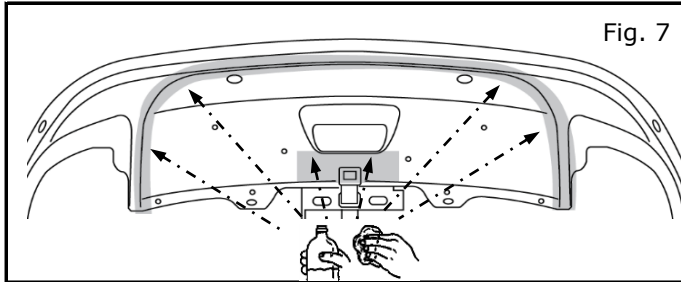


Fig. 7

- 7) Clean tape installation surface (shaded area) with $\geq 90\%$ alcohol/water solution.

NOTE:

DO NOT remove tape liners at this time.

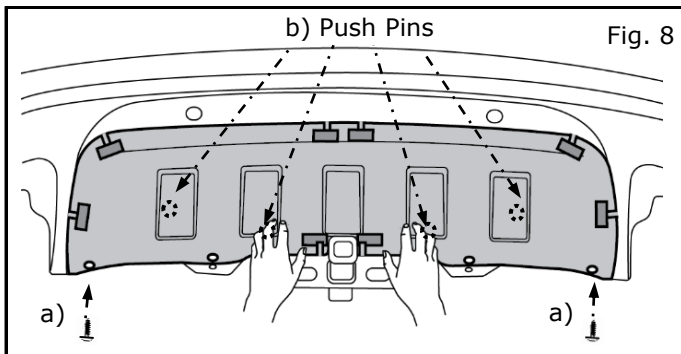


Fig. 8

- 8) Dry fit underbody trim to rear fascia.

a) Insert 2 push pins at bottom of rear fascia(outboard holes).

b) Press firmly to engage 4 push pins attached to backside of the part.

NOTE:

DO NOT remove tape liners at this time.

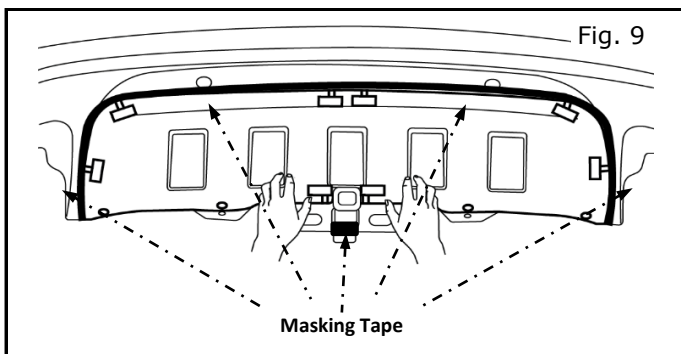


Fig. 9

- 9) Apply masking tape to outline perimeter of underbody trim. Once masking tape is completely applied, carefully remove part from rear fascia.


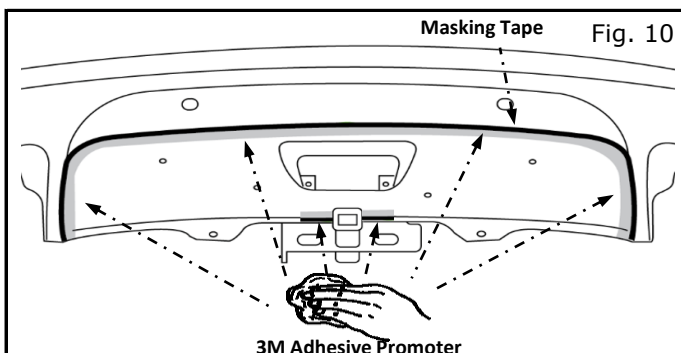



Fig. 10

- 10) Staying inside of masked area, apply 3M Auto Adhesive Promoter. Be sure to cover approximately 15mm inside the masked area. Wait 2 minutes for Adhesive Promoter to dry then remove masking tape


INSTALLATION PROCEDURE:

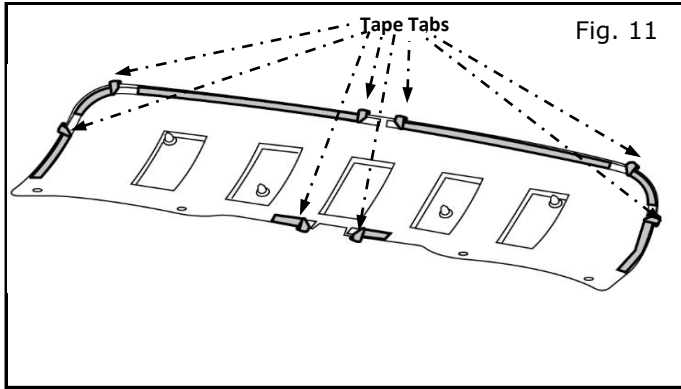


- 11) Carefully peel tape liners back at least 25mm(1"), fold over and tape to front side of part (8 places).

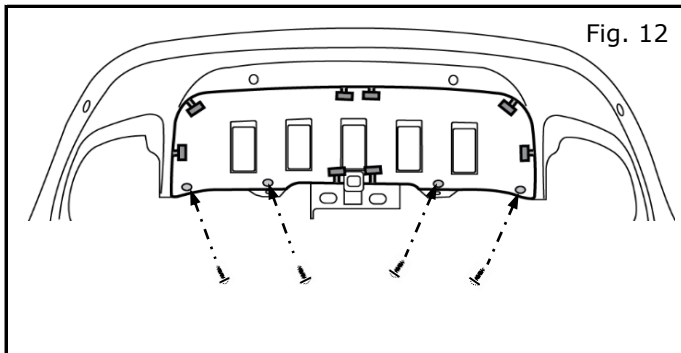


- 12) Carefully place underbody trim against rear fascia. Insert 4 push pins into the four drilled holes as shown in Fig. 8.

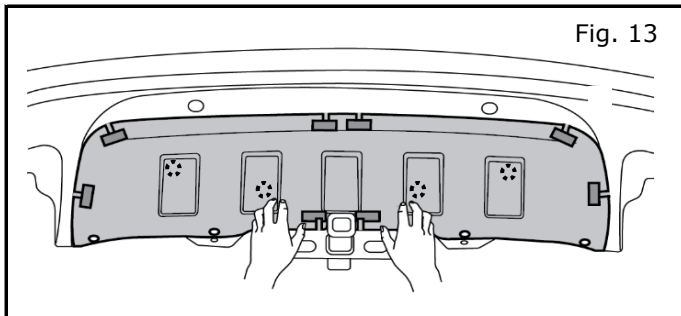

- 13) Press firmly to engage 4 center push pins attached to backside of the part.

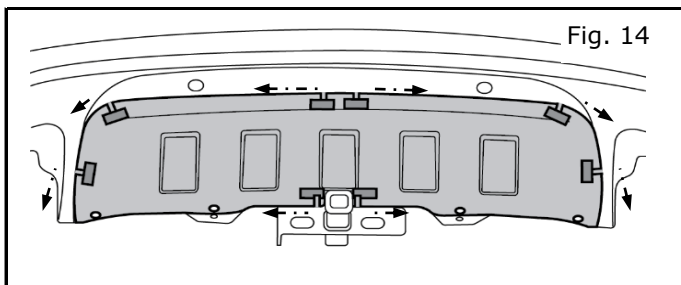

- 14) Carefully peel tape liners out from between rear fascia and underbody trim part.

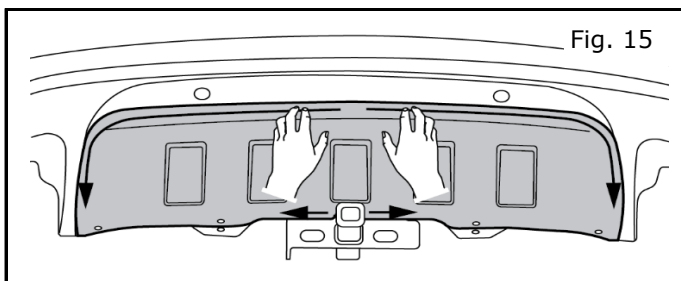

- 15) Starting from top center apply 15 lbs force around the perimeter as you remove each of the tape liners (8 places).