



GENUINE PARTS

INSTALLATION INSTRUCTIONS


1. **DESCRIPTION:** Splash Guard Kit

2. **APPLICATION:** Maxima

3. **PART NUMBER:** 999J2 MVxxx

4. **KIT CONTENTS:**

Item	QTY	Description	Part Number
A	1	Splash Guard – Front RH	999J2 MV0FR (service kit)
B	1	Splash Guard – Front LH	999J2 MV0FL (service kit)
C	1	Splash Guard – Rear RH	999J2 MV0RR (service kit)
D	1	Splash Guard – Rear LH	999J2 MV0RL (service kit)
E	6	Philips Head Screw M5 x 20mm	14-51 00891
F	4	Spring Clip	12-41 01011
G	8	Push Pin	15-53 05323
H	1	Installation Instructions	999J2 MV000

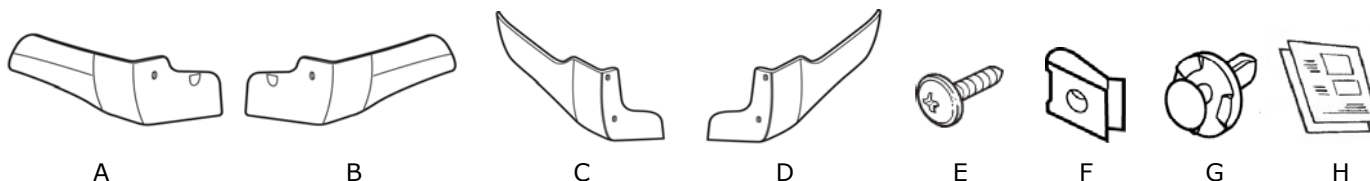

5. **TOOLS REQUIRED:**


- clean rag
- 50/50 alcohol/water solution
- drill
- 6mm (1/4") drill bit
- #2 phillips screw driver

6. **PRE-INSTALLATION NOTES:**


- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

INSTALLATION INSTRUCTIONS - Splash Guard Kit


7. INSTALLATION PROCEDURE (FRONT SPLASH GUARD):

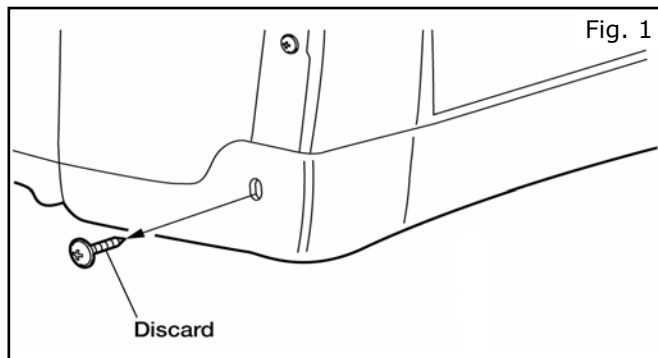

- 1) Prepare installation surface.
 - a) Remove and discard screw.
 - b) Clean installation surface using 50/50 alcohol/water solution.

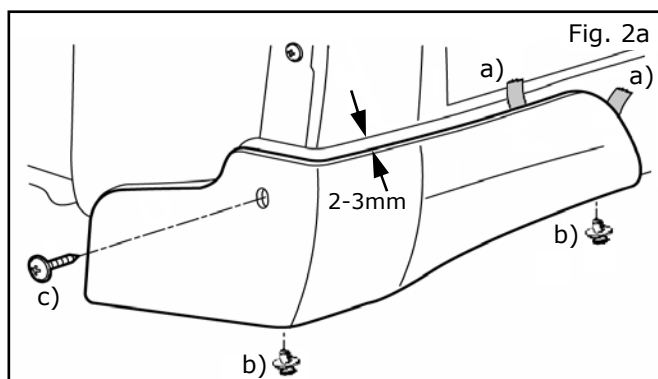

- 2) Install front splash guard.
 - a) Fold tape pull tabs up to ensure they can be reached once splash guard is mounted on the vehicle (2 locations).
 - b) Hold splash guard up to vehicle and install 2 push pins underneath part.
 - c) Push rearward on front of splash guard, align top of splash guard to bottom radius of rocker trim (approximately 2-3mm from top edge of rocker trim) as shown in Fig. 2a and install screw in front of part.

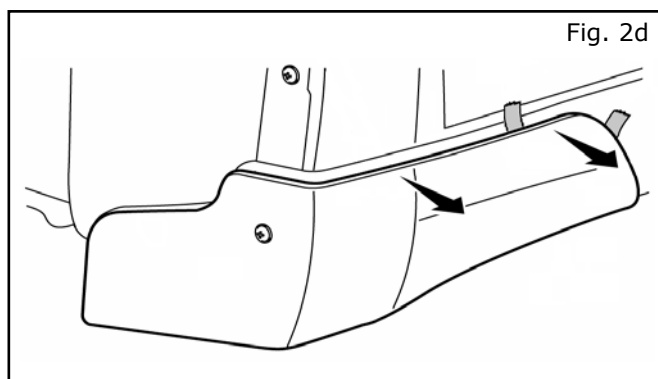


- d) Pull out on rear corner and top edge of splash guard and remove tape liner using pull tabs.
- e) While holding splash guard away from vehicle so tape does not contact the surface, align again as described in step 2c and push splash guard tight to vehicle along tape area starting at the front of the part and working rearward.


NOTE: USE A ROLLER OR BURNISH BY HAND TO APPLY A MINIMUM OF 15 LBS OF PRESSURE ALONG LENGTH OF TAPE (STARTING AT FRONT OF PART AND WORKING REARWARD).

INSTALLATION INSTRUCTIONS - Splash Guard Kit

8. INSTALLATION PROCEDURE (REAR SPLASH GUARD):

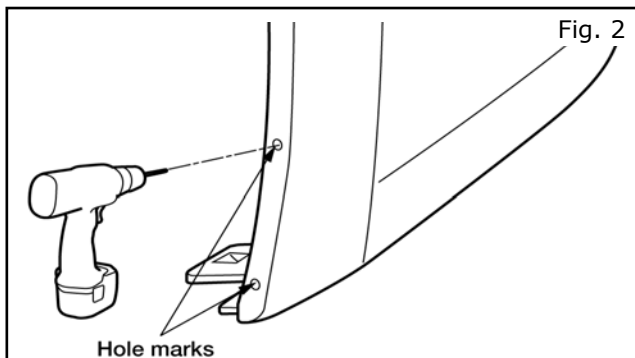


- 1) Prepare installation surface.
 - a) Clean installation surface using 50/50 alcohol/water solution.
- 2) Drill holes.
 - a) Pull out on bottom of fascia for better access to hole marks.
 - b) Drill 6mm (1/4") holes at hole marks on fascia.

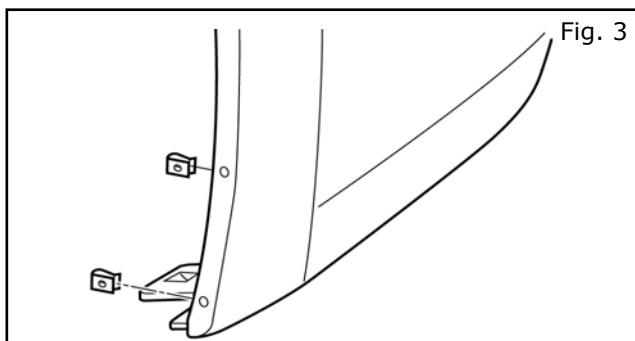


- 3) Install spring clips.

NOTE:
INSTALL SPRING CLIPS WITH FLAT EDGE ON OUTSIDE OF FASCIA.

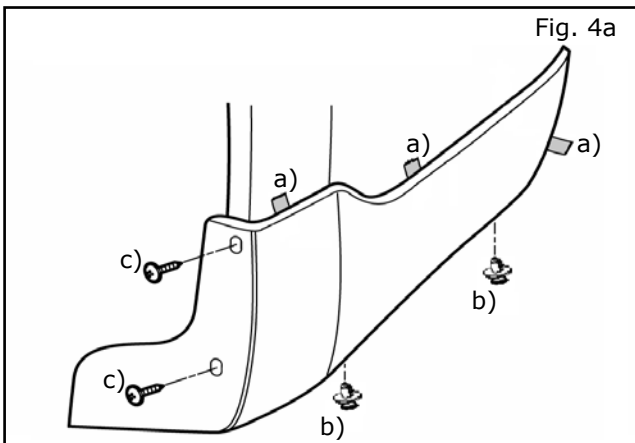

- 4) Install rear splash guard.
 - a) Fold tape pull tabs up to ensure they can be reached once splash guard is mounted on the vehicle (3 locations).
 - b) Hold splash guard up to vehicle and install 2 push pins underneath part.
 - c) Push rearward, upward and inward on splash guard and install (2) screws in front of part.
 - d) Pull out on rear corner and top edge of splash guard and remove **FRONT** tape liner using pull tab.
 - e) While holding splash guard away from vehicle so tape does not contact the surface, push splash guard tight to vehicle along tape area starting at the front of the part and working rearward.

NOTE: USE A ROLLER OR BURNISH BY HAND TO APPLY A MINIMUM OF 15 LBS OF PRESSURE ALONG LENGTH OF TAPE (STARTING AT FRONT OF PART AND WORKING REARWARD).

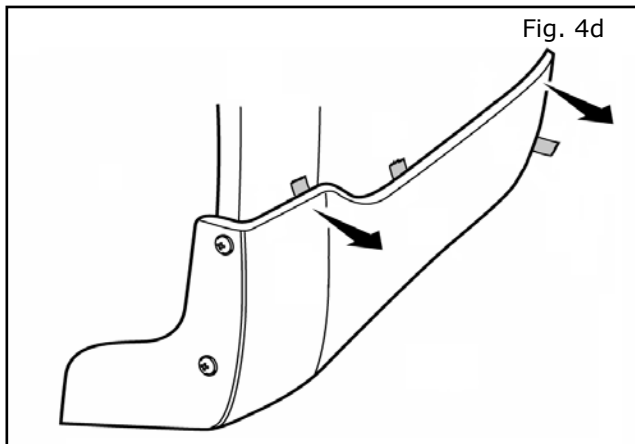

- e) Repeat steps d) and e) for middle and rear tape (middle and rear tape liners can be removed at the same time).