



GENUINE PARTS

INSTALLATION INSTRUCTIONS


1. DESCRIPTION: Rear Splash Guard Kit

2. APPLICATION: Armada


3. PART NUMBER: 999J2 2U00004

4. KIT CONTENTS:

Item	QTY	Description	Part Number
A	1	Splash Guard – Rear Right	78812 ZQ00A
B	1	Splash Guard – Rear Left	78813 ZQ00A
C	2	Screw	14-51 00891
D	1	Installation Instructions Replacement Template	999V2 AW000

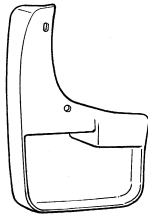

A

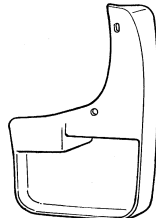

B



C

STOP Important: Read Before Installation!

Dealer Installation Recommended.

WARNING

To avoid serious personal injury or property damage, please read the Installation Instructions before attempting to install this accessory. The Installation Instructions provide the necessary procedures for a safe installation.

CUSTOMER INTERNET DOWNLOAD INSTRUCTIONS: Customers can obtain Installation Instructions for Infiniti or Nissan vehicles at www.Infiniti-TechInfo.com or www.Nissan-TechInfo.com respectively. From the home page, click on "Truck Publications" and select Accessory Installations. Select your model and model year, then locate the Instructions for your accessory.

DEALER ASSIST DOWNLOAD INSTRUCTIONS: Dealership technicians can locate the Installation Instructions for this accessory in **ASSETLINK TOOLBOX**. Always download and use latest version of the Installation Instructions.

Installation Instructions Replacement Template 999J2 2U000 Rev. 08/11/09

D

5. TOOLS REQUIRED:

- clean rag
- mild soap/water mixture
- #2 phillips screwdriver


6. PRE-INSTALLATION NOTES:

- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit


7. INSTALLATION PROCEDURE:

Fig 1

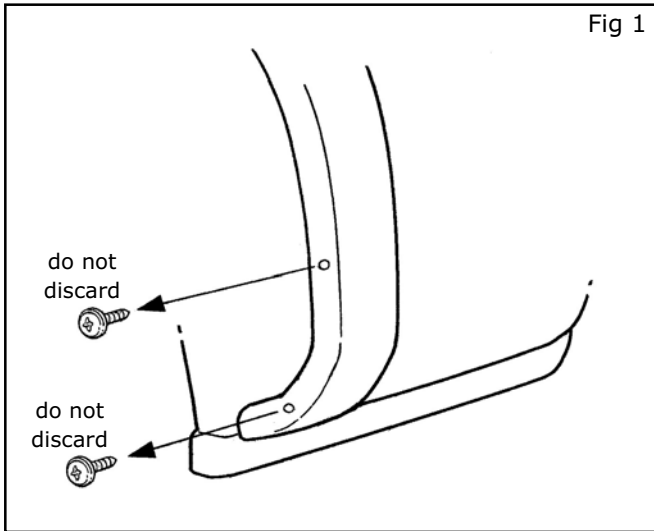


- 1) Remove existing screws.
 - a) Remove existing screws (2 locations).
DO NOT DISCARD.
 - b) Clean installation surface.

Fig 2a

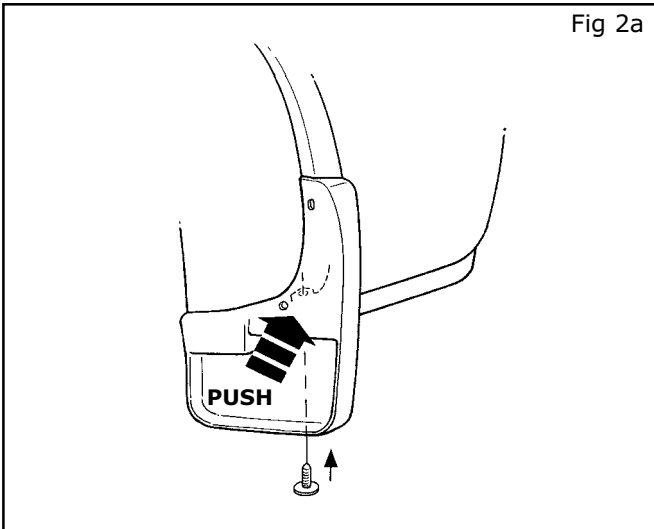

- 2) Install rear splash guard.
 - a) Align splash guard to vehicle.
 - b) Push reward on front of splash guard.
 - c) Install supplied screw through hole in tab.

Fig 2b

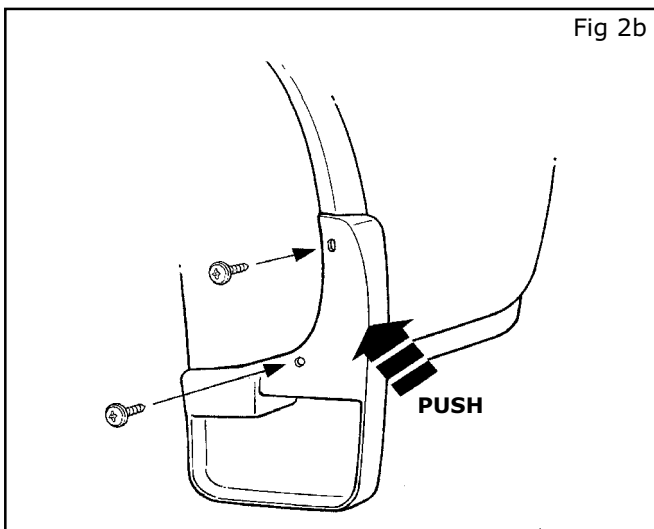

- d) Push inward and upward.
- e) Install existing screws.

NOTE:

HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE TIGHTENING THE SCREWS TO ENSURE NO GAP OCCURS BETWEEN FENDER AND SPLASH GUARD.