




GENUINE PARTS

INSTALLATION INSTRUCTIONS

1. DESCRIPTION:	Tail Gate Appliqué Kit
2. APPLICATION:	Titan
3. PART NUMBER:	999M1 WQ100

4. KIT CONTENTS:

Item	QTY	Description	Part Number	Service Part Number
A	1	Tail Gate Appliqué Surround	999M1 WQ101	999M1 WQ101
B	1	Tail Gate Handle Appliqué	999M1 WQ102	999M1 WQ102
C	1	Alcohol Wipe		

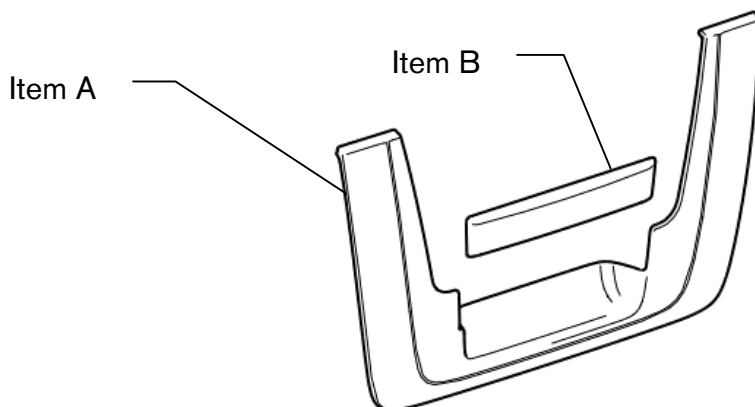

5. TOOLS REQUIRED:

No special tools required

6. PRE-INSTALLATION CAUTIONS / NOTES:

The vehicle must be at ambient condition (minimum 70°F/20°C) for a period of four (4) hours.


The Alcohol Wipe MUST BE used per the installation instructions.

Tail Gate Appliqué Kit

7. INSTALLATION PROCEDURE:


1. Prepare the mounting surfaces

- a. Clean the vehicle Tail Gate Latch Cover and Latch Handle thoroughly with soap and water to remove any dirt or debris and allow to dry.
- b. Fig. 1. Use one Alcohol Wipe to clean the mounting surfaces of the Tail Gate Latch Cover and Latch Handle.

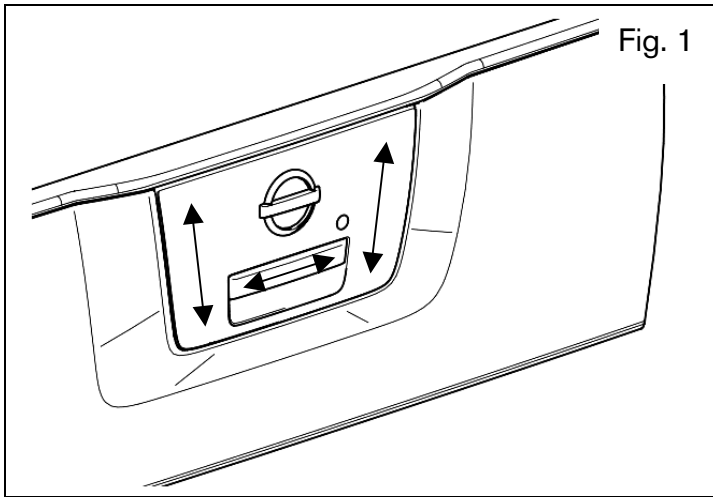


2. Attaching the Tail Gate Appliqué Surround

- a. Pull back the tape liner diagonally to expose approximately 1" of tape. Fold the liner over the outside edge of the part. Tape the end to the decorative surface.
- b. Fig. 2. Align the Appliqué Surround vertically by placing the top edge of the Appliqué Surround on top of the latch cover and rotate to the latch cover surface.

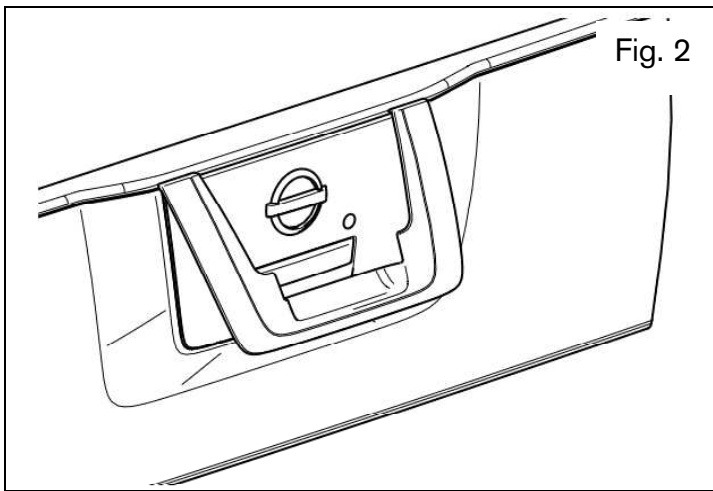

Tail Gate Appliqué Kit


Fig. 3

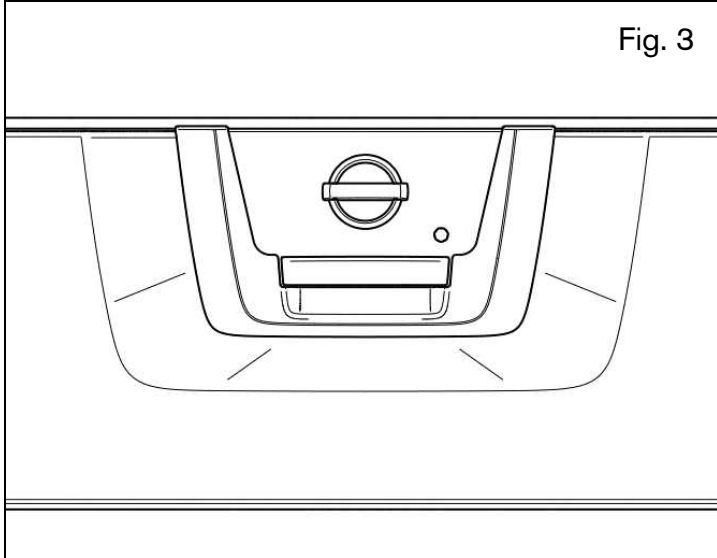

- c. Fig. 3. Align the Appliqué Surround horizontally by centering it with the latch handle.
- d. Remove the tape liner from the bottom face by pulling the tab down.
- e. Lightly press the bottom edge to the Latch cover surface.
- f. Check the alignment of the remaining three (3) edges.
- g. Remove the tape from the inboard faces of the Appliqué Surround by pulling the tabs down.
- h. Lightly press the bottom edge to the Latch Cover surface.
- i. Remove the tape from the outboard faces of the Appliqué Surround by pulling the tabs down.
- j. Check the alignment of the Appliqué Surround.
- k. Uniformly press the Appliqué Surround to the Latch Cover surface and hold for thirty (30) seconds.

3. Attaching the Tail Gate Handle Appliqué


Fig. 4

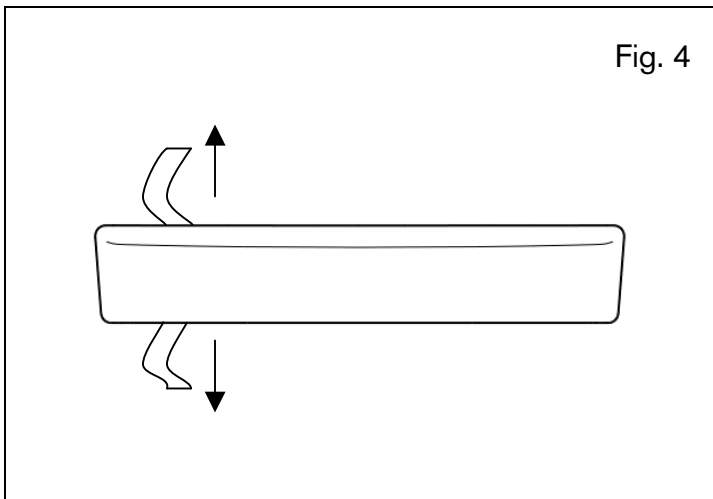

- a. Fig. 4. Pull back the tape liner diagonally to expose approximately 1" of tape. Fold the liner over the outside edge of the part. Tape the ends to the decorative surface.


Tail Gate Appliqué Kit

Fig. 5

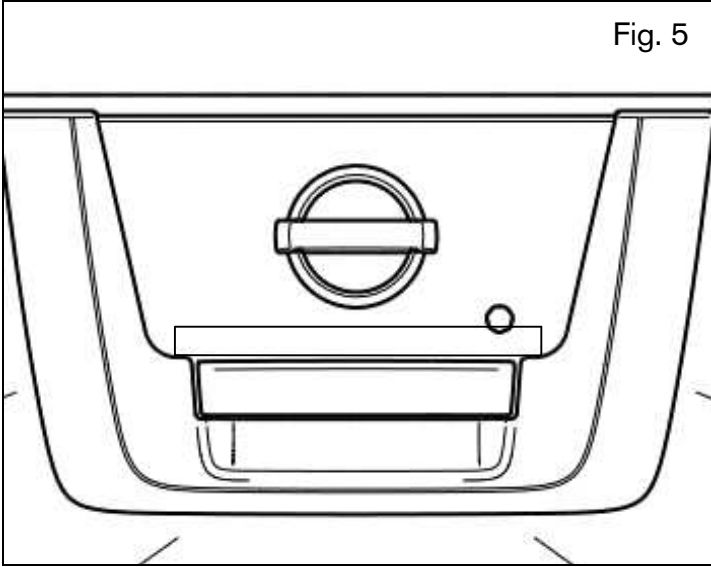


- b. Fig. 5. Place masking tape across handle opening aligning to the top edge of the Appliqué Surround.

Fig. 6

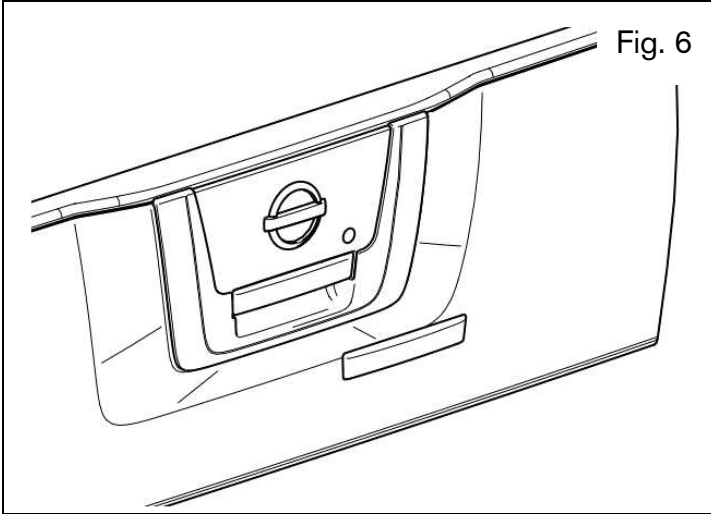

- c. Fig. 6. Align the Handle Appliqué to the Latch Handle and the horizontal edge of the masking tape. Center the Handle Appliqué in the opening of the Appliqué Surround.
- d. Holding the bottom edge of the Handle Appliqué remove the tape liner from the top face by pulling the tab up.
- e. Lightly press the upper edge to the Latch Handle surface.
- f. Check the alignment of the remaining three (3) edges.

Tail Gate Appliqué Kit

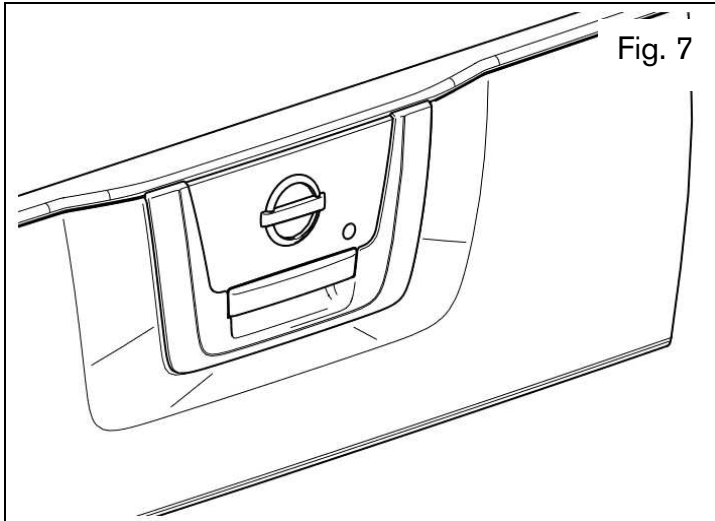

- g. Fig. 7. Remove the tape liner from the bottom face of the Handle Appliqué by pulling the tab down.
 - h. Lightly press the bottom edge to the Latch Handle surface.
 - i. Check the alignment of the Handle Appliqué.
 - j. Uniformly press the Handle Appliqué to the Latch Handle surface and hold for thirty (30) seconds.
4. Do not wash vehicle, tug or pull Appliqué Surround or Handle Appliqué for 24 hours.