



GENUINE PARTS

INSTALLATION INSTRUCTIONS


1. **DESCRIPTION:** Front Splash Guard Kit

2. **APPLICATION:** Titan


3. **PART NUMBER:** 999J2 WUxxx03

4. **KIT CONTENTS:**

Item	QTY	Description	Part Number
A	1	Splash Guard - Front Right	63850 ZR09A
B	1	Splash Guard - Front Left	63851 ZR09A
C	6	Screw	14-51 00891
D	1	Installation Instructions Replacement Template	999V2 AW000

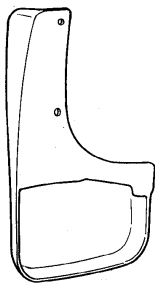

A

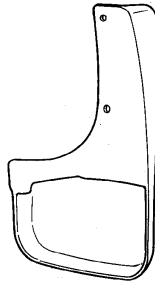

B



C



D

5. **TOOLS REQUIRED:**


- clean rag
- mild soap/water mixture
- #2 phillips screwdriver

6. **PRE-INSTALLATION NOTES:**


- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

INSTALLATION INSTRUCTIONS - Front Splash Guard Kit


7. INSTALLATION PROCEDURE:

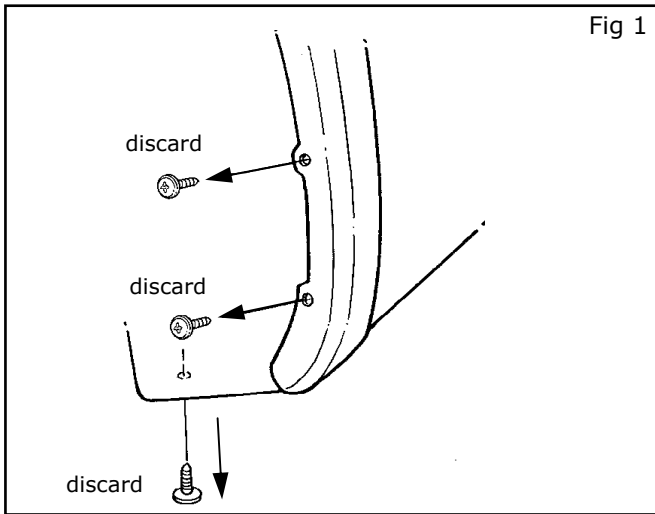

- 1) Remove existing screws.
 - a) Remove and discard existing screws (3 locations).
 - b) Clean installation surface.

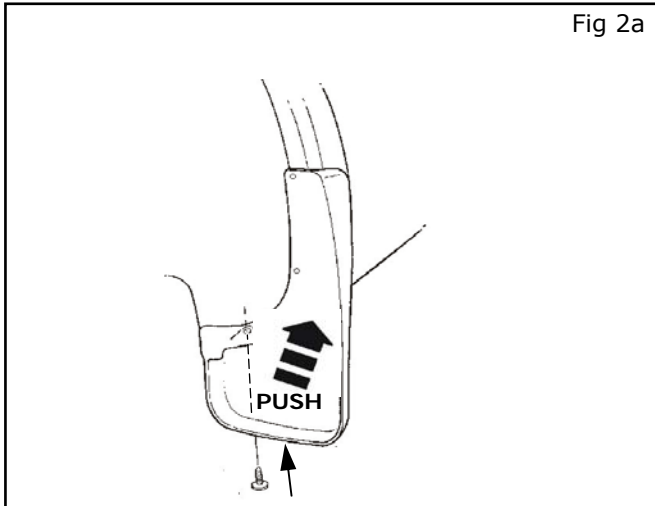

- 2) Install front splash guard.
 - a) Align splash guard to vehicle.
 - b) Push reward on front of splash guard.
 - c) Install supplied screw through hole in tab.

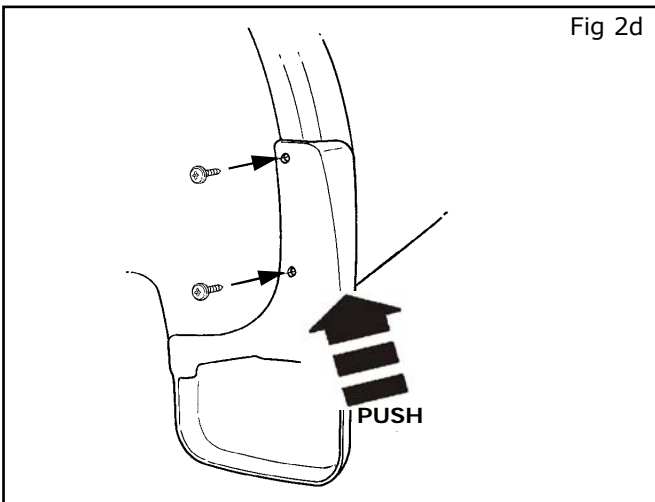

- d) Push inward and upward.
- e) Install new supplied screws.

NOTE:

HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE TIGHTENING THE SCREWS TO ENSURE NO GAP OCCURS BETWEEN FENDER AND SPLASH GUARD.