



GENUINE PARTS

INSTALLATION INSTRUCTIONS


1. **DESCRIPTION:** Rear Splash Guard Kit

2. **APPLICATION:** Titan


3. **PART NUMBER:** 999J2 WUxxx04

4. **KIT CONTENTS:**

Item	QTY	Description	Part Number
A	1	Splash Guard - Rear Right	93820 ZR09A
B	1	Splash Guard - Rear Left	93821 ZR09A
C	2	Screw	14-51 00841
D	2	Plastic Grommet	12-81 00441
E	1	Installation Instructions Replacement Template	999V2 AW000

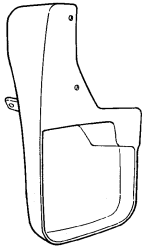

A

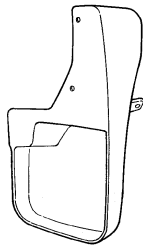

B



C



D



E

5. **TOOLS REQUIRED:**


- clean rag
- mild soap/water mixture
- #2 phillips screwdriver
- standard screwdriver

6. **PRE-INSTALLATION NOTES:**


- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit


7. INSTALLATION PROCEDURE:

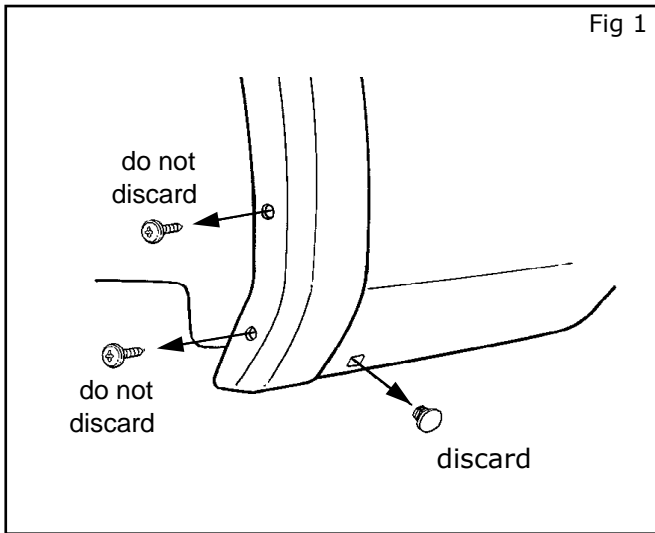

- 1) Remove existing hardware.
 - a) Remove existing screws (2 locations).
DO NOT DISCARD.
 - b) Remove and discard plug.
 - c) Clean installation surface.

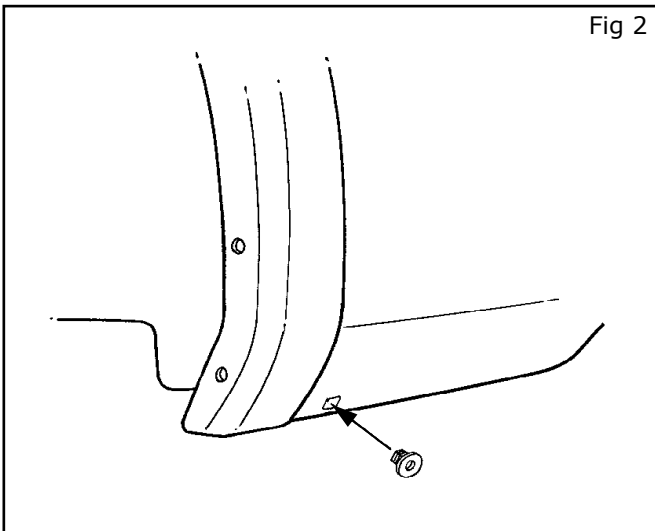


- 2) Install Grommet.
 - a) Install supplied grommet in fender hole.

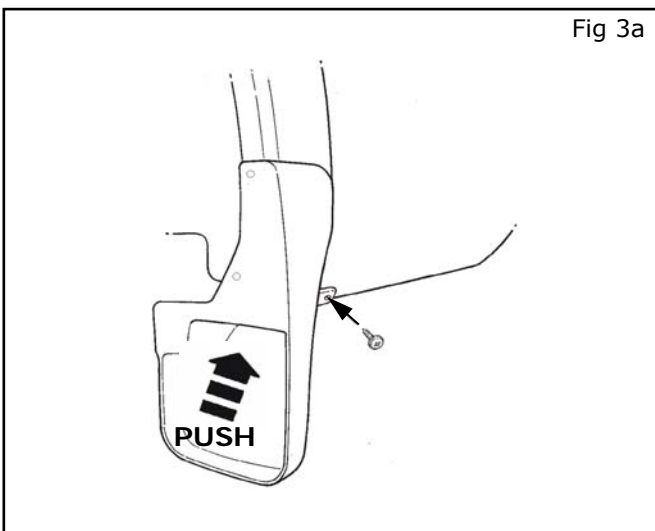

- 3) Install rear splash guard.
 - a) Align splash guard to vehicle.
 - b) Push rearward on front of splash guard.
 - c) Install supplied screw through hole in tab.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit

Fig 3d

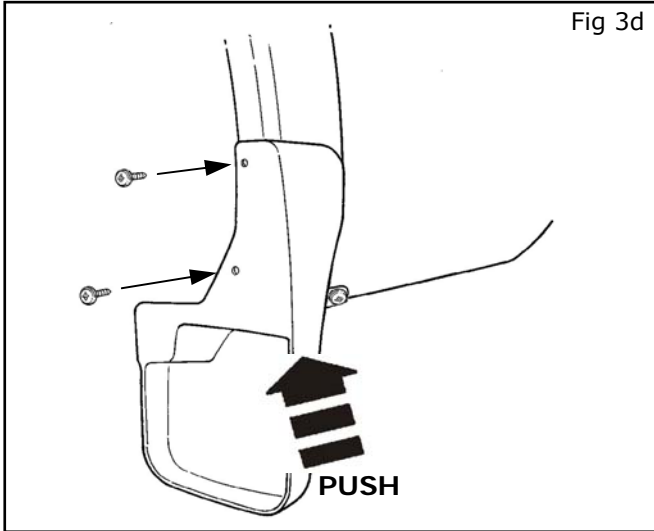

- d) Push inward and upward.
- e) Install existing screws.

NOTE:

HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE TIGHTENING THE SCREWS TO ENSURE NO GAP OCCURS BETWEEN FENDER AND SPLASH GUARD.