


GENUINE PARTS



INSTALLATION INSTRUCTIONS

1. **DESCRIPTION:** Cargo Tray
2. **APPLICATION:** 2008, Murano
3. **PART NUMBER:** 999C3-CU000BK, 999C3-CU002BE
4. **KIT CONTENTS:**

Item	QTY	Description
A	1	Cargo Tray

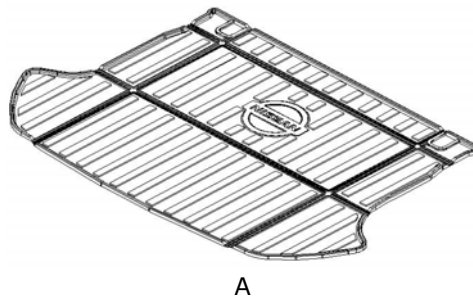

5. **TOOLS REQUIRED:**
No Tools Required

6. **PRE-INSTALLATION CAUTIONS/NOTES:**

- To maintain the luster of your organizer, clean with a cloth as required using standard automotive vinyl, leather and upholstery cleaners or soap and water.

WARNING

- Your tray is designed to transport normal cargo contents. Flammable or dangerous materials should not be transported in your vehicle at any time. If any corrosive chemicals are spilled on your tray it should be cleaned as described above

CAUTION

- Tray does not provide load restraint.

INSTALLATION INSTRUCTIONS - Cargo Tray

7. INSTALLATION PROCEDURE:

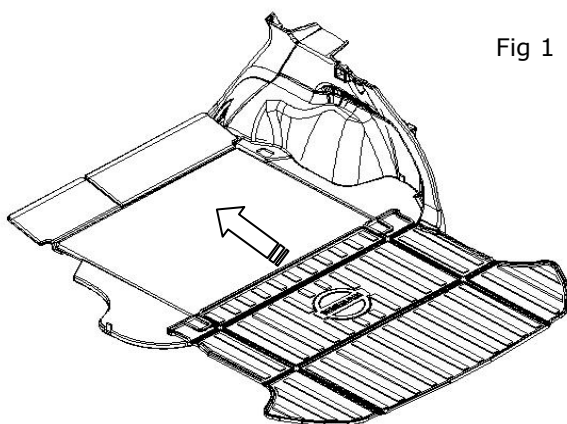


Fig 1

1. Place tray in rear cargo area See Fig 1

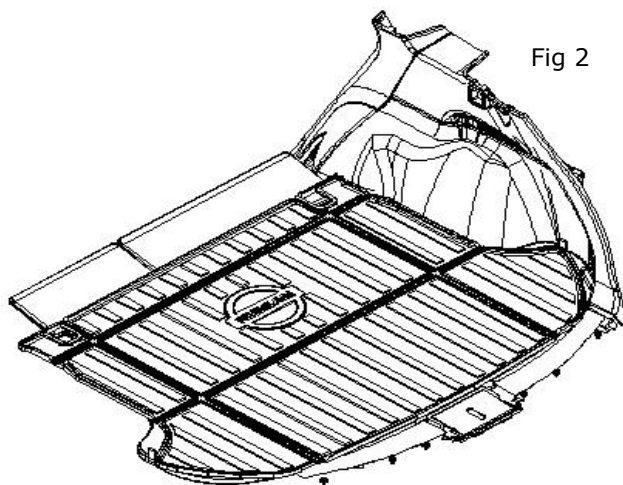


Fig 2

2. Ensure tray sits flat on floor See Fig 2