

GENUINE PARTS

INSTALLATION INSTRUCTIONS

1. DESCRIPTION: Cargo Area Net

2. APPLICATION: Pathfinder (2005)

3. PART NUMBER: 999C1 XR001

4. KIT CONTENTS:

<u>Item No.</u> Qty <u>Description</u>1) 1 Cargo Area Net

2) 1 Installation Instruction Replacement Template

5. TOOLS REQUIRED:

None

6. INSTALLATION PRECAUTIONS / NOTES:

- This Cargo Area Net can be installed in 3 main positions. Refer to Figures 1, 2 & 3 to determine the correct attachment method.
- Keep this installation instruction sheet with Vehicle Owner's Manual for future reference.



- MAXIMUM SECURED LOAD: 30 lbs
- · DO NOT STACK ITEMS ABOVE SEAT BACK
- NET KEEPS ITEMS FROM MOVING DURING DRIVING -NOT INTENDED TO SECURE ITEMS IN AN ACCIDENT
- USE CARE WITH BREAKABLE ITEMS

INSTALLATION INSTRUCTIONS - Cargo Area Net

7. INSTALLATION PROCEDURE

A. Floor Position

- 1) Locate anchor positions as shown in Fig. 1a.
- 2) Lay net on the floor of the vehicle with the hooks next to the anchor locations.
- 3) Starting toward the front of the vehicle, and working toward the rear, attach the hooks on the net to the D-rings located on the floor.
- 4) Confirm completed assembly appears as shown in Fig. 1b.

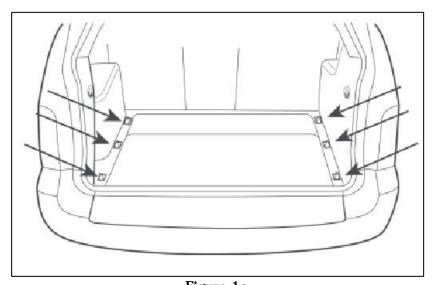


Figure 1a

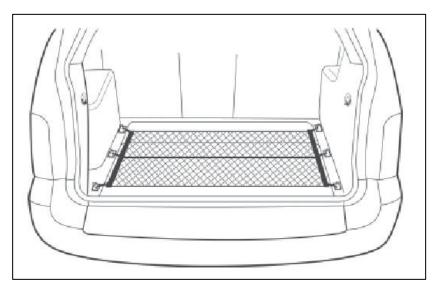


Figure 1b

INSTALLATION INSTRUCTIONS - Cargo Area Net

B. Rear Vertical Position

- 1) Locate anchor positions as shown in Fig. 2a.
- 2) Fold net in half at the center bungee so at each end of the net there is one hook at the bottom and two hooks at the top.
- 3) Starting at the top, attach both hooks at each end to the top D-ring, then attach the single hook at each end of the center bungee to the bottom D-ring.
- 4) Confirm completed assembly appears as shown in Fig. 2b.

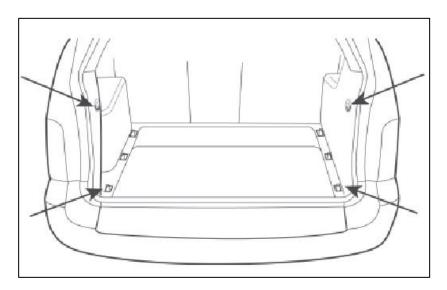


Figure 2a

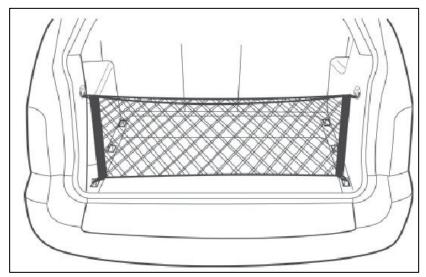


Figure 2b

INSTALLATION INSTRUCTIONS - Cargo Area Net

C. Rear Floor Position

- 1) Locate anchor positions as shown in Fig. 3a.
- 2) Fold net in half at the center bungee so at each end of the net there is one hook at the bottom and two hooks at the top.
- 3) Starting at the rear, attach both hooks at each end to the rearward D-ring, then attach the single hook at each end of the center bungee to the middle D-ring.
- 4) Confirm completed assembly appears as shown in Fig. 3b.

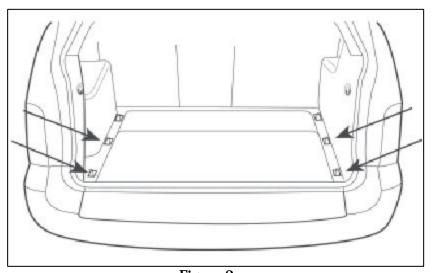


Figure 3a

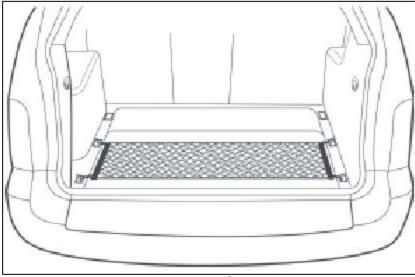


Figure 3b