




GENUINE PARTS

INSTALLATION INSTRUCTIONS

- 1. DESCRIPTION:** UNDER RAIL BEDLINER
2. APPLICATION: FRONTIER '05 AND AFTER
3. PART NUMBER: 999T1-BR103KC and 999T1BX000
4. KIT CONTENTS:

ITEM	QTY	DESCRIPTION	SERVICE PART NUMBER
A	1	BEDLINER	
B	1	TAILGATE COVER	
C	8	SHOULDER SCREW	
D	3	GROMMET	
E	1	URETHANE TAPE	
F	1	GAS WARNING LABEL	

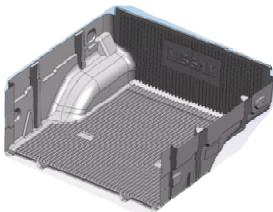

A




B




C



D

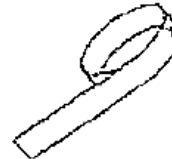

E



F

- 5. TOOLS REQUIRED:**
- CLEAN CLOTH
 - 100% ALCOHOL SOLUTION
 - PHILLIPS SCREWDRIVER WITH VARIABLE TORQUE SETTING
 - TORQUE WRENCH WITH 12 MM SOCKET

- 6. PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, AND NOTES:**
- DEALER INSTALLATION RECOMMENDED. INSTRUCTIONS MAY REFER TO SERVICE MANUAL.

⚠ WARNING

- Static electricity can cause an explosion of flammable liquid vapor or gas in any vehicle or trailer.
- Do not use bedliner or tailgate cover as a surface for filling a container with flammable liquid.

⚠ CAUTION

- Installation of the bedliner requires two people. Do not attempt to install the bedliner by yourself.
- For proper installation, the sheetmetal truck box and bedliner must be at room temperature (65-80 F) at the time of installation.

INSTALLATION CONSTRUCTIONS (continued)

7. INSTALLATION PROCEDURE


1) Apply Parking Brake.



Important: Read Before Installation!


- Please read the entire installation procedure prior to installing your new bedliner in order to become familiar with the process.

Fig. 1

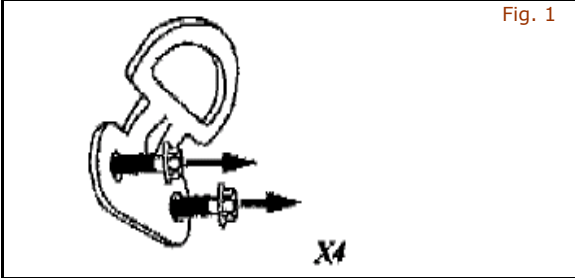


2) Remove the four (4) tie-down hooks located at the front and rear sidewalls. Save all hardware to be re-installed. (see figure 1).

Fig. 2

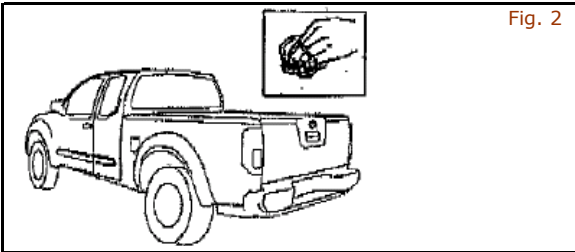


3) Before installing the bedliner and tailgate cover, thoroughly clean the bed and tailgate sheet metal with mild soap and water. Clean the rear edge of the sheet metal bed with an alcohol solution. (See Figure 2).

Fig. 3

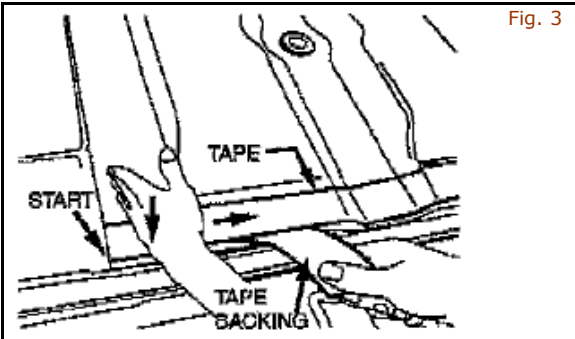


4) To install the protective tape, remove one edge of the tape backing and secure the tape at the starting location. While pressing downward with the side of your palm, use a continuously smooth motion to adhere the tape from one side of the truck bed to the other. Remove the tape backing with your other hand as you proceed. (See Figure 3). To avoid trapping air bubbles, apply moderate tension to the tape as you follow the contour of the floor. **Be sure to position the tape within the ramped area of the sheet metal between the termination line of the floor and ribs and the peak of the ramp at the end of the truck bed.**

Fig. 4

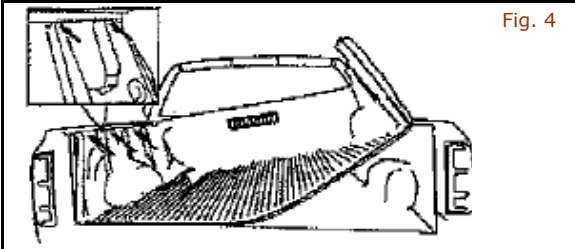

5) Place the bedliner in the bed by lifting the passenger's side so that the driver's side is installed under the side rail. (See Figure 4). Make sure the front rail of the bedliner is over the front rail of the bed. (See Figure 5).

Fig. 5

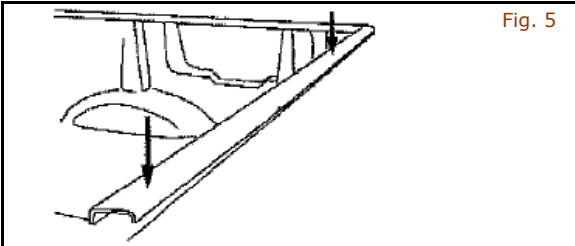

INSTALLATION INSTRUCTIONS (continued)

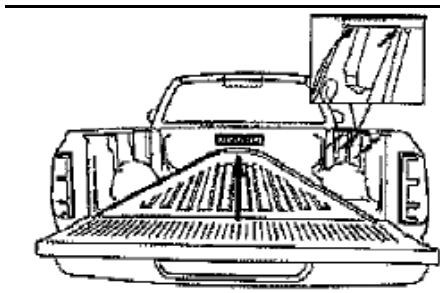


Fig. 6

6) While pushing up on the center of the bedliner floor, hook the passenger's side of the bedliner under the other side rail. Be sure to install both the sidewalls of the bedliner entirely under the side rails of the truck. (See Figure 6). Two people are necessary in order to perform this operation properly.

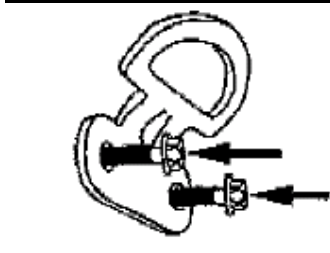


Fig. 7

7) Install the tie-down hooks. (See Figure 7). The tightness range for the tie-down bolts is 11 to 16 N-m (8 to 12 ft-lb).

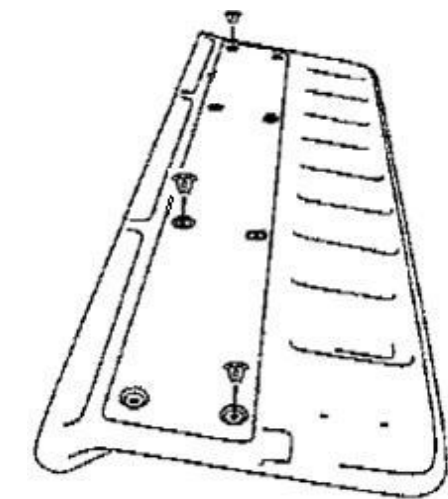


Fig. 8

8) Remove the eight (8) tailgate screws holding the access cover to the center of the tailgate.

9) Remove the access cover. Remove and replace three (3) grommets as shown in Figure 8. It is necessary to pinch the grommets from underneath and push through the sheet metal. Grommets may break apart and fall into the tailgate area. Retrieve any grommet pieces that fall into the tailgate. Install the replacement grommets. Replace the access cover.

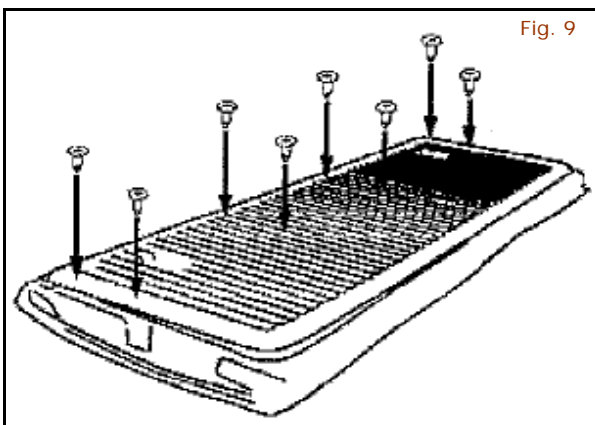


Fig. 9

10) Place the tailgate cover on the tailgate and fasten the cover using the eight (8) shoulder screws as shown in Figure 9. The tightness range for the tailgate screws is 1.7 to 2.0 N-m (15-18 in-lb).