



GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION: Illuminated Kick Plate


APPLICATION: Rogue (2011)

PART NUMBER: 999G6 GX010

KIT CONTENTS:

Item	QTY	Description	Service Part Number
A	1	Kick Plate, FR LH	999G6 GC001
B	1	Kick Plate, FR RH	999G6 GX000
C	1	Kick Plate, RR LH	999G6 GX003
D	1	Kick Plate, RR RH	999G6 GX002
E	1	Wire Harness	Not a service part
F	3	Posi-Tap	Not a service part
G	15	Tie Wrap	Not a service part
H	6	Urethane Foam Tape	Not a service part

*** Components E thru H in are located in Harness Bag

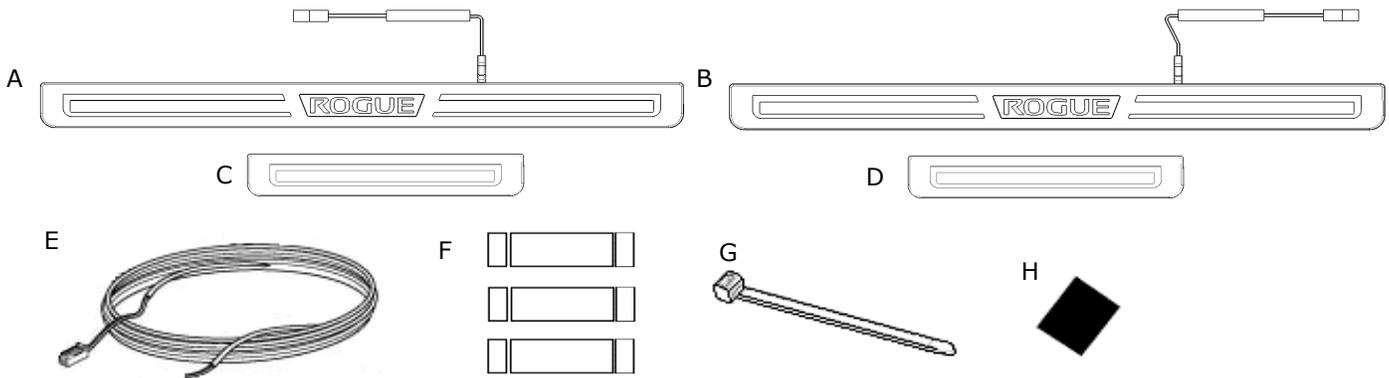

TOOLS REQUIRED:

- Nylon Removal Tool
- Flash Light
- 100% alcohol
- Phillips Head Screw Driver
- Soft cloth
- Soap water



PRE-INSTALLATION CAUTION/NOTES:

- Dealer installation recommended. Instructions may refer to Service Manual.
- This part is to be installed at a surface temperature no warmer than 65-100F.

CAUTION

- This accessory must only be installed as specified in these instructions.
- Ensure at all times that parts are securely fitted and will not compromise the safe function of vehicle systems.

INSTALLATION OVERVIEW:

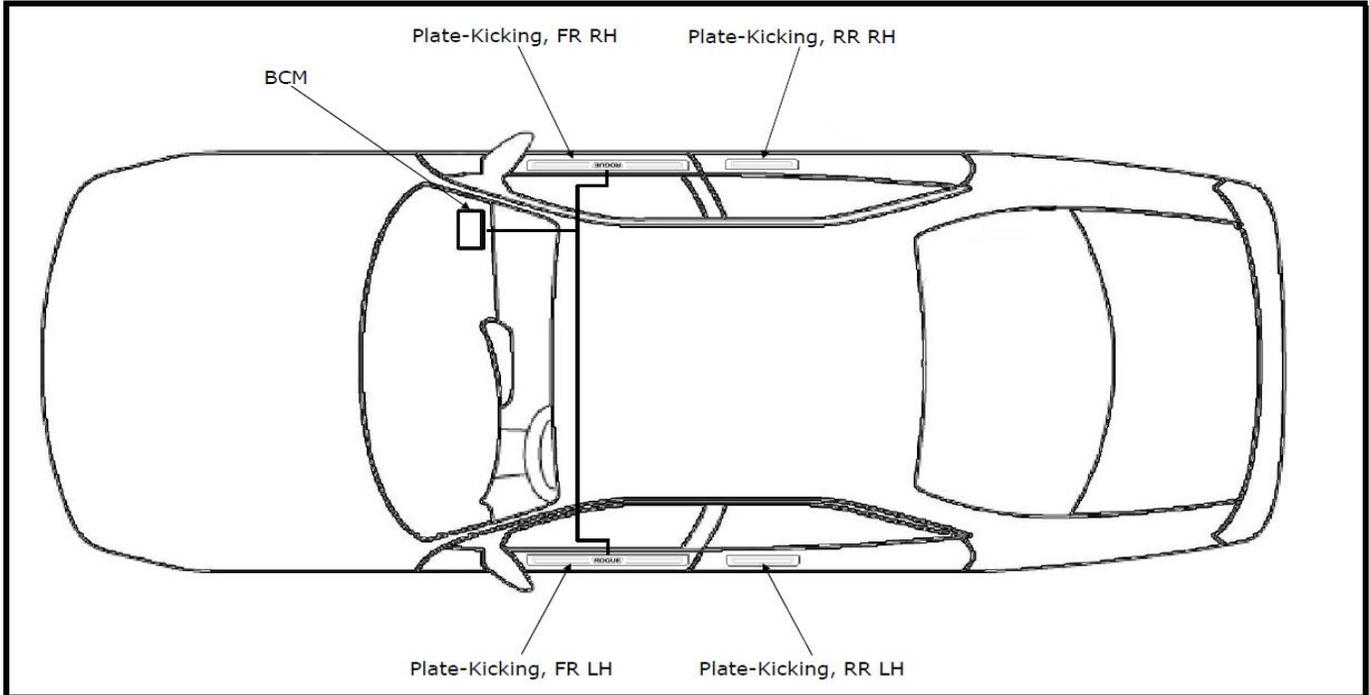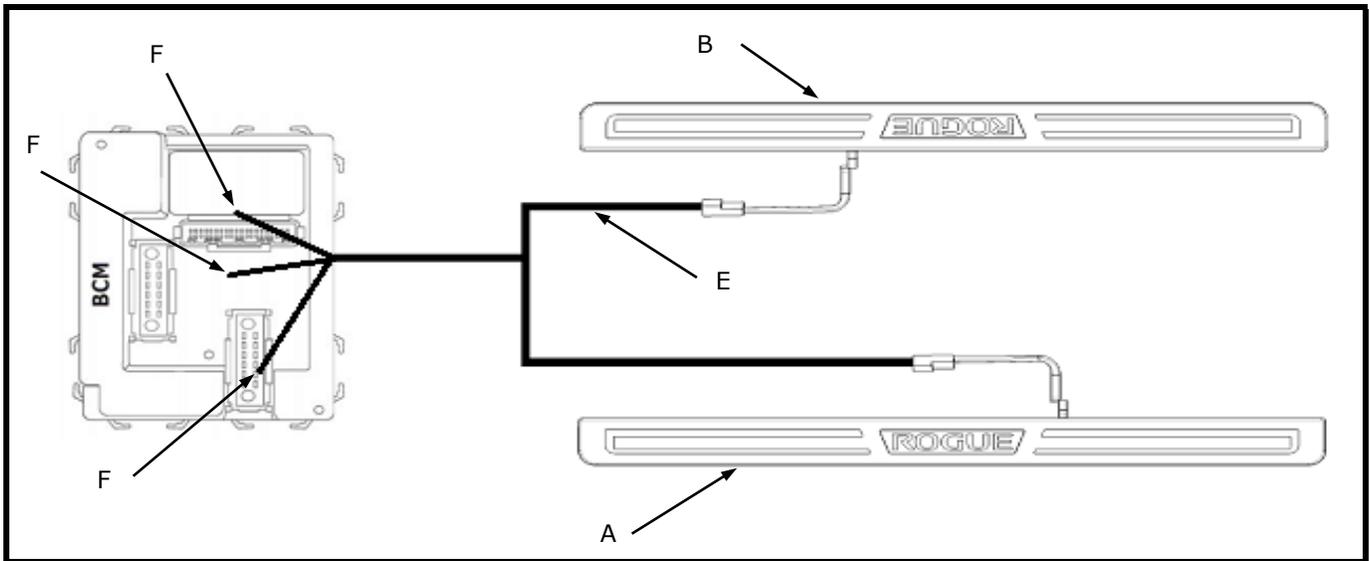

CRITICAL STEPS:

- Locate LH mark on back side of part for LH side installation. Locate RH mark on back side of part for RH side installation. Mis-installation can cause improper fit.
- Follow posi-tap instructions.

VEHICLE PREPARATION:

CAUTION

- Dealer Installation Recommended. Instructions refer to steps described in Service Manual.
- Please read these instructions carefully before installing this product for correct installation.
- Please DO NOT use or install the part in ways other than what is described in this instruction manual.
- If problem occurs during installation, please contact Nissan dealer where you purchased the product.

- 1) Apply Park Brake.
- 2) Make sure the shift lever is engaged in "P" position.
- 3) Record customer Radio Presets.

Preset	1	2	3	4	5	6
A						
B						
C						


- 4) Use seat and floor protection.
- 5) Open hood of the vehicle.
- 6) Disconnect the negative battery terminal to prevent short circuits during installation.
- 7) This part is to be installed at a vehicle body surface temperature of 65-100°F.

CAUTION


- Take care not to scratch or damage any component during the removal or re-installation process.
- Trim pieces found to have witness marks or broken clips are not to be re-installed.

Removal Sequence

1. Front Kick Plate Outer LH
2. Front Kick Plate Outer RH
3. Front Kick Plate Inner LH
4. Front Kick Plate Inner RH
5. Dashboard Side Lower Panel LH
6. Dashboard Side Lower Panel RH
7. Center Console Lower Panel LH
8. Center Console Lower Panel RH
9. Rear Kick Plate Outer LH
10. Rear Kick Plate Outer RH
11. Instrument Panel Side Mask LH
12. Glove Box

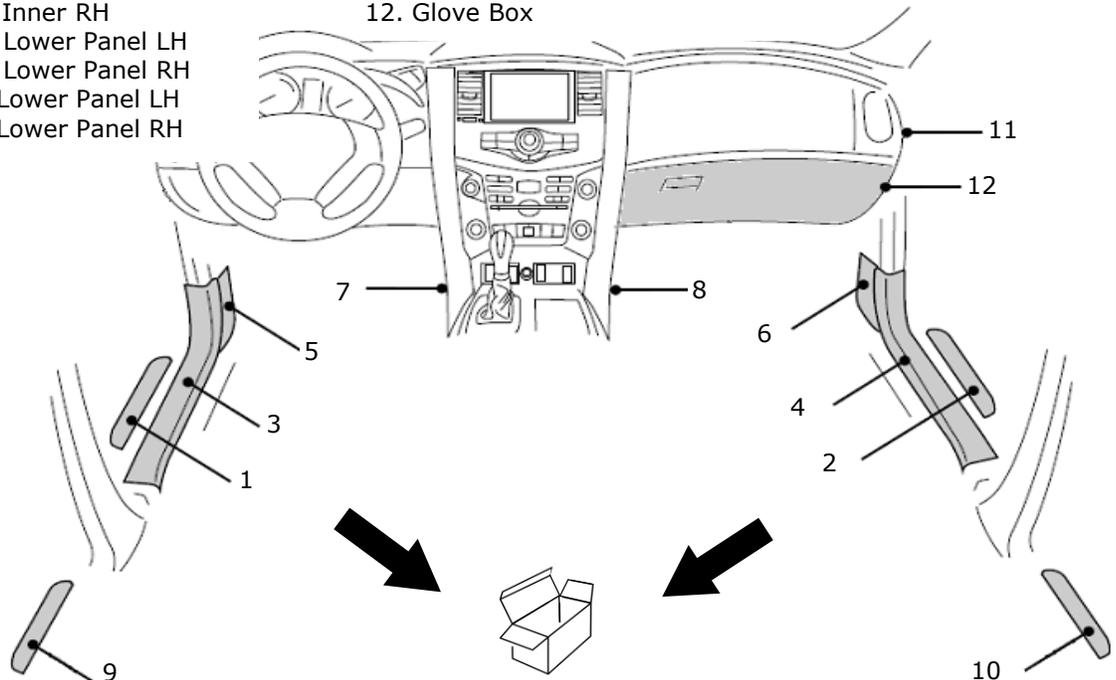


INTERIOR PROCEDURE:

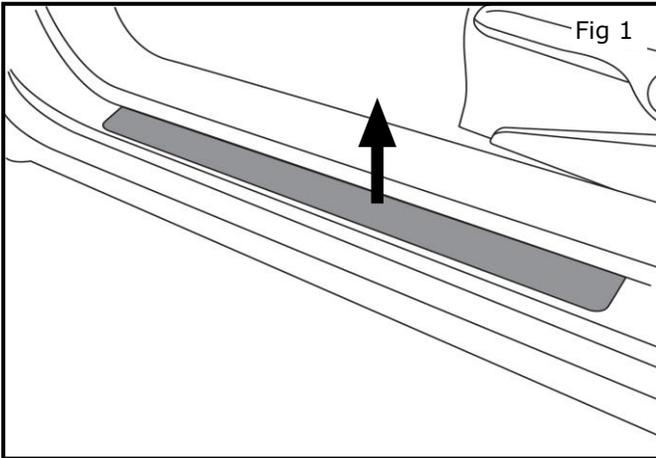

- 1) Front Kicking Plate Outer (LH) Removal
 - a) Start at Rear Edge and pull up by hand. (May need to use tool to pry up end)
Fig 1
 - b) There are (4) clips that secure the part.

NOTE:


Repeat on opposite side of vehicle.

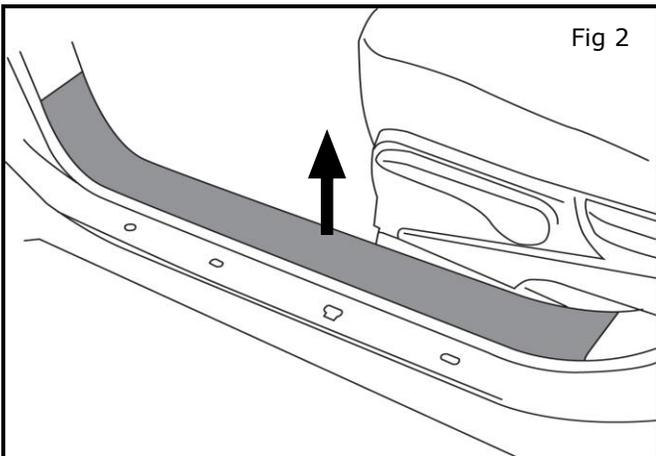

- 2) Front Kicking Plate Inner (LH) Removal
 - a) Start at Rear Edge, pull up and toward seat using nylon tool.
 - b) Carefully lift part up moving from rear to front.
Fig 2
 - c) There are (7) clips that secure the part.

NOTE:

Repeat on opposite side of vehicle.

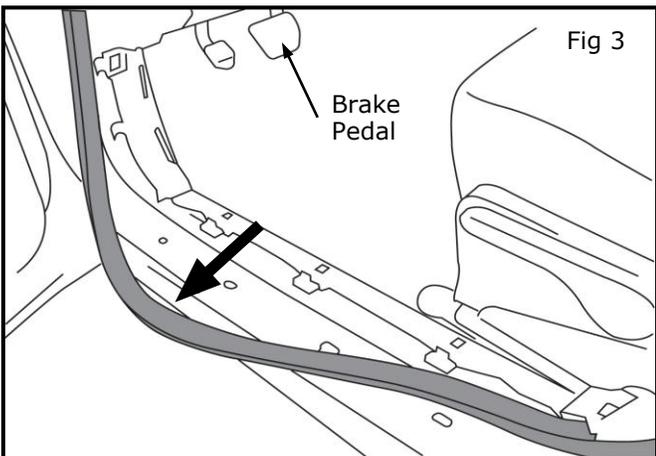


- 3) Weather Seal (LH) Removal
 - a) Start at in center of door opening and pull up.
 - b) Pull seal away from the body between the b-pillar lower and the side mask.
Fig 3

NOTE:


Repeat on opposite side of vehicle.

INTERIOR PROCEDURE: (continue)

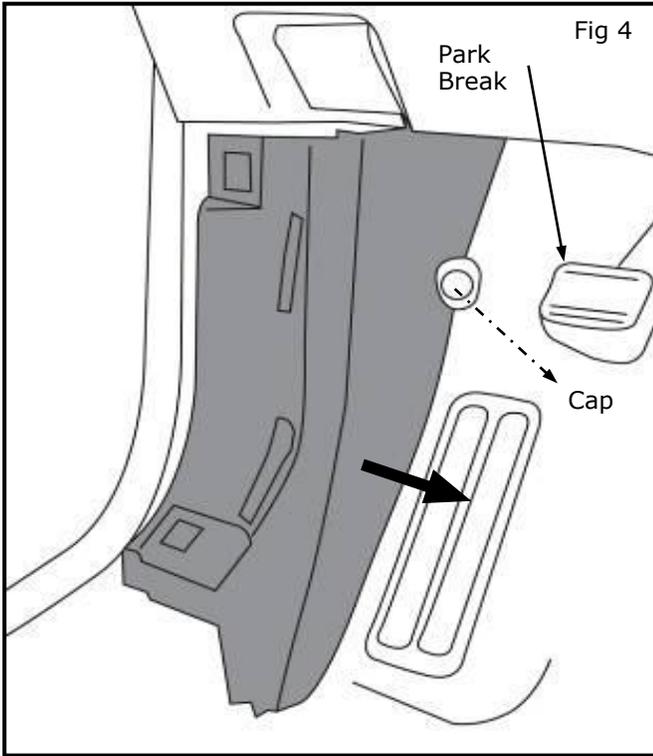


- 4) Remove Dashboard Side Lower Panel (LH)
 - a) Remove Black Cap by hand.
 - b) Starting at the floor, pull part toward the foot pedals. There is (1) clip that secures the part.
 - c) Fig 4

NOTE:
Repeat on opposite side of vehicle.

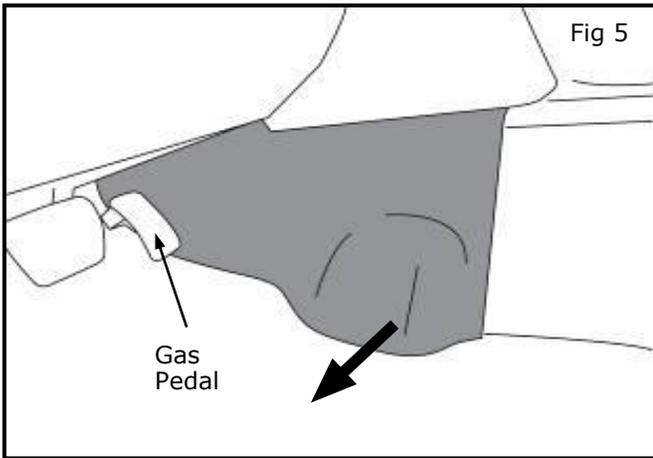

- 5) Remove the Center Console Lower Panel (LH)
 - a) Pull the Center Console Lower Panel towards the foot pedals. There are (4) clips that secure the part.
 - Fig 5


NOTE:
Repeat on opposite side of vehicle.

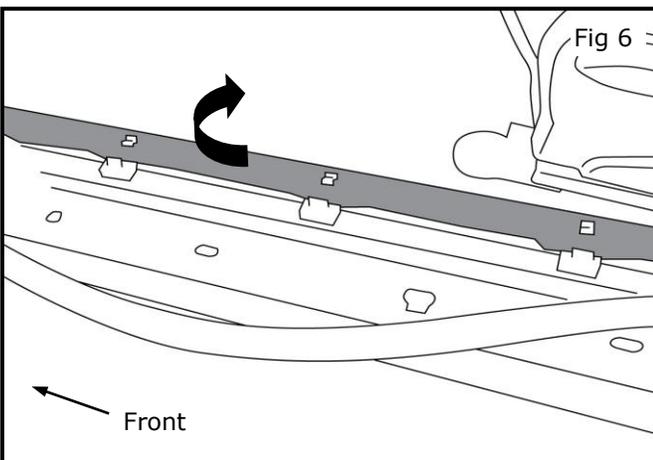

- 6) Fold Back Carper (LH)
 - a) Pull carper off of (3) white clips and fold back into foot well. Fig 6


NOTE:
Repeat on opposite side of vehicle.

INTERIOR PROCEDURE: (continue)

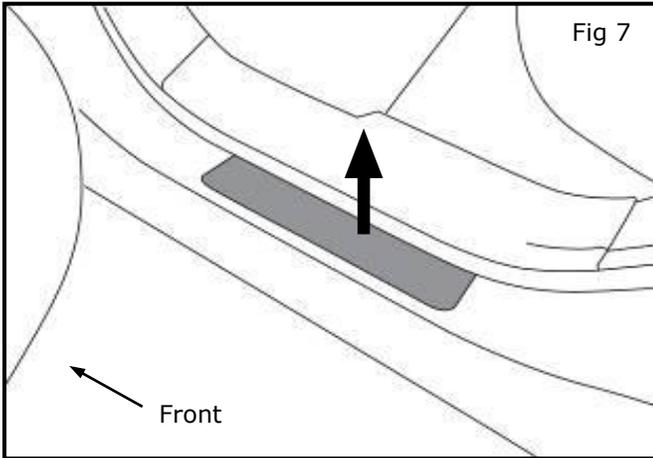


- 7) Rear Kicking Plate Outer (LH) Removal
 - a) Start at Rear Edge and pull up by hand. (May need to use tool to pry up end) Fig 7
 - b) There are (2) clips that secure the part.

NOTE:
Repeat on opposite side of vehicle.

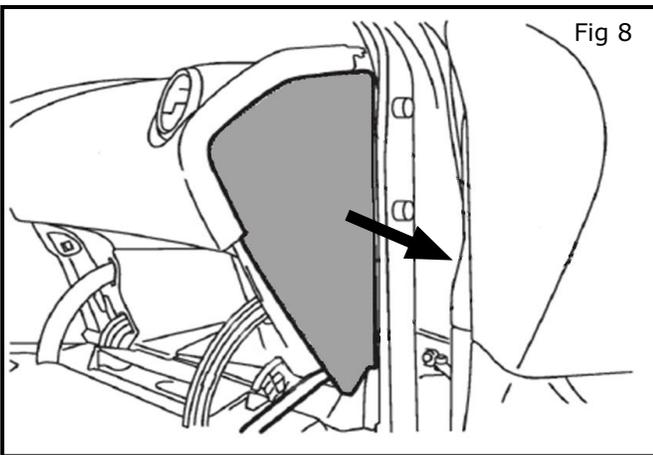


- 8) Remove Instrument Panel Side Mask RH
 - a) Pull the Instrument Panel Side Mask toward the door opening to release Fig 8

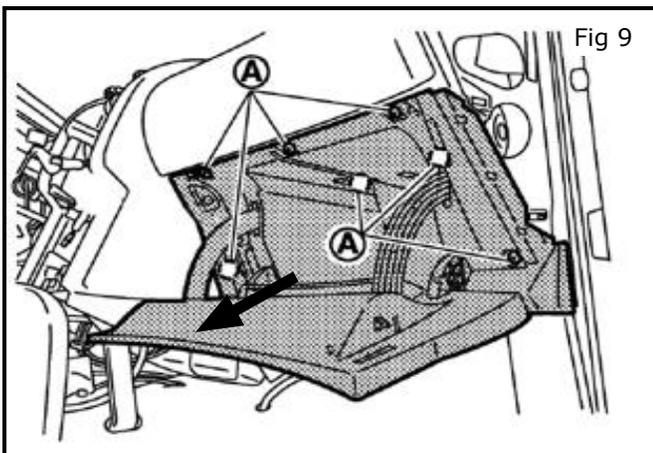

- 9) Remove Glove Box Assembly
 - a) Remove the (7) phillips screws (A). All screws inside glove box. (3) across top, (1) LH and RH bottom and (2) deep inside.
 - b) Starting at top right side pull toward the seat. There are (7) clips that secure the part. Fig 9
 - c) Disengage lamp harness connector, and then remove the glove box assembly.

INTERIOR PROCEDURE: (continue)

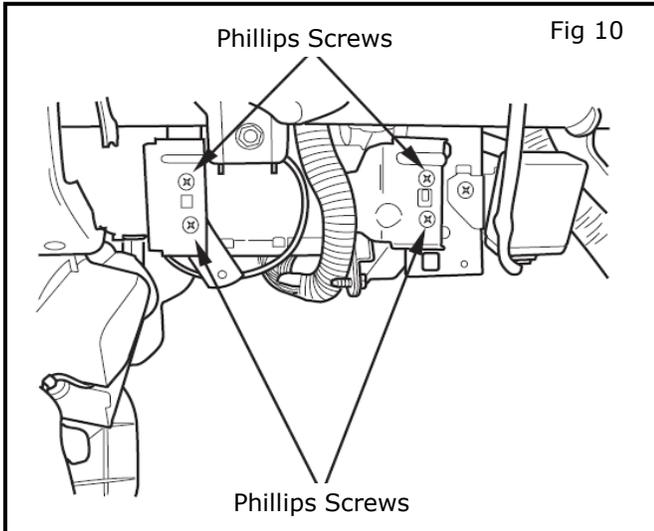


- 10) Remove the BCM from the dash assembly
 - a) Remove the (4) phillips screws securing the BCM bracket to the dash assembly. Fig 10
 - b) Rotate BCM so wiring connectors are visible

NOTE:
BCM located behind Glove Box assembly visible.


⚠ CAUTION

- Color(s) given in illustration(s) are for reference only. Use location(s) where color deviates
- If a vehicle wire is being used by another accessory and a posi-Tap is present, tap the accessory wire **NOT** the vehicle wire.

- 11) Tap the **Red** wire of the Kick Plate Harness to the **Dark Green** wire, located in cavity 57 Of the M67 connector at the BCM. Fig 11
 - a) See steps 12-16 for Posi-Tap installation instructions.

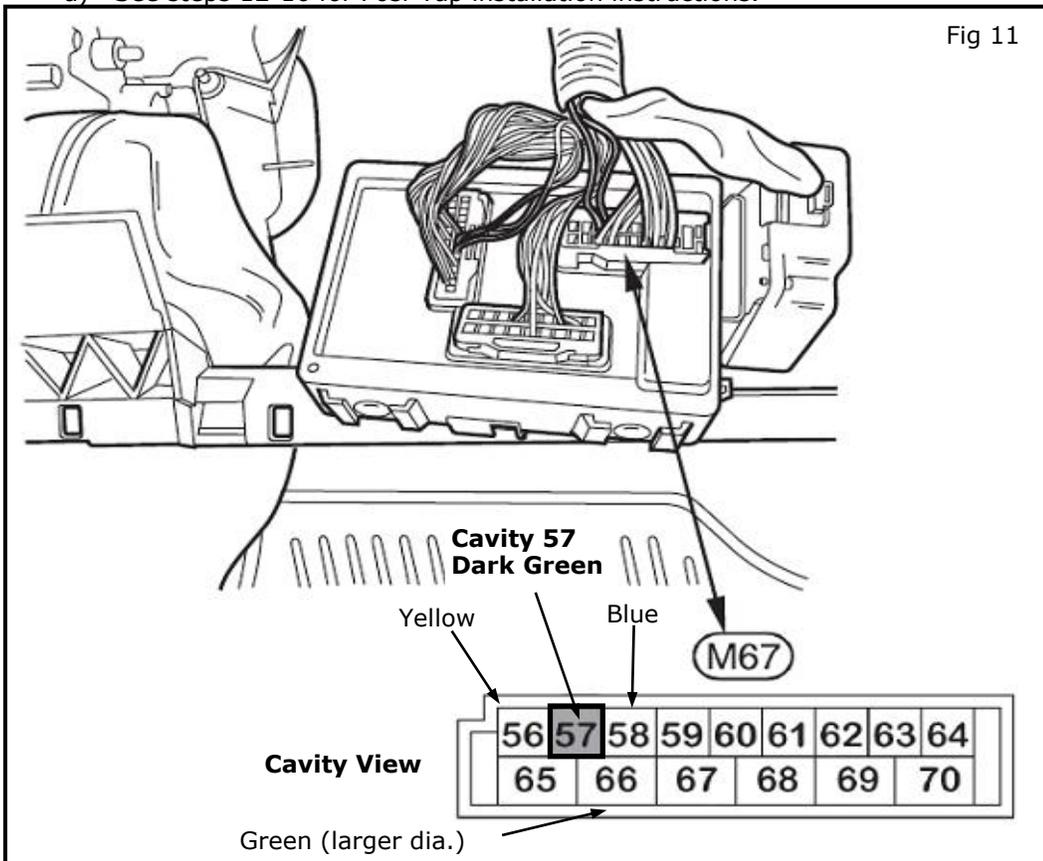


INTERIOR PROCEDURE: (continue)

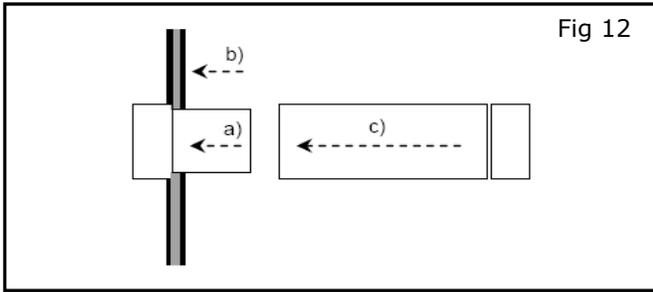

- 12) Tap Vehicle Wire. Fig 12
- a) Remove cap (slot side) from tap body.
 - b) Slide cap around vehicle wire.
 - c) Tighten the tap TIGHT with finger pressure.


NOTE: Do not re-use the tap for subsequent re-installation

3

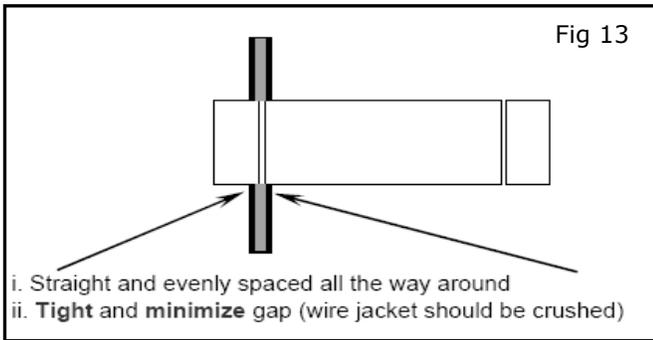


- 13) Inspect the tap to ensure correct installation. Fig 13

NOTE: Avoid putting pressure on the vehicle wire and tap for the rest of the installation

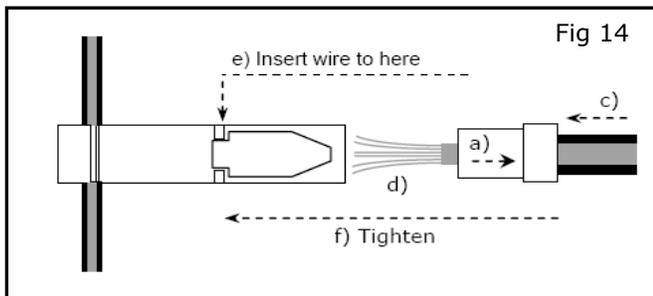

- 14) Tap accessory wire Fig 14


- a) Remove tap (non-pierce) side from tap.
- b) Remove protective stub from black wire.
- c) Insert the black wire through the non-pierce side opening.
- d) Spread individual strands into a fan shape.
- e) Insert wire into the tap body and ensure that it is all the way in.
- f) Tighten the tap TIGHT with finger pressure.

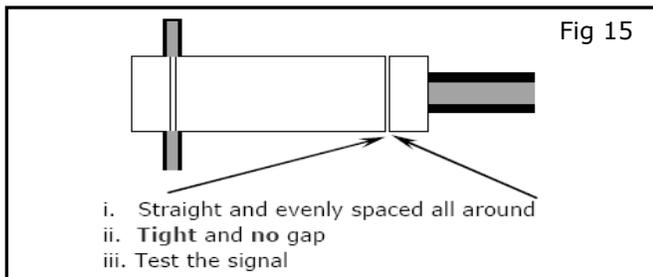

- 15) Confirm installation of the tapped wire Fig 15

- a) Inspect the tap to ensure correct installation.

NOTE: Avoid putting pressure on the vehicle wire and tap for the rest of the installation

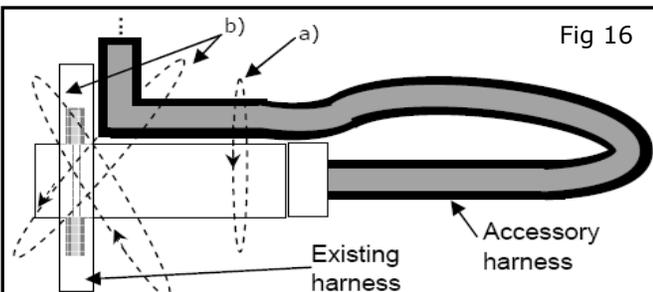


- 16) Secure the tap. Fig 16

- a) Secure the tapped wire on the non pierced side to the body of the posi-tap with electrical tape (≥ 2 revolutions).
- b) Secure the body to harness where the vehicle wire is being tapped with electrical tape (≥ 2 revolutions).

INTERIOR PROCEDURE: (continue)

17) Tap the **Yellow** wire of the Kick Plate Harness to the **Beige** wire (for 2013+ Model year vehicles and **Pink** wire for 2008-2012 Model year), located in cavity 12 of the M65 connector at the BCM. See Fig 17

a) See steps 12-16 for Posi-Tap installation instructions.

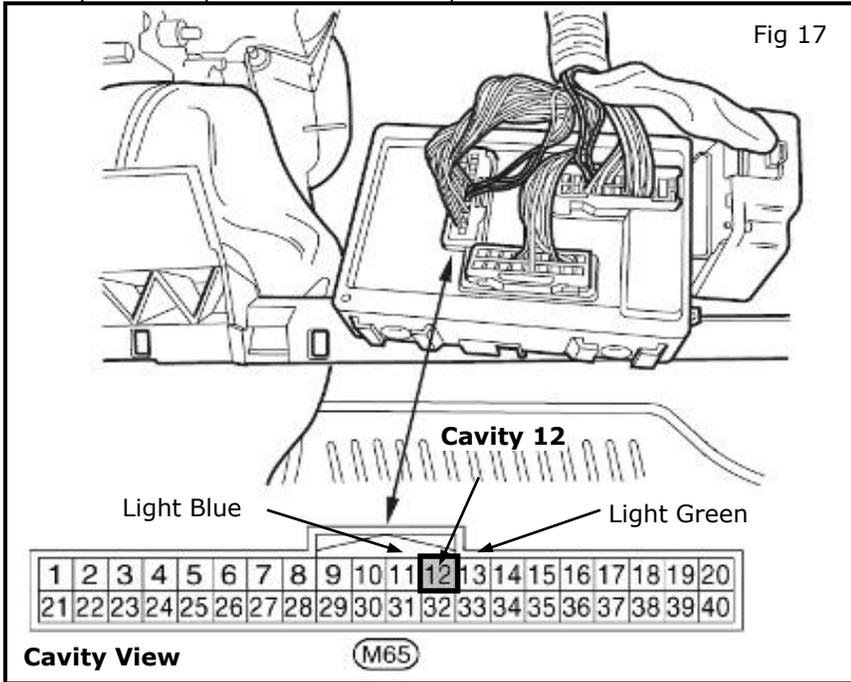


Note: For 2008-2012 Model year vehicles, the wire color in cavity 12 of the connector is Pink.


For 2013+ Model year, the wire color in cavity 12 is changed to BEIGE.

18) Tap the **Black** wire of the Kick Plate Harness to the **White** wire, located in cavity 47 of the M66 connector at the BCM. Fig 18


a) See steps 12-16 for Posi-Tap installation instructions.

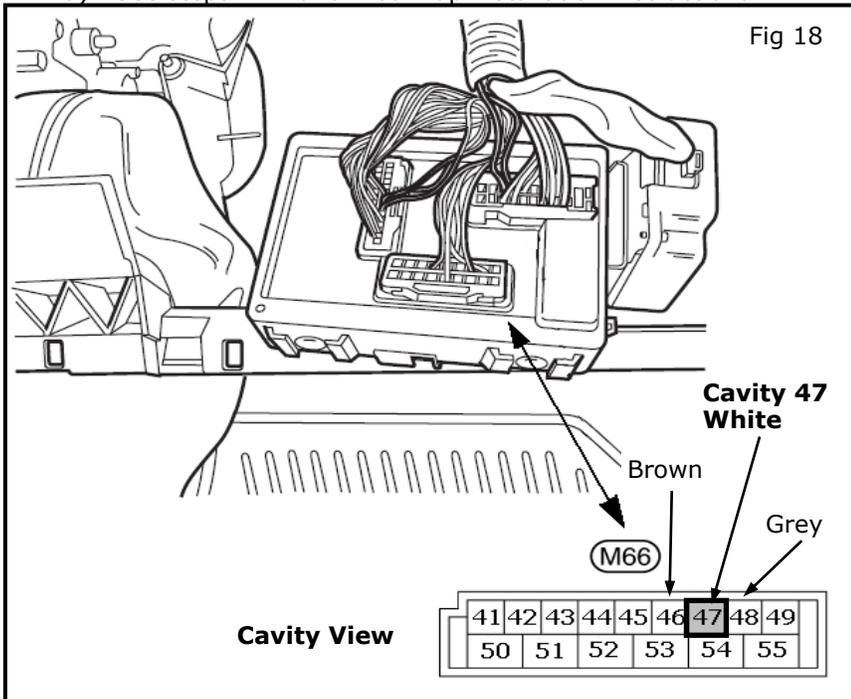

INTERIOR PROCEDURE: (continue)

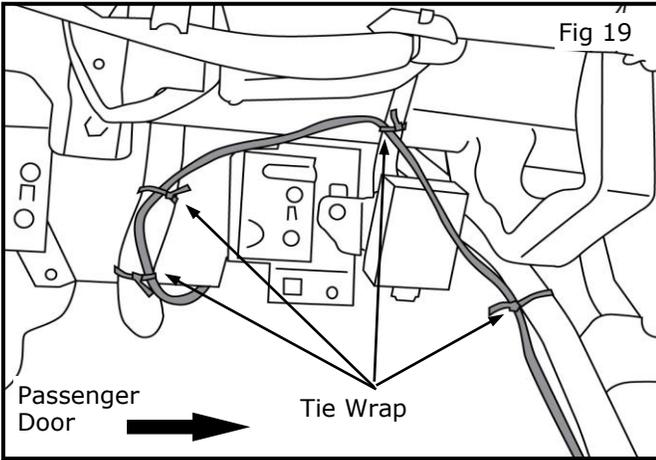

- 19) Re-Install the BCM to the dash assembly
- a) Secure Harness to BCM Cable with (4) tie wraps. Fig 19
 - b) Rotate BCM back into position.
 - c) Re-install (4) phillips screws.


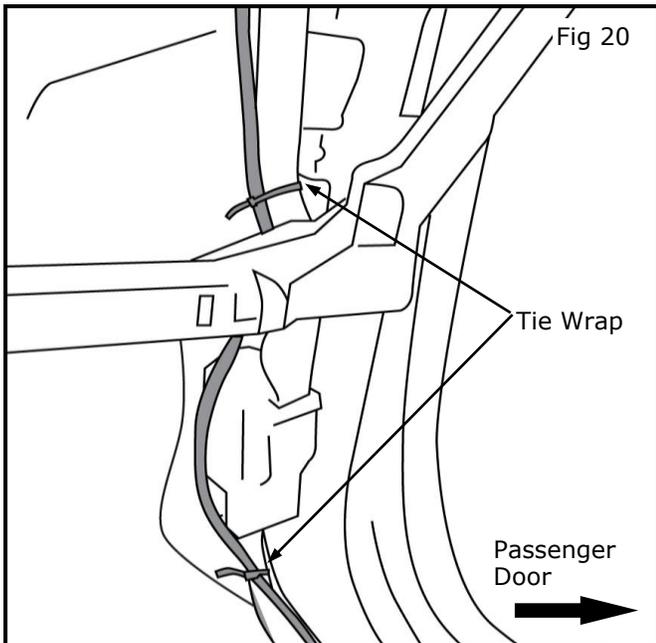


- 20) Secure Wire Harness
- a) Secure Harness with (2) tie wraps. Fig 20

INTERIOR PROCEDURE: (continue)

21) Route Wire Harness across vehicle to drivers side


- a) Wire to be positioned between hard plastic and white foam pads under carpet. Route wire over transmission hump. Figure 22, 23, 24, 25
- b) Secure Harness with (4) pieces of Foam Tape. Fig 21

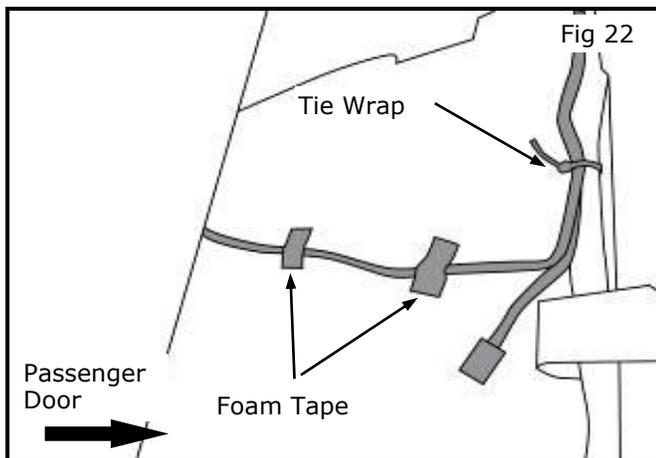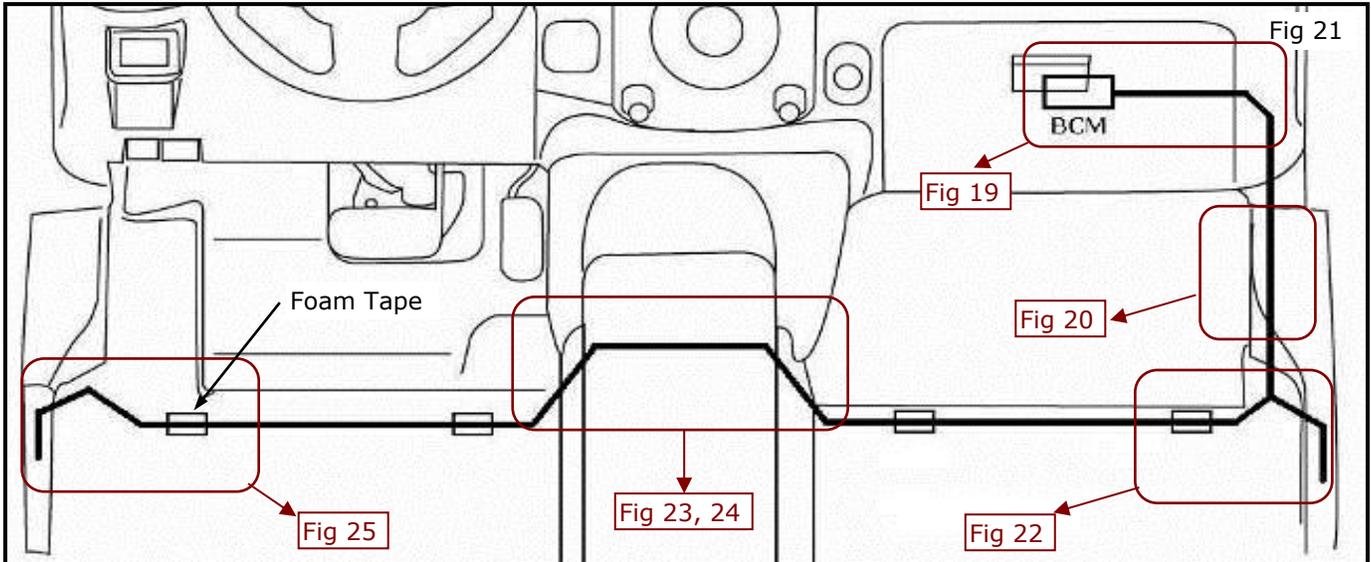

22) Secure Wire Harness (RH)

- a) Feed harness under carpet.
- b) Loosely secure Harness at connector to vehicle harness with (1) tie wrap. Fig 22
- c) Secure wire with (2) foam tapes.


NOTE:
Do not attach to drain pipe

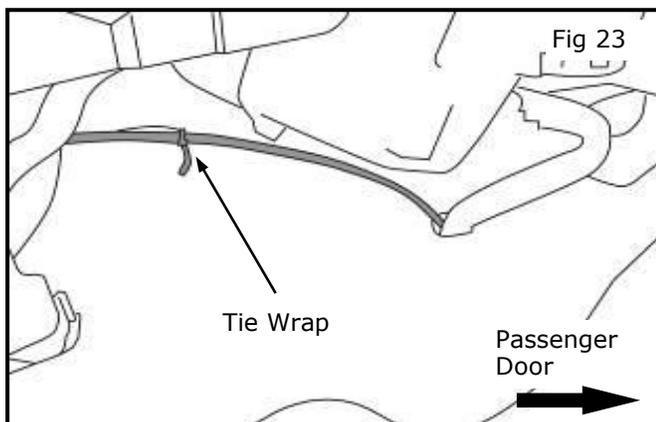

23) Secure Wire Harness


- a) Feed harness through hole in carpet.
- b) Feed harness under center stack to driver side.
- c) Secure Harness under center stack with (1) tie wrap. Fig 23

INTERIOR PROCEDURE: (continue)

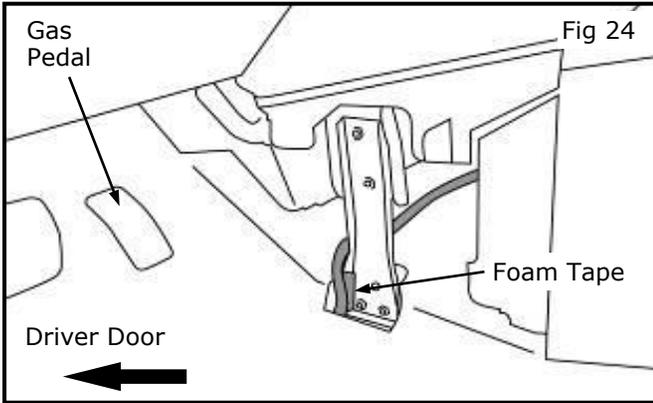

24) Secure Wire Harness

- a) Apply (1) piece of foam tape to left edge of Metal Bracket. Fig 24
- b) Route wire along left side of Metal Bracket and down under carpet.

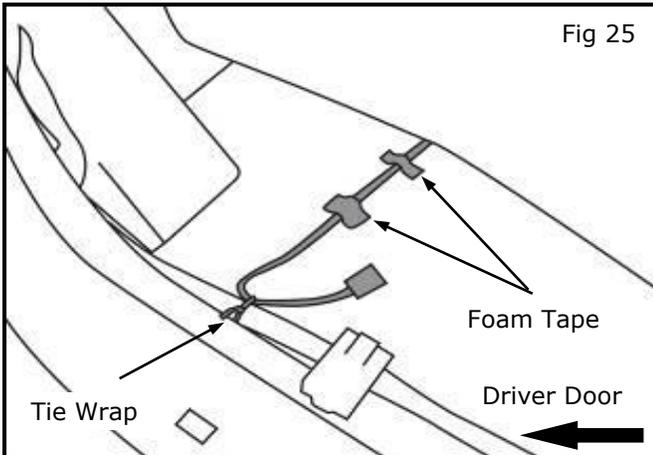


25) Secure Wire Harness (LH)


- a) Loosely secure Harness at connector to vehicle harness with (1) tie wraps. Fig 25
- b) Secure wire with (2) foam tapes.

INTERIOR PROCEDURE: (continue)

The Procedure below shows the installation for LH Side. Repeat Procedure for RH side. Front RH & LH parts are not interchangeable.

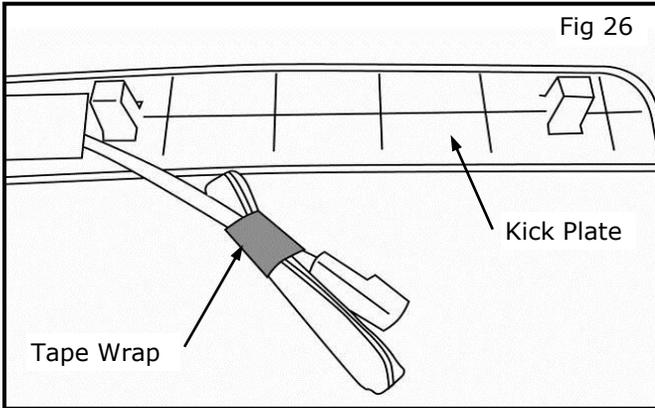


- 26) Prepare Harness Connector
- a) Remove tape wrap from harness. Fig 26

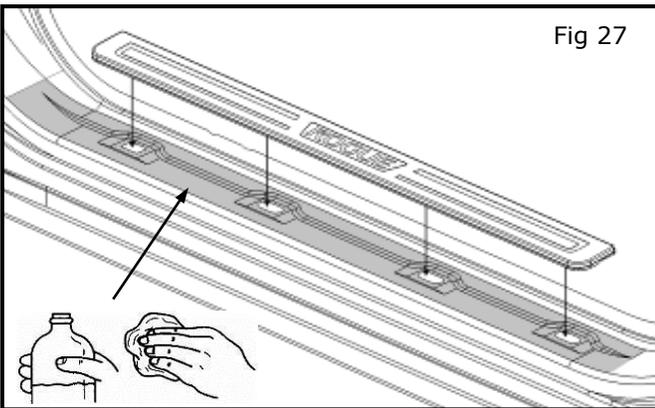

- 27) Install Front Kicking Plate Outer (LH)
- a) Clean vehicle body with alcohol and allow to dry.
 - b) Starting from the front, align clips on the kicking plate with the body holes. Fig 27.



NOTE:
Be careful not to damage clips during installation.

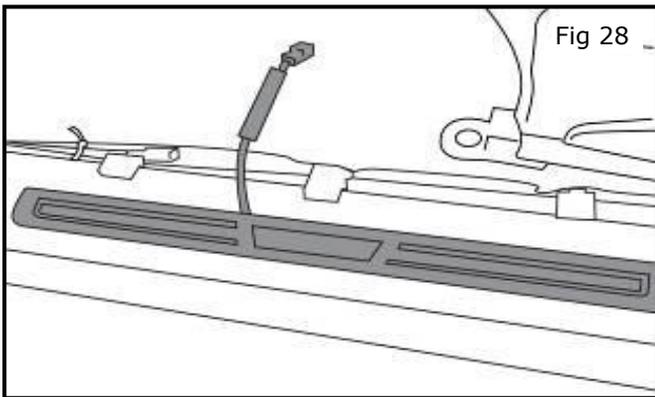

- 28) Install Front Kicking Plate Outer (LH)
- a) Place Kick Plate over holes.
 - b) Cover top of the kick plate with a cloth to prevent damage.
 - c) Press down directly above each clip to engage. Push to snap. Fig 28

NOTE: Be careful to install left kicking plate to left side of vehicle. Mis-installation can cause improper fit.

INTERIOR PROCEDURE: (continue)

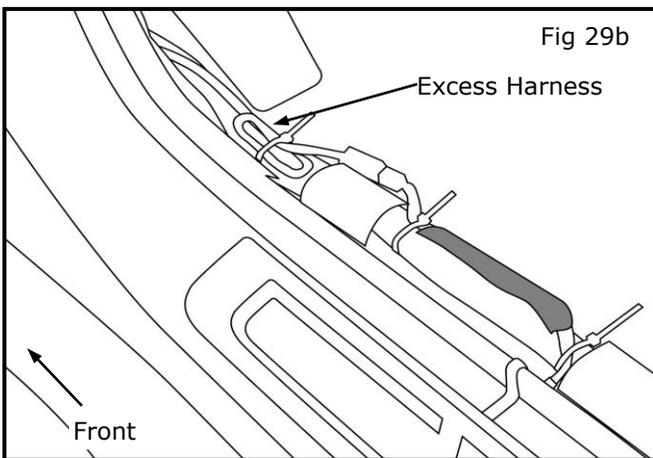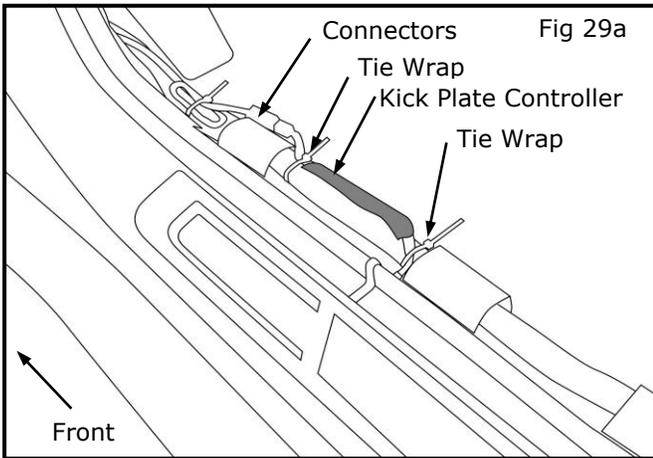


The Procedure below shows the installation for LH Side. Repeat Procedure for RH side.

- 29) Connect the Kicking Plate to the Harness
 - a) Connect the Connectors.
Fig 29a
 - b) Make sure that wiring passes over door flange and forward of the black plastic harness retainer.
Fig 29a
 - c) Secure harness with (2) tie wraps.
Maintain a 150mm-200mm gap between tie down points.
Fig 29a
 - d) If you have excess harness, loop the extra length to the vehicle harness with (1) tie wrap. Fig 29b
 - e) Tighten all tie wraps.
 - f) Cut excess tie wrap.


INTERIOR PROCEDURE: (continue)

The Procedure below shows the installation for LH Side. Repeat Procedure for RH side. Front RH & LH parts are not interchangeable.

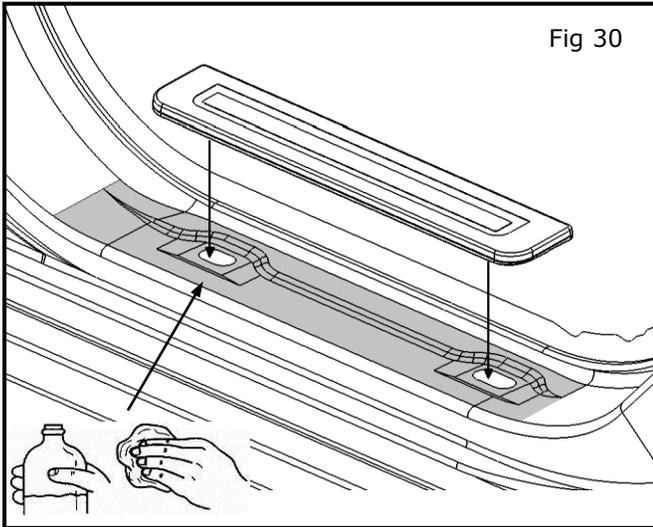

- 30) Install Rear Kicking Plate Outer (LH)
- a) Clean vehicle body with alcohol and allow to dry.
 - b) Starting from the front, align clips on the kicking plate with the body holes.
- Fig 30

NOTE:
Be careful not to damage clips during installation.

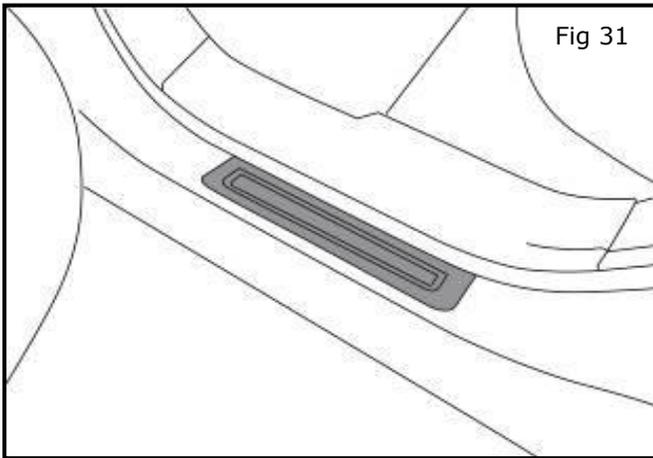

- 31) Install Rear Kicking Plate Outer (LH)
- a) Place Kick Plate over holes.
 - b) Cover top of the kick plate with a cloth to prevent damage.
 - c) Press down directly above each clip to engage. Push to snap.
- Fig 31

NOTE: Be careful to install left kicking plate to left side of vehicle. Mis-installation can cause improper fit.

CHECK BEFORE PART REINSTALLATION

- 1) Please check that the installation has no problem.
 - a) confirm connection of connectors.
 - b) confirm wire harness attachment to the vehicle.
 - c) confirm that there are no loose parts that would cause rattle.

FUNCTION CHECK

- 1) Re-connect battery negative terminal.
- 2) Confirm "ROGUE" text is illuminated with either Front door in the opened position.

REINSTALLATION OF REMOVED PARTS

- 1) All removed vehicle parts have been reinstalled.
- 2) Clean interior of vehicle.
- 3) Verify all (4) kick plates are properly installed with no gaps to body.

CAUTION

- Use caution when re-installing interior components to avoid damage, scratch, or breaking of mounting clips.

VEHICLE CHECK

- 1) Remove all tools from the vehicle.
- 2) Inspect re-installed interior trim parts for proper panel fit.
- 3) Turn ignition to ON position.
- 4) Reset radio presets to the recorded setting.
- 5) Confirm proper radio operation.
- 6) Initialize sun roof, and power window operation.
- 7) Turn ignition to OFF position.
- 8) **Check and clear trouble codes.**

CAUTION

- During restoring, please use caution as not to cause the stacking of the vehicle harness, or damage any parts.