



GENUINE PARTS

INSTALLATION INSTRUCTIONS

1. DESCRIPTION: Hood Deflector


2. APPLICATION: Nissan Murano

3. PART NUMBER: 999D5 CU000

4. KIT CONTENTS:

Item No.	Qty	Description
A	1	Hood Deflector
B	4	Self-tapping screws
C	4	Washers
D	4	Screw plugs

B(4)

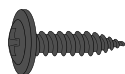

Self-tapping screw

C(4)



Washer

D(4)



Screw plug

5. TOOLS REQUIRED:


- #2 Phillips Screwdriver
- Clean Rag

6. PRE-INSTALLATION CAUTIONS / NOTES:


- Clean hood deflector with mild soap and water using a soft cloth or chamois.
- Do not over tighten screws.

INSTALLATION INSTRUCTIONS - Hood Deflector Kit


7. INSTALLATION PROCEDURE:

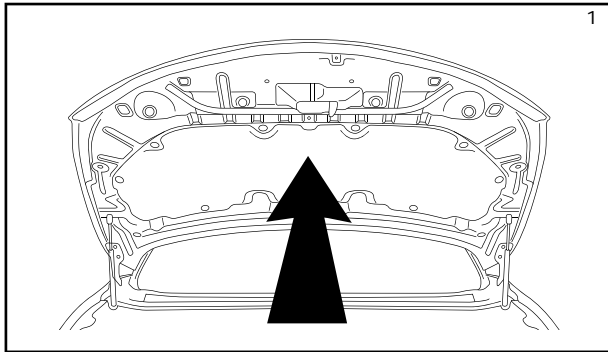


1. Thoroughly clean the front of the hood and raise the hood.

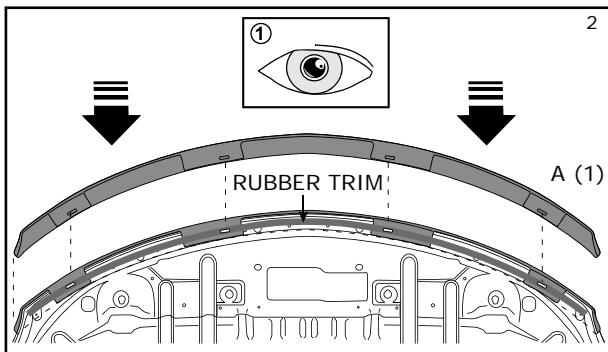

2. Trial fit the hood deflector centrally onto hood. Note the four (4) holes in the hood deflector tags corresponding to the rubber trim clips in hood. Remove hood deflector.

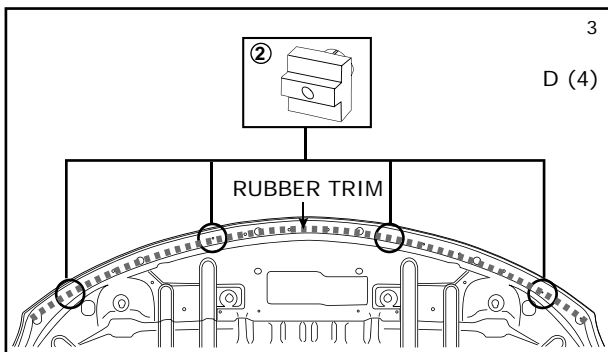


3. Remove the previously noted rubber trim clips. Install the screw plugs provided into the four (4) holes in the hood. Ensure that the boss of the screw plugs locate parallel with the front edge of the hood.

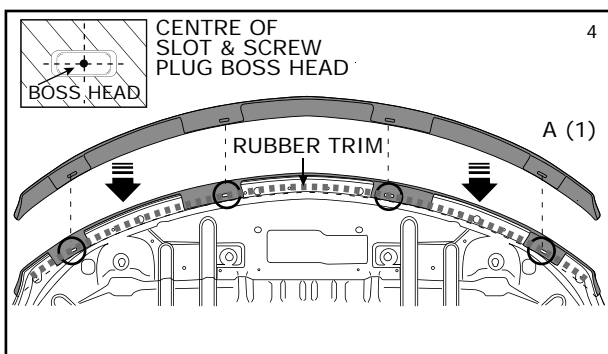

4. Refit hood deflector. Ensuring the hood deflector tags rest between the hood and rubber trim. Ensure that the boss heads of screw plugs do not rotate, by locating them correctly into the slots of the hood deflector tags.

INSTALLATION INSTRUCTIONS - Hood Deflector Kit

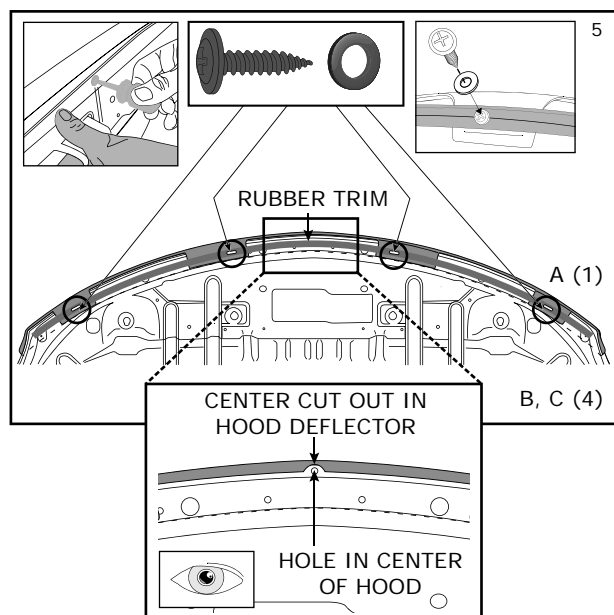

5. While maintaining thumb pressure against the underside of the hood deflector, insert the self-tapping screws, washers into rubber trim and screw plugs. Hand tighten screws. Ensure the hood deflector is centralized on hood before fully tighten screws. This can be achieved by lining up the center cut out of the part with the hole in the center of the hood.

Caution: Thumb pressure must be maintained on the hood deflector to prevent the screw plug from rotating.

DO NOT OVERTIGHTEN SCREWS.