



## GENUINE PARTS

### INSTALLATION INSTRUCTIONS


1. **DESCRIPTION:** Rear Splash Guard Kit

2. **APPLICATION:** Titan


3. **PART NUMBER:** 999J2 WY004

4. **KIT CONTENTS:**

Item	QTY	Description	Part Number
A	1	Splash Guard - Rear Right	93820 9FF0E
B	1	Splash Guard - Rear Left	93821 9FF0E
C	2	Screw	14-51 00841
D	2	Plastic Grommet	12-81 00441
E	1	Installation Instructions <a href="#">Replacement Template</a>	999V2 AW000

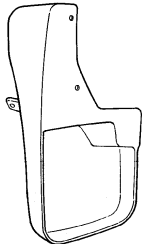

A

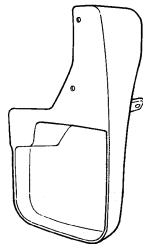

B



C



D



E

5. **TOOLS REQUIRED:**


- clean rag
- mild soap/water mixture
- #2 phillips screwdriver
- standard screwdriver

6. **PRE-INSTALLATION NOTES:**


- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

## INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit


### 7. INSTALLATION PROCEDURE:

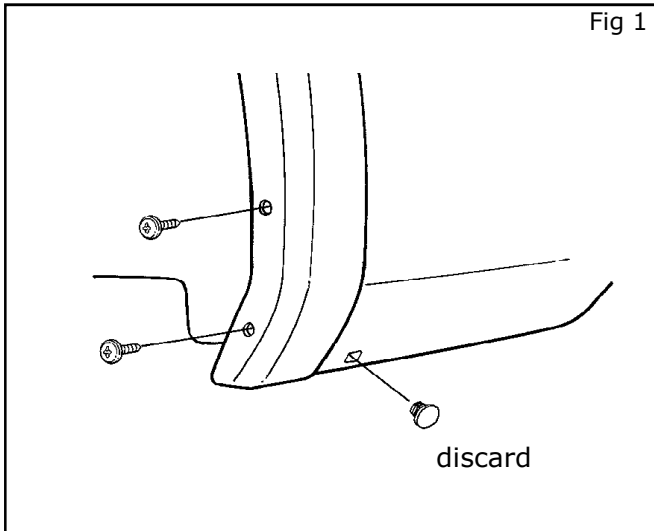

- 1) Remove existing hardware.
  - a) Remove existing screws (2 locations).  
**DO NOT DISCARD.**
  - b) Remove and discard plug.
  - c) Clean installation surface.

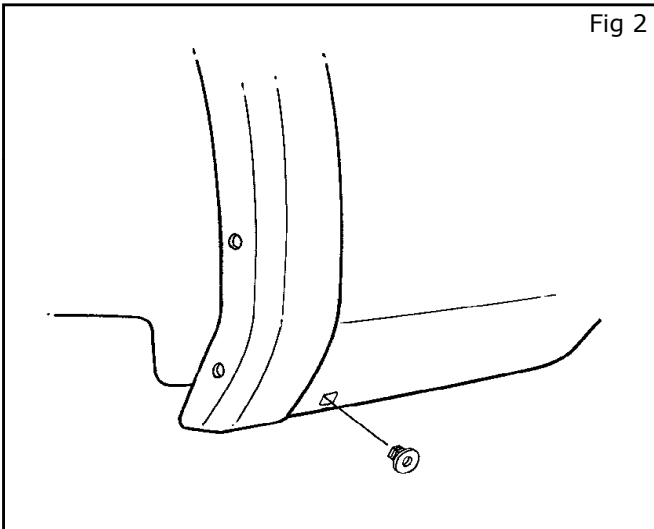


- 2) Install Grommet.
  - a) Install supplied grommet in fender hole.

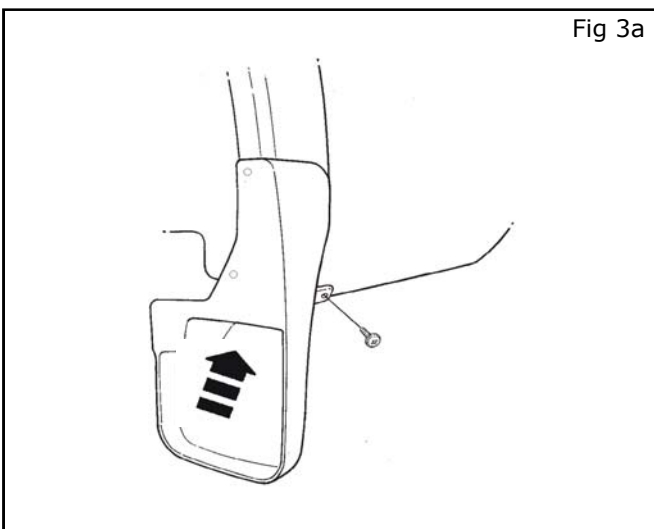

- 3) Install rear splash guard.
  - a) Align splash guard to vehicle.
  - b) Push rearward on front of splash guard.
  - c) Install supplied screw through hole in tab.

## INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit

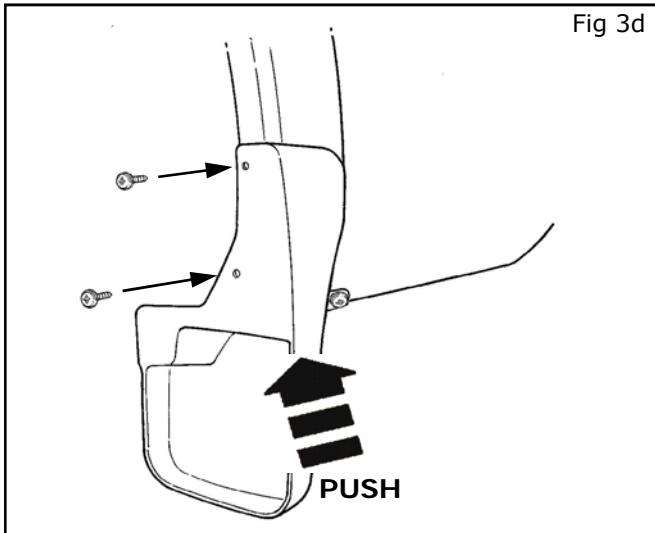

- d) Push inward and upward.
- e) Install existing screws.

**NOTE:**

**HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE TIGHTENING THE SCREWS TO ENSURE NO GAP OCCURS BETWEEN FENDER AND SPLASH GUARD.**