




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Trunk Net Hide-Away Kit
APPLICATION:	Maxima
PART NUMBER:	T99C1 4RA0A

KIT CONTENTS:

Item	Qty.	Part Description
A	1	Trunk Net
B	1	Installation Instruction Replacement Template

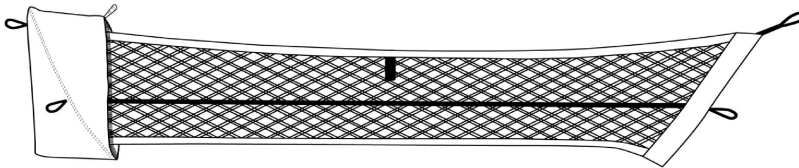**A****B****TOOLS REQUIRED:**


- No tools required

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Ensure that net is securely attached so cargo does not fall out during transit.
- Keep this installation instruction sheet with Vehicle Owner's Manual for future reference.
- Max load not to exceed 30 lbs.


INSTALLATION PROCEDURE:

NOTE: Driver side shown. Repeat for passenger side.

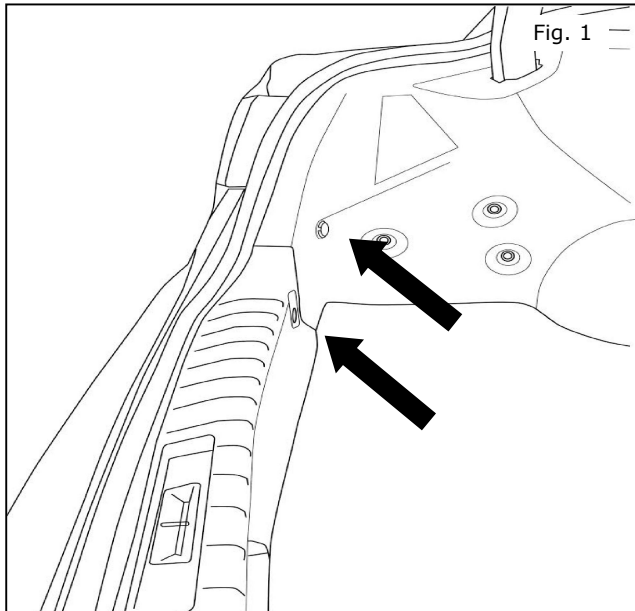


- 1) Locate attachment points in vehicle trunk.

INSTALLATION PROCEDURE:

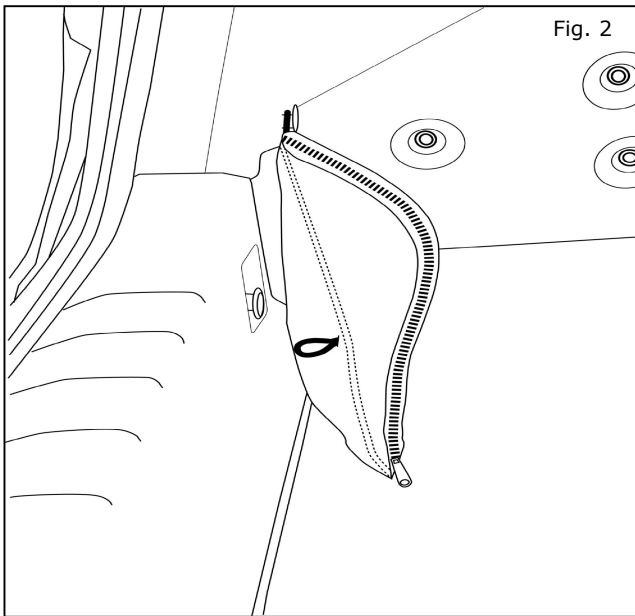

- 2) Attach pouch to drivers side anchors, un-zip pouch and un-roll net to attach to passengers side of vehicle.

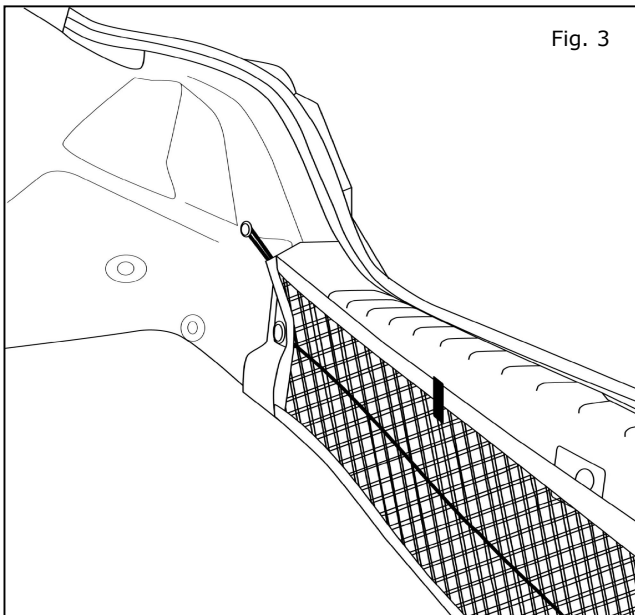

- 3) Locate upper bungee loop and attach to upper passenger side anchor. Repeat for lower attachment point.
- 4) To store cargo net in pouch, leave driver side loops attached and simply detach upper and lower passenger net loops. Fold cargo net into hide-away pouch and zip closed.