


GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Trunk Sub floor Organizer
APPLICATION:	Maxima
PART NUMBER:	999C2 MV000

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
Α	1	Sub floor Organizer	999C2 MV001
В	1	First Aid Kit	999M1 VQ000
С	1	Emergency Road Kit	999M1 ST000
D	1	Sticker for Trunk	
Е	1	Tire Tie Down Bolt	
F	2	Felt Tape	
G	1	Washer	
Н	1	Installation Instruction Replacement Template	999V2 AW000

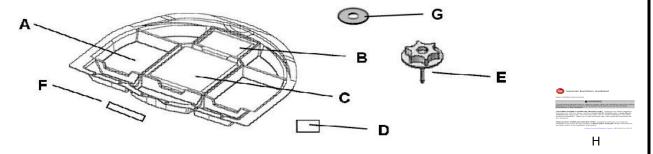

TOOLS REQUIRED:

None

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer Installation Recommended. Instructions may refer to Service Manual.
- To maintain the luster of your organizer, clean with a cloth as required using standard automotive vinyl, leather and upholstry cleaners or soap and water.


A WARNING

- Your cargo organizer is designed to transport normal cargo contents.
- Flammable or dangerous materials should not be transported in your vehicle at any time.
- If any corrosive chemicals are spilled in your organizer it should be cleaned as described above.


A CAUTION

• Organizer does not provide load restraint.


INSTALLATION PROCEDURE:

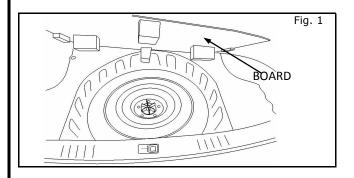


- 1) Move items in trunk to install organizer.
 - a) Lift trunk carpet.
 - b) Remove and discard board with foam spacers that cover spare tire.

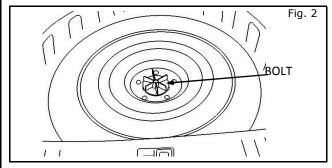


- 2) Remove and discard vehicle tire tie down bolt.
- 3) Remove spare tire from well (not shown).

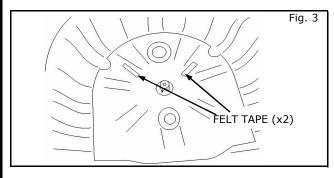

4) Remove felt backing and attach felt tape (item F) as shown to sub floor.

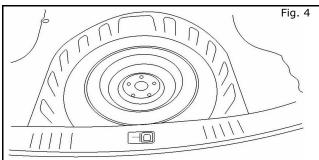


- 5) Flip spare tire over from original orientation and place it back in well.
- 6) Install washer (item G) and new tie down bolt (item E) provided and ensure tire has been secured.

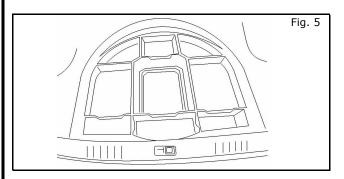


7) Place organizer (item A) in tire well.

INSTALLATION PROCEDURE:

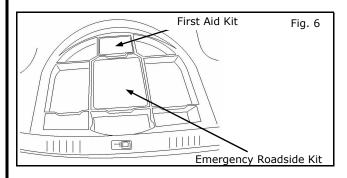


8) Place first aid kit (item B) in forward pocket and emergency kit (item C) in center pocket.

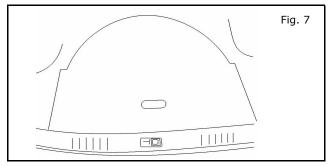

9) Place new board (84960 9DF1A) over spare tire.

10) Place carpet in original position in trunk.

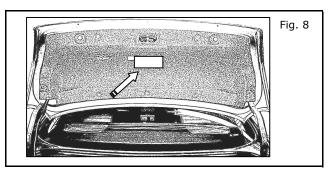

11) Place label item D on underside of trunk lid.