


GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Bluetooth Hands-Free (JCI BlueConnect)				
APPLICATION:	Rogue without Moon-roof (2012)				
PART NUMBER:	BlueConnect Kit (999Q3 GY001)				
KIT CONTENTS.		Corvine Dort Number			


KIT CONTENTS:			Service Part Number				
Item	Qty.	Part Description	999Q3 MX000	S 1	S2	S3	S4
Α	1	User Interface Assembly		Χ			
Α	1	User Interface Board (UIB)		Χ			
В	1	Standoff Bezel (Cover)		Χ			
С	1	Retainer		Χ			
D	1	Hands-Free Module Assembly (HFM)	999Q3 MZ000		Χ		
Е	1	Harness Kit	999Q3 MX000			Χ	
Е	1	Wire Harness				Χ	
F	5	Cable Ties				Χ	
G	2	Posi-Tap				Χ	
Н	2	Closure Screws (#8x1")		Χ		Χ	
I	4	 Retainer Screws (#6x1/2") 		Χ		Χ	
J	1	 Foam Tape Strip (4 Pieces) 				Χ	
K	2	 Round Spacer (#8 7/16"L, 1/4"O.D.) 		Χ		Χ	
L	1	 Flocked Tape (1"x1-1/2") 		Χ		Χ	
М	1	Installation Template-Clear	999Q3 VX000				Χ
N	1	Routing Template					Χ
0	1	Installation Instructions Replacement Template					Χ
Р	1	Map Lamp Assembly Back Plate 26428 JK00A					
Q	2	A-Pillar Tether Clip (Black) With Tape 76988 JM02A					
R	1	A-Pillar Tether Clip (Green)	76988 3DN0A				

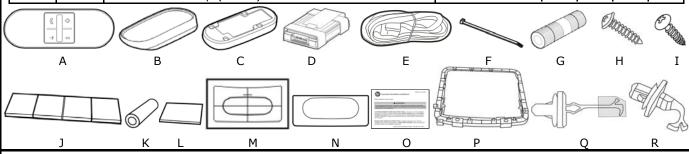

TOOLS REQUIRED:

- Plastic trim tool
- Hand drill
- Phillips #2 screw driver
- Torque Screwdriver (0-25 in-lbs)
- Side cut pliers
- T-15 Torx screw driver
- Spiral cutting tool
- Compressed air with blow nozzle
- Flex cable (optional)
- SABRECUT Zip® Bit (1/8"metal and plate)
- 1" Hole saw bit
- Safety glasses
- Rectangular Clip Removal Tool
- 3mm (1/8") drill bit

- 6mm (1/4") drill bit
- Screw Removal & Reinstallation Fixture Nissan Part# J-51033:

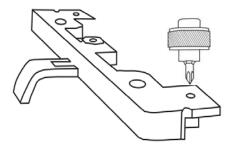

NOTE: This tool must be used in order to properly install BlueConnect.

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:


• Dealer Installation Recommended. Instructions may refer to Service Manual.

A CAUTION


- For Installation/Technical Support Contact AutoIntelligence at 1-888-454-4440.
- For Model Year 2012, two black tether clips must be installed in A-Pillar trim. Discard green clip.
- This accessory will eliminate the use of the sunglass holder.
- Check the customer's cell phone make, model and carrier to make sure it is compatible with BlueConnect before starting the installation (www.jciblueconnect.com).

INSTALLATION OVERVIEW:

System Block Diagram

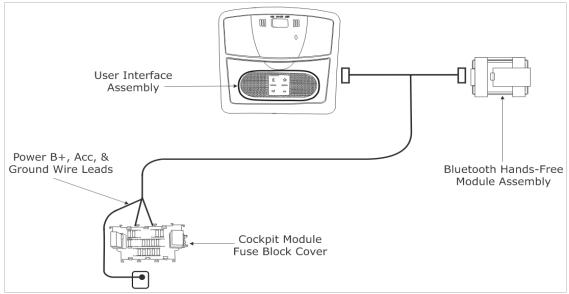


Vehicle outline with installation overview

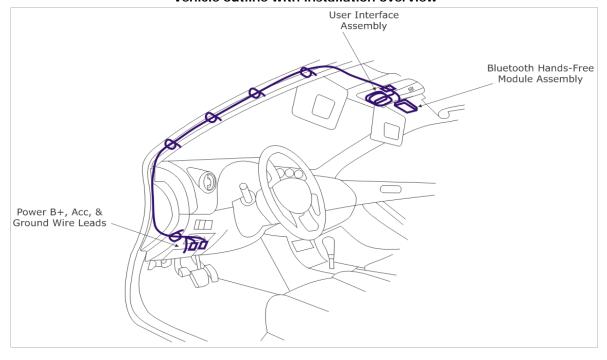

INSTALLATION PROCEDURE:

- 1) Apply parking brake.
- 2) Confirm the vehicle is no longer in the default shipping state (Extended Storage Switch Pulled Up and BCM in Transit Mode). Failure to confirm the vehicle has been removed from this state will result in the loss of normal vehicle operation. The confirmation requires two checks:
 - 2a) Locate the Extended Storage Switch in the cabin fuse block. Once located, check that it is in the "Customer" position. See below for reference.










2b) Turn the ignition switch from "OFF" to "ON" position. If turn indicators illuminate for approx. 1 minute, the vehicle is in shipping mode. To exit shipping mode, return the ignition switch to "OFF" position. Simultaneously push the wiper and turn signal stalks downward and hold for 2 seconds.




Note: Typical vehicle condition shown above. Switch is easily identifiable by the permanent, push-pull fuse holder. Actual position on the fuse block may vary, vehicle to vehicle.

- 3) Turn ignition switch to "ON" position.
- 4) Record the customer radio presets and other presets as required.

Preset	1	2	3	4	5	6	


- 5) Put shift lever in "P" position for A/T and CVT or "1st" for M/T.
- 6) Turn ignition switch to "**OFF**" position.

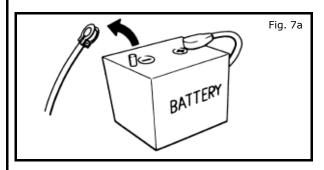


- 7) Prepare for installation / disassembly.
 - a) Disconnect the negative battery terminal.

A CAUTION


- Take care not to scratch or damage any component during the removal or reinstallation process.
- Trim pieces found to have witness marks or broken clips are not to be reinstalled.

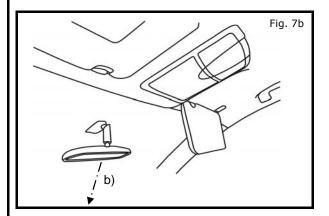

b) Tilt rear view mirror down toward windshield.

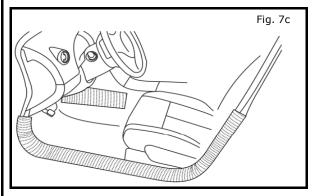


 Protect the left kick panel, left sill plate, left lower Bpillar and center console as shown in illustration.

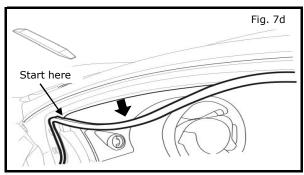


Note: Use caution not to tear, scratch or deform welt.

d) Pull driver's front body side welt loose from A-pillar between top of door opening and dash level.


- Black Clip Clip A Slide clip tower
- e) Remove driver's side A-pillar trim, by prying away from body. Snip A-Pillar Tether Clips from trim cover. Remove clip from body and A-Pillar trim cover. Use two black tether clips for 2012 Model Year and discard the green clip.

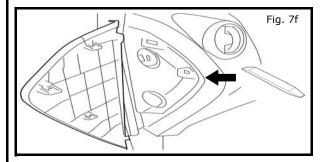


f) Remove dash side cover.

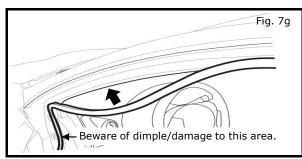


g) Reinstall driver's front body side welt on A-pillar to prevent dimple/damage.

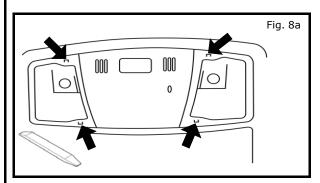

- 8) Map Lamp Assembly Removal
 - Remove the front map lamp assembly lens covers.
 Depress all (4) white clips to lower lamp unit out of assembly.

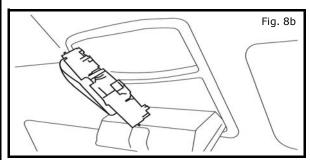

b) Carefully support lamp/switch assembly.

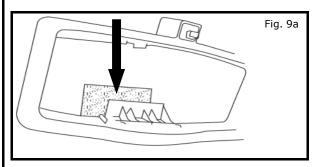


- 9) Bracket and Back Plate Removal.
 - a) Release roof mount bracket (Plastic Fastener) from roof panel.


Note:

To release roof mount bracket, pull down firmly (using bracket). CAUTION: Pulling too hard could cause roof panel to cave in. If replacement is necessary use:


Part# 26439 JM00A for Bracket Map Lamp.

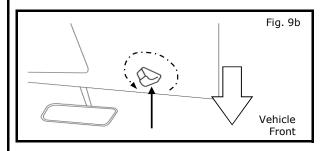

b) Turn anchor 90 degrees counter clockwise and pull down to remove. Repeat this process on the passenger side.

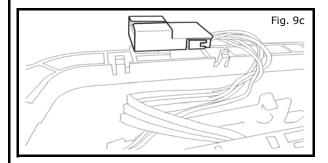


c) Using a small flat head screw driver, disconnect map lamp harness from connector on back plate assembly. This must be done while both are in the headliner of the vehicle. Harness will be reconnected to new back plate in step 19b.

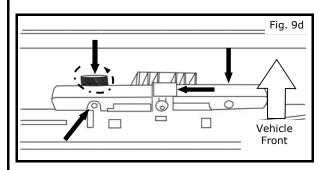

Note: Position yourself in the vehicle passenger side floor board facing the back of the vehicle for this step.


d) Position Removal & Reinstallation fixture by aligning the left side as shown in Fig. 9d. Roll the fixture up over the top of the roof bracket pressing down until firmly locked in place. Push locator slide into place. Uninstall roof mount bracket by loosening screws on left and right side. Remove fixture & bracket from vehicle by rotating toward the front of the vehicle and down. Retain bracket, leaving connected to the fixture, for reassembly.

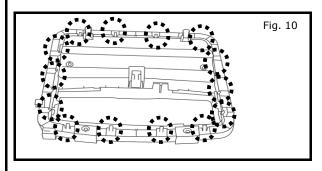



10) While in headliner relieve all tabs on the back plate, disengage from Map Lamp Assembly, and remove assembly from headliner. Discard old back plate and replace with new part provided in kit. To remove Back Plate, tilt diagonally and pull through the Map Lamp Assembly opening.


A CAUTION

- Do not attempt to process or disassemble front map lamp assembly in vehicle.
- Work area should be clean, scratch proof, and free of debris to avoid damage of any component.
- · Safety glasses must be worn during front map lamp assembly processing operations.

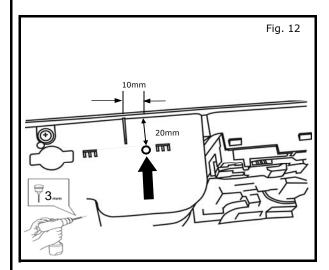

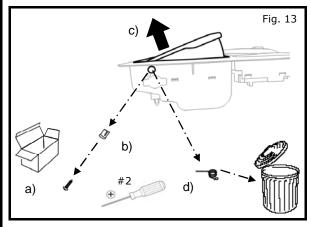

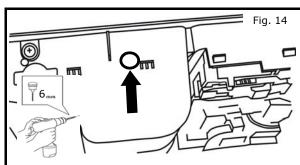

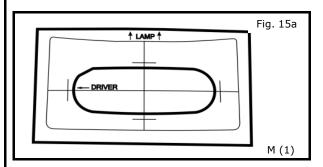

- 11) Take map lamp assembly to work area to process.
- 12) Drill pilot hole for door closure screws on sides of front map lamp assembly.
 - a) Mark location of pilot hole for closure screw.
 - b) Repeat on other side.
 - Drill through front map lamp assembly and bin door making two (2) pilot holes with 3mm (1/8") drill bit.

NOTE:


Drill must penetrate both walls.

- d) Repeat on other side.
- 13) Remove sunglass bin door from front map lamp assembly.
 - a) Remove two (2) screws. Retain for reassembly.
 - b) Remove pivot bushing. Retain for reassembly.
 - c) Tilt sunglass bin door up and remove. Set aside.
 - d) Remove and discard pivot spring.


NOTE:

Work area should be clean, scratch proof, and free of debris to avoid damage of any component.


- 14) Enlarge hole for round spacer on sides of front map lamp assembly.
 - a) Drill pilot hole made in step 12 with 6mm (1/4") drill bit to enlarge.
 - b) Repeat on other side.
- 15) Cut opening in sunglass bin door.
 - a) Align and apply clear template (M) to sunglass bin door.

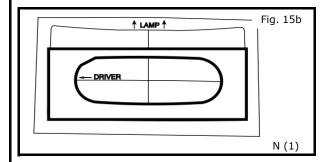


b) Align and apply metal template (N) on top of clear template.

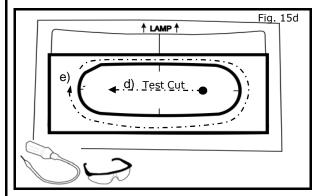


- c) Turn on rotary cutter. Recommended RPM range 15,000 to 20,000.
- Test cut in center of sunglass bin door. Check for proper cut feed rate. To minimize bit chatter, adjust RPM accordingly.
 - Place spiral bit in center of cutout area. Apply slight downward pressure to start cut in bin door surface.
- e) Move cutter until it comes in contact with metal template opening. Then continue cutting the opening in a CLOCKWISE DIRECTION with gentle pressure.

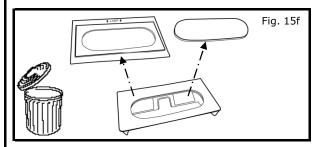

f) Discard oval section of sunglass bin door. Remove and discard both templates.

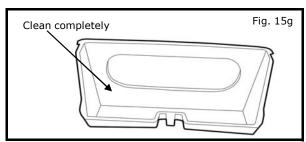


g) Clean all debris from inside sunglass bin door & front map lamp assembly with compressed air, then reinstall sunglass bin into assembly for next step.

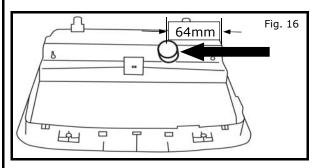


16) Measure 64mm (2 1/2"), from passenger side of map lamp assembly, on lower channel. Using a 25mm (1") Hole saw bit, cut wire routing hole in back of Map Lamp Assembly & sunglass bin door to create access for wire harness. Remove sunglass bin door from assembly to proceed with installation.

NOTE:

It is important that ALL debris has been completely removed.

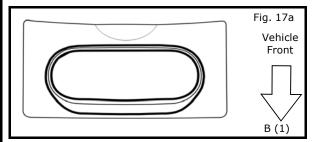


- 17) Install user interface assembly in sunglass bin door.
 - a) Place standoff bezel (B) on sunglass bin door in correct orientation, see drawing.

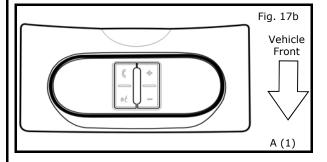


 Place user interface board (A) on standoff bezel (B) and sunglass bin door in correct orientation, see drawing.

NOTE:


Flat area on UIB should align with flat area on sunglass bin door hole.

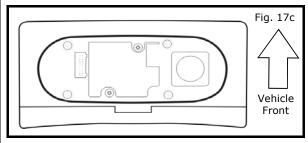

 Hold user interface board, standoff bezel, and sunglass bin door together and turn face down on clean surface.

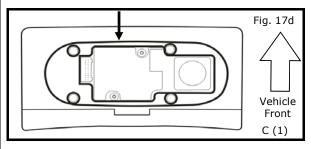


d) Place retainer (C) on back side of user interface board in correct orientation, see drawing.

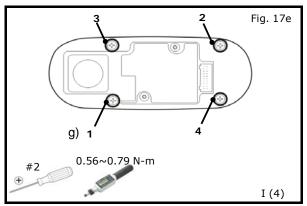


- e) Place four (4) retainer screws (I) through retainer and insert tip of each screw in the user interface board holes. Start each screw by tightening two (2) full turns with screwdriver.
- f) Check alignment of user interface board in sunglass bin door cutout. It should be centered and parallel to edge of sunglass bin door. Check for gaps and bezel alignment.
- g) Follow sequence in drawing and tighten screws to $0.56 \sim 0.79$ N-m (5 \sim 7 inch pounds) using screw torque wrench.

NOTE:


DO NOT over tighten screws.

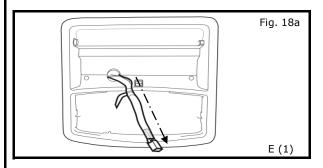


- 18) Reassemble sunglass bin door in front map lamp assembly.
 - a) Pass smaller white connector of wire harness (E) through access hole in front map lamp assembly.

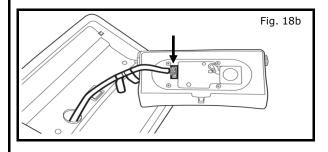

b) Plug wire harness connector into user interface assembly. Press firmly until "click" is heard.

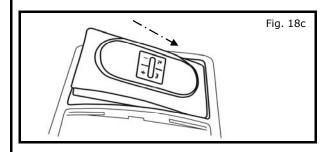


c) Place pivot post end of sunglass bin door in front map lamp assembly pivot hole.

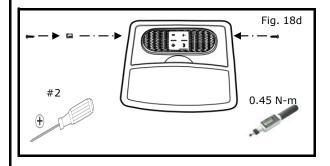


d) Align pivot bushing post with front map lamp assembly pivot hole and insert bushing. Install pivot screws and tighten to 0.45 N-m (4 inch pounds).

NOTE:

DO NOT over tighten screws.

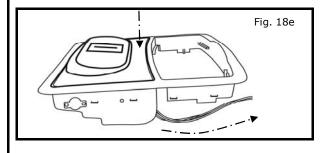


e) Close sunglass bin door taking care to route wire harness through access hole.

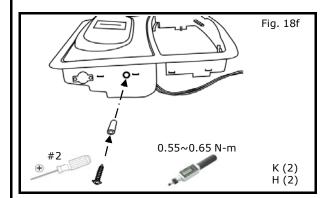


f) Insert two (2) closure screws (H) into two (2) round spacers (K) and install in drilled holes on sides of front map lamp assembly. Tighten to 0.55~0.65 N-m (4.92~5.76 inch pounds).

NOTE:


DO NOT over tighten screws.

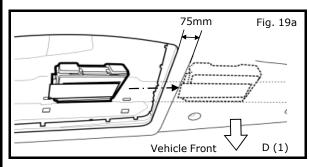


- 19) Install hands-free module assembly.
 - a) Fold adhesive backing on hands-free module assembly (D) back and hold in place. Place hands-free module assembly between the headliner and roof panel on passenger side of opening approximately 75mm (3") inward. Align with adhesive tape down toward headliner.

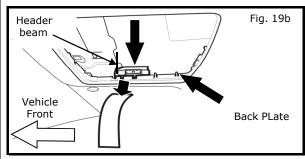


b) Position hands-free module against header beam. Pull adhesive backing to remove and press firmly into place against the headliner being careful not to crease the headliner. Place new Back Plate in headliner and attach lamp harness to back plate.

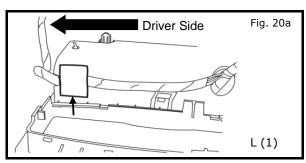


- 20) Install front map lamp assembly.
 - a) Route wire harness power/ground leads toward driver side of vehicle and apply flocked tape (L) to secure, as shown.

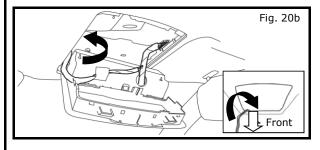

b) Route wire harness power/ground leads between headliner and roof beam above rear view mirror and let hang down.

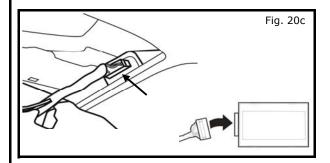


c) Support front map lamp assembly and connect wire harness large connector to hands-free module assembly.

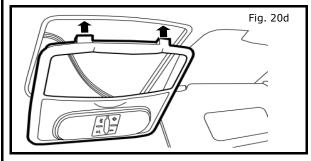


d) Insert front map lamp assembly in headliner opening taking care to route wire harness out of way. Insert two (2) alignment tabs at rear, then insert two (2) clips in roof. Snap in place.

NOTE:


Route harness out of way.

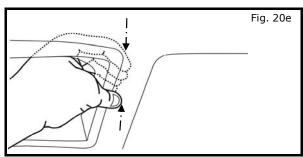


e) Support front map lamp assembly and headliner with one hand while reaching through the lamp opening. Align the back plate with the front map lamp assembly, press downward toward the assembly flange, then click tabs in place. Take care to route wire harness out of way. Repeat this step all the way around the front map lamp assembly ensuring that all tabs are fully engaged (hear click). Perform inspection to see that there is no gap, and condition is the same as prior to installation.

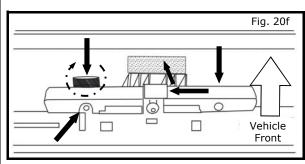

f) Using screw removal and reinstallation fixture, reinstall roof bracket onto back plate. Bracket and fixture should still be together with each screw in place. Align fixture, see Fig. 20f. Roll the fixture up over the top and press down. Push locator slide into place. Turn each screw counter clockwise to ensure proper seating on assembly, then tighten screws. Remove fixture from vehicle by rotating toward the front of the vehicle and down. Push plastic fastener on bracket assembly into roof panel.

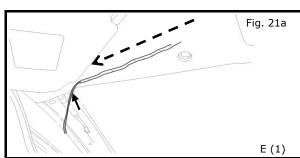


- 21) Route wire harness lead wires.
 - a) Route wire harness (E) lead wires from front map lamp assembly area behind sun visor anchor, to top of A-pillar. Tuck wires between headliner and vehicle roof beam. Avoid pinching wires near anchor by following dotted arrow.

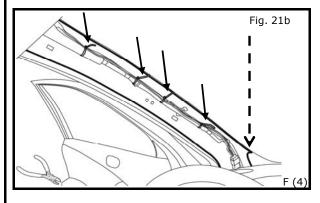



b) Route wire harness lead wires down A-pillar to the dash use forward most opening in front of round metal brace. Make sure lead wires are parallel to the vehicle harness and topside. Secure to anchor points using four cable ties (F). Trim excess on cable ties. Install new A-Pillar Tether Clip onto A-pillar trim then install into vehicle A-Pillar.

NOTE:


Secure the cable ties to plastic harness anchor points, to vehicle harness.



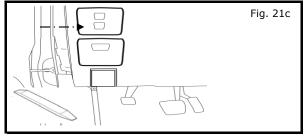


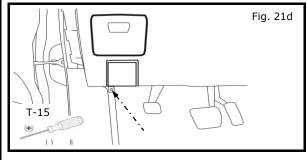

 d) Using a T-15 Torx Screwdriver remove under dash panel screw below hood release handle near footwell area. Retain for reassembly.

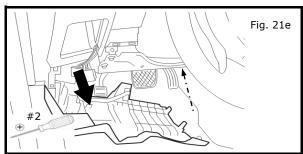


e) Remove P2 screw on lower right side of under dash panel. Pulling down, relieve six tabs and Pull down toward rear of vehicle to release. Place in floor of vehicle.

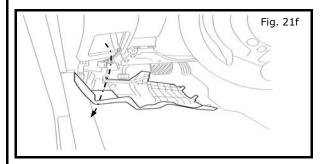


f) Route wire harness lead wires between the A-pillar and dash mounting bracket following the same path as the vehicle harness.

NOTE:

There is an opening, approximately 19mm (3/4") wide for the harness to pass through. Make sure to route wire harness through this cavity and then to the fuse block area.

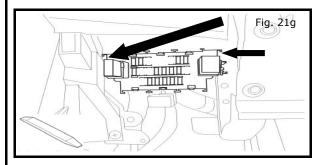

g) Using the plastic trim tool, slide fuse block forward off of metal posts. Rotate fuse block to expose tap points (wire) on back side.

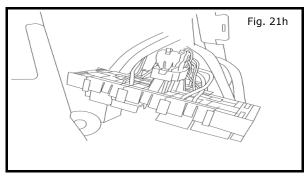

h) Rotate fuse block to expose tap points (wire) on back side. See Fig. 22a for detailed wiring information.


A CAUTION


- Color(s) given in illustration(s) are for reference only. Use location(s) where color deviates.
- If a vehicle wire is being used by another accessory and a Posi-tap is present, tap the accessory wire, not the vehicle wire.
- Do not pinch the harness between trim when re-installing vehicle trim pieces.

22)


a) Attach the yellow ACC wire to the Sky Blue (#20) wire on the back of the fuse block. Attach the red B+ wire to the Violet (#4) wire on the back of the fuse block.

See Posi-tap Installation Detail, steps 1 - 5, on page 16.

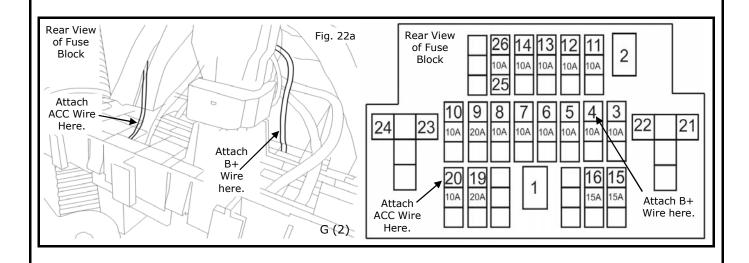


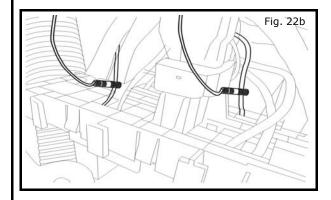

b) Before moving on to Fig. 22c., installed Posi-Taps should look like Fig. 22b.

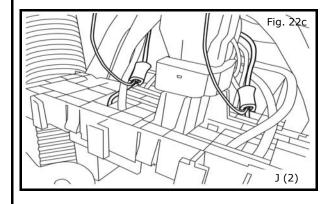


c) Apply foam pad (J) to each posi-tap. See Posi-tap Installation Detail, step 5, on page 16. Posi-taps will be on the back side of the fuse block.

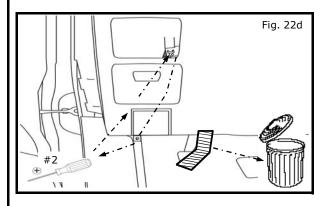

d) Remove tape from black ground wire eyelet and discard. P2 Ground screw is located above fuse block area behind electrical (Mirror Switch) panel. Route black ground wire with eyelet to screw location, insert screw in eyelet at 10 o'clock position and insert in original location.


NOTE:


DO NOT over tighten screw.

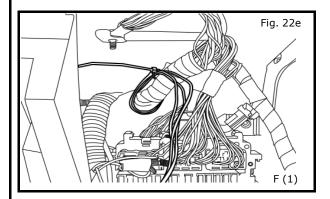



e) Attach harness to vehicle with cable tie (F).


POSI-TAP INSTALLATION DETAIL:

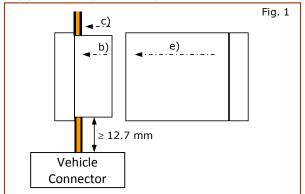

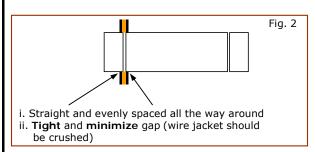

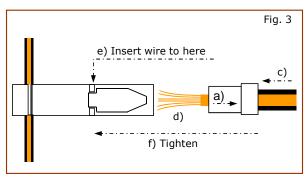

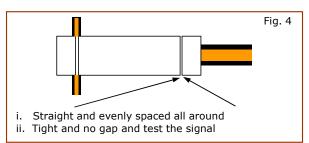

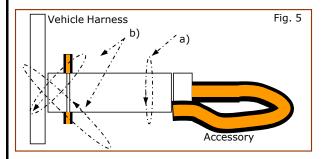

- 1) Tap vehicle wire.
 - a) Identify and confirm (test if necessary) the correct vehicle wire to be tapped.
 - b) Remove cap (slot side) from tap body.
 - c) Slide cap around single vehicle wire.
 - d) Position cap \geq 0.5" (12.7mm) away from the back of the vehicle connector.
 - e) Tighten the tap **TIGHT** with finger pressure.
 - f) Tighten by another quarter turn.

NOTE:

Figures are not to scale. Do not re-use the tap.

2) Inspect the tap to ensure correct installation.

NOTE:

Avoid putting pressure on the vehicle wire and tap for the remainder of the installation.

- 3) Tap accessory wire.
 - a) Remove tap (non-pierce) side from tap.
 - b) Remove the protective stub from the wire.
 - c) Insert wire through the non-pierce side opening.
 - d) Spread the individual strands into fan shape.
 - e) Insert wire into the tap body and ensure that it is all the way in.
 - f) Tighten the tap **TIGHT** with finger pressure.
 - g) Tighten by another quarter turn.
- 4) Confirm the tapped accessory wire.
 - a) Pull on the wire lightly to ensure connection.
 - b) Inspect the tap to ensure correct installation.
 - Test the signal to ensure that it is working properly.
- 5) Secure the tap.
 - a) Secure the tapped wire on the non-pierce side to the body of the tap with electrical tape (≥ 2 revolutions).
 - b) Secure the body to harness where vehicle wire is being tapped with electrical tape (≥ 2 revolutions).


Posi-TapTM is protected by patent # 5,228,875 5,695,369 5,868,589 6,692,313 Jap 2881414 Aus 708700 Tia 103534 Can 2204826 Mex 200626 Korea 477279 China Z197105562.9 & others pending.

For Installation/Technical Support Contact AutoIntelligence at 1-888-454-4440.					
ACCESSORY CHECK:					
	Connect the battery negative terminal and tighten the nut to 5.4 N-m (47.8 lb-in) Check all Critical Installation Steps. Check all torque values. Retainer screws (I) tighten to 0.68 N-m (6 lb-in) average. (see step 17g, page 9) Allowable range for torque is 0.56~0.79 N-m (5~7 lb-in). Pivot screws tighten to 0.45 N-m (4 lb-in). (see step 18d, page 10) Closure screws (H) tighten to 0.60 N-m (5.3 lb-in). (see step 18f, page 11) Allowable range for torque is 0.55~0.65 N-m (4.92~5.76 lb-in). Battery negative cable tightens to 5.4 N-m (47.8 lb-in) average. (see step 7a, page 3) Verify all wiring is secure and not exposed. Check Posi-Tap by pulling lightly on wires to confirm that tap point is secure and visually confirm that single wire is tapped. Verify the correct wire is tapped. Trim all excess cable ties flush. Turn ignition switch to "ACC" position. Confirm accessory main features and functions. See diagnostic flow chart on the next page for troubleshooting. Confirm accessory voice prompt current language is set to English. See diagnostic flow chart function check on the next page.				
	on the next page.				
RE-I	NSTALLATION OF REMOVED PARTS:				
	Re-install two black A-Pillar tether clips for 2012 Model Year. (see Fig. 7e, on page 4) Re-install left visor anchor first to properly position headliner. Re-install flat wire harness, connecting it to the back plate of the map lamp assembly, following original routing. (see step 8b, page 6) Re-install all removed vehicle parts. Refer to the vehicle service manual for more details.				
	A CAUTION				
mo	e caution when re-installing interior components to avoid damage, scratches, or breaking of bunting clips. Refer to the vehicle service manual for more information. ALINSPECTION:				
	Verify no rattles exist by tapping on the Headliner, A-Pillar, and Map Lamp. Verify re-installed trim parts for proper flush fit (no gap, no waviness, etc.). Verify all clips are fully engaged and locked. Verify re-installed trim parts are free from cracks, scratches or stress marks. Verify vehicle headliner, seat, steering wheel, center console, floor carpets, etc. are not soiled. Verify interior and exterior is not damaged. Turn ignition switch to "ON" and confirm proper operation of Vehicle Systems If equipped, verify all window and sunroof one touch operation and perform the reset procedure if necessary. Refer to the vehicle service manual for more details. Confirm proper audio function (AM, FM, SAT, CD and AUX). Re-program radio presets and other vehicle settings to the recorded settings. No need to do this step if the extended storage switch is placed in the "inventory" position. Start engine and verify that there are no new Diagnostic Trouble Codes. Turn ignition switch to "OFF".				
	Place the Owner Manual and Quick Reference Guide in the glove box. If this vehicle will be returned to a dealer lot or showroom for an extended period of time, be sure the extended storage switch is placed in the "inventory" position. Refer to the Extended Storage Switch verbiage at the beginning of the 'INSTALLATION PROCEDURE' section.				

DIAGNOSTIC FLOW CHART:

For Installation/Technical Support Contact AutoIntelligence at 1-888-454-4440.						
	Function Check					
	Items To Be Checked	Results of the Check				
\bigcirc	BLUECONNECT POWER CHECK: Turn the ignition to ACC position. Check BlueConnect operating buttons.	The white operating buttons on the BlueConnect User Interface assembly should illuminate white. Confirm the BlueConnect works when the key is in the ACC position.				
\bigcirc	BLUECONNECT FUNCTION: Allow 15 seconds after ignition is turned to ACC position for unit to complete self check. Push the volume (+) button three times. Repeat for volume (-) button.	The blue center bar should illuminate blue each time button is pushed and volume tone should increase or decrease.				
\bigcirc	SPEAKER FUNCTION: With ignition turned to ACC position, push the phone button to activate the system.	The blue center bar should illuminate blue. "BlueConnect Ready" should be heard. Push the phone button again to cancel when done.				
\bigcirc	MICROPHONE FUNCTION: With ignition turned to ACC position, push the phone button to activate the system. Listen for voice prompt and BEEP, then say "Setup."	BlueConnect should recognize and accept voice command. "Select one of the following" should be heard. Push the phone button again to cancel when done.				
\bigcirc	CURRENT LANGUAGE: With ignition turned to ACC position, push the phone button to activate the system. Listen to language voice prompt.	BlueConnect voice prompt should be in English and "BlueConnect Ready" should be heard. If Spanish or French, listen for beep, then say "English." Listen for confirmation prompt and answer "Yes." Push the phone button again to cancel when done.				

BlueConnect® UIB (User Interface Board)

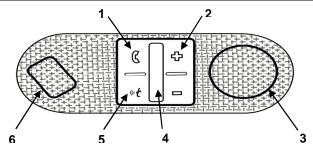

1) Phone Button or Activation / Deactivation Button

- Push to set up and program unit.
- Push to receive an incoming call.
- Push to make a call if not on a call.
- Push to end a call.
- Push to accept an incoming call when on another call.
- Push & hold the button until you hear a beep, while the BlueConnect is in standby. The "SYSTEM OFF" feature is activated.

2) Volume Up & Down Buttons

- Push (+) to increase the volume.
- Push (-) to decrease the volume.
- Push either button to the desired volume level when the unit is not activated. Audible beeps indicate the current volume level.

3) Speaker

4) Blue L.E.D. Light

 A Blue light comes on indicating that the unit is activated or when there is an incoming call.
 It also comes on when you are on a call.

5) Voice Recognition (VR) or Barge-In Button

- Push to input a command without having to listen for a prompt.
- Push and say "TRANSFER CALL". This allows you to transfer your call back to your cell phone in the event you want privacy or are exiting the vehicle. Repeat to transfer call back to BlueConnect.
- Push and say "MUTE" to mute the phone.
- Push to send the DTMF tones.
 (Dual-Tone Multi-Frequency) tones.

6) Directional Microphone

